

8.5"



SKU No. H517755 061 000
H517755 NPR 000
H517755 HG9 000
H517755 202 000

8.5FT GRAND FIR TREE



ASSEMBLY INSTRUCTIONS

Call toll free at 1-877-661-8324
Customer Service Center Hours:
Monday-Friday: 8:00AM–5:00PM CST
Holiday hours of operation:
Holiday weekend after Thanksgiving:
Friday - 10:00am to 4:00pm
Saturday -10:00am to 3:00pm
Sunday - 10:00am to 3:00pm
First weekend of December:
Saturday - 10:00am to 3:00pm
Sunday - 10:00am to 3:00pm

Made in China
Printed in China
This is not a toy, for decorative use only.

11"



FOR INDOOR USE

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before use.

SAVE THESE INSTRUCTIONS:

This manual contains important safety and operating instructions for power units.

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal-use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let LEDs rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product—not a toy! To avoid risk of fire, burns, personal injury and electric shock, do not play with it and keep out of reach of children.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.
11. Do not perform any maintenance or troubleshoot for bad or broken LEDs while the power is on.
12. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
13. Do not cover the product with cloth, paper or any material not part of the product when in use.
14. Read and follow all instructions that are on the product or provided with the product.
15. Caution—To reduce the risk of fire and electric shock: a) do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) do not mount or support strings in a manner that can cut or damage wire insulation.

SAFETY FIRST

1. Avoid touching electric carrying parts with sharp or heavy objects.
2. Do not try to remove the LED bulbs, they are not replaceable.

USE AND CARE INSTRUCTIONS

1. When not in use store in a cool, dry location.
2. Keep away from heat and moisture.
3. If your tree has flocking, it may discolor over time.
4. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the LED holders or enclosures, loose connections or exposed copper wire.
5. See warranty at the back of these instructions for additional information.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible Party-U.S. Contact Information:

Company: Bethlehem Lights, LLC

Address: 1600 Shore Road, Suite J, Naperville, IL 60563

Customer service toll-free Number: 1-877-661-8324

CAUTION:

1. Do not replace or modify any connectors on this product. Discard product if connector is damaged. Make sure connectors are fully inserted and any connector rings are twisted until completely secured such that the ring can no longer be turned and the two portions of the connector are completely assembled.
2. DO NOT USE A DIMMER SWITCH OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR LIGHT STRING OR CAUSE PERSONAL INJURY. THIS ACTION WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

BATTERY INSTALLATION:

1. Carefully remove the remote from the packaging.
2. Remove the slide plate located on the back of the remote control.
3. Insert 2 x AAA batteries by aligning the appropriate (+/-) markings accordingly.
4. Replace the slide plate on the back of the remote control.

CAUTION:

1. Do not operate this product while it is still in the packaging.
2. Never mix old and new batteries (OR different types of batteries).
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-MH, Ni-CD, etc.) batteries or equivalent.
4. Battery is to be inserted with the correct polarity.
5. LU remote with 2 x AAA batteries.
6. Exhausted battery is to be removed from the battery holder.
7. The supply terminals are not to be short circuited.
8. Do not throw battery into fire.
9. Battery should never be left in the product when not in use for long periods of time.
10. Never allow any plastic part to come in contact with a source of heat or flame.
11. This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.

DISPOSAL AND RECYCLING:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. This applies to the battery also.

Backed by
5 Year Tree
5 Year Lights
Limited Warranty



WARRANTY INFORMATION

This product is unconditionally backed by a limited warranty. Consumers requesting to exercise this warranty will be required to provide original proof of purchase.

If for any reason, after assembly, the tree does not light, please call our toll-free number 1-877-661-8324, and a qualified technician will assist you. Bethlehem Lights® warrants this tree to the original purchaser against manufacture defects. A valid sales receipt must be retained as proof of purchase. The warranty of this pre-lit tree is void when the product is used for commercial purposes. Bethlehem Lights® will not be responsible for any shipping charges incurred if any part of a tree has to be sent in for repair.

Warranty on Lights:

For up to 5 years from date of purchase, Bethlehem Lights® will review and if deemed necessary, replace with available lights due to any manufacture defect found to the lighted portion of your tree.

Warranty on Tree:

For up to 5 years from date of purchase, Bethlehem Lights® will review, troubleshoot, repair and if deemed necessary replace with an available model due to any manufacture defect found to the tree. Replacement parts will be shipped out depending on the availability of the parts.

Note: This Christmas tree is a seasonal product. It is intended for indoor use only and for seasonal installation and use only (90 days max).

 
ASSEMBLY INSTRUCTIONS

Wearing long sleeves and gloves (provided in this box) is recommended to protect your arms and hands from the branches.

Carefully unpack the contents from the tree's carton (Fig 1).

Your tree will include the following components:

- A folding metal tree stand with (1) eyebolt.
- An on/off push button foot pedal with cord and plug (Fig 6); which is pre-attached to your tree (Fig 5).
- 4 tree sections - labeled "A", "B", "C" and "D", as shown in Fig 5.
- 1 tree storage bag.
- 1 pair of protective gloves
- Contained in the poly-bag adhered to the interior flap of the carton is the remote control which operates your tree's 14 function lighting capability (2 x AAA batteries are included) .

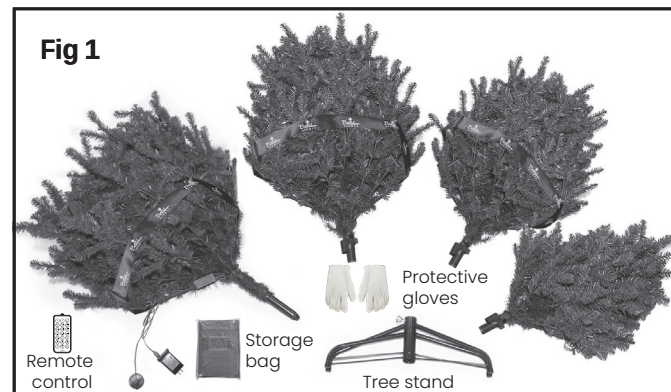

ASSEMBLY OF THE TREE STAND

1. Remove the tree stand from the plastic bag, loosen the eye bolt and open the tree stand to form an "X" (Fig 2).
2. Align the hole for the insertion of the eyebolt.
3. Begin threading the eyebolt in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section "A" to be inserted into the assembled stand (Fig 2).
4. Place the tree stand in its desired location; as once the tree is fully assembled, it may become too difficult to move and relocate.



ASSEMBLY OF THE TREE

1. Locate the bottom section of the tree which is identified by a label on the outer branches marked "A" (Fig 5).
2. Remove the protective plastic cap from the end of the pole, (that is pinched to a point), and place that end into the tree stand.
3. Now tighten the eyebolt on the tree stand; being careful not to over-tighten (Fig 3).



4. Untie and remove the strapping bounding the branches upright (Fig 8). **Caution:** Do not cut.
5. Gently guide the branches of section "A" downward into place.
6. Beneath the canopy of section "A", contain's an on/off push button foot pedal with cord and plug (Fig 6).
Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet. Section "A" will now be lit. If section "A" fails to light – press the On/Off push button foot pedal – as it may be in the "Off" position.

On/Off push button foot pedal operation:

The On/Off push button foot pedal is intended to provide basic manual on/off operation only; and therefore cannot provide the remote control's 14 function lighting capability.

POWER POLE TECHNOLOGY

NOTE: Your tree has been designed with Power Pole technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section (Fig 5).

7. Locate the next section of the tree which is identified by a label on the outer branches marked "B" (Fig 5).
8. Remove the protective plastic cap from the end of the pole on section "B"; insert that end onto the top of the pole of section "A" (Fig 4).
9. Once section "B" is fully inserted downward into section "A"; both section "A" and section "B" will now be lit.
10. Again, untie and remove the strapping bounding the branches upright (Fig 9). **Caution:** Do not cut.
11. Gently guide the branches of section "B" downward into place.
12. Locate the next section of the tree which is identified by a label on the outer branches marked "C" (Fig 5).
13. Remove the protective plastic cap from the end of the pole on section "C" insert that end onto the top of the pole of section "B" (Fig 4).
14. Once section "C" is fully inserted downward into section "B". Sections "A", "B" and "C" will now be lit.
15. Again, untie and remove the strapping bounding the branches upright (Fig 9). **Caution:** Do not cut.
16. Gently guide the branches of section "C" downward into place.
17. Locate the top section of the tree which is identified by a label on the outer branches marked "D" (Fig 5).
18. Remove the protective plastic cap from the end of the pole on section "D" insert that end onto the top of the pole of section "C" (Fig 4).
19. Once Section "D" is fully inserted downward into section "C" your entire tree will now be lit.
20. Gently guide the branches of section "D" downward into place.
Assembly is now completed. Proceed to spread & fluff the branch tips, to further enhance the tree's appearance, if needed.



Fig 5

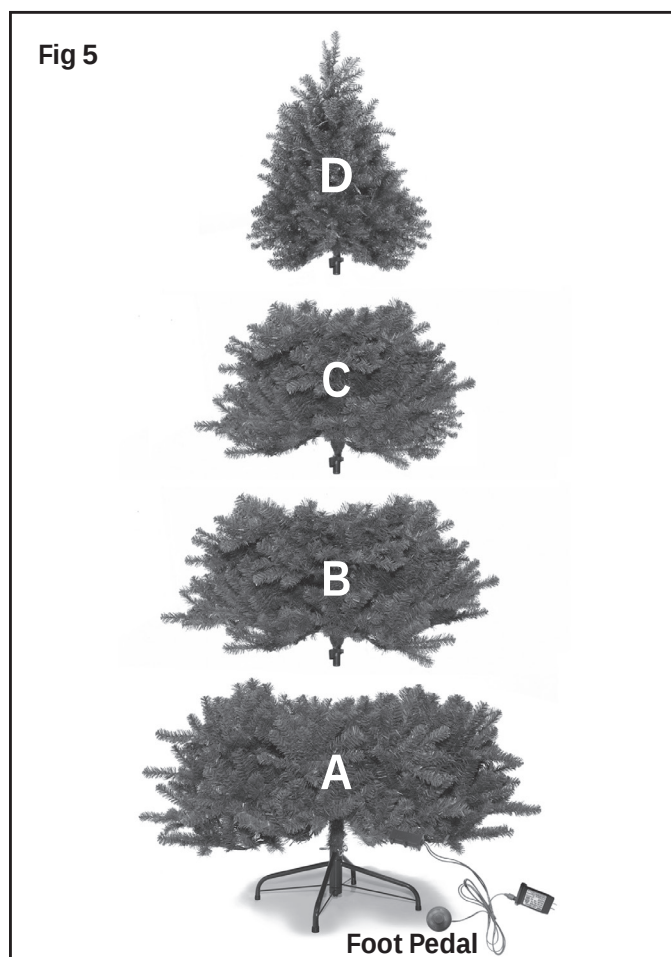 


Fig 6



REMOTE CONTROL OPERATION

Your Pre-Shaped & Pre-lit LED Christmas Tree's 14 Function capability is controlled by the use of the remote control provided (Fig 7), or by your smartphone or tablet - by downloading the App!

SELECTING COLOR & FUNCTION

Simply press a desired lighting function button - Per the 14 available color & lighting function combinations!

Function	*WW	*MU	*SG	Pastel	Press
Steady	✓	✓	✓	✓	4
Sparkle	✓	✓	✓	N/A	3
Sparkle Flip	WW/MU	SG/WW	MU/SG	N/A	3
Flip	WW/MU	WW/SG	WW/SG/MU/PA	N/A	3
Light Show	N/A				1

*WW - Warm White *MU - Multi *SG - Soft Gold *PA - Pastel



TIMER 6HR:

- Press the "Timer 6hr" button; the trees lights will flash **WARM WHITE** 2 times - Indicating that the 6 hour "On" / 18 hour "Off" timer has now been activated.
- **Note:** The tree's lights will automatically resume back to the "On" position - 24 hours from when it was initially activated.
- Press the "Timer 6hr" button again, the trees lights will flash **MULTI** 2 times - Indicating that the timer feature has now been deactivated.
- **Note:** The trees On/Off operation is now controlled by either the manual operation of the remote control, smartphone, tablet or by manually unplugging the tree.



TIMER 10HR:

- Press the "Timer 10hr" button; the trees lights will flash **WARM WHITE** 4 times - Indicating that the 10 hour "On" / 14 hour "Off" timer has now been activated.
- **Note:** The tree's lights will automatically resume back to the "On" position - 24 hours from when it was initially activated.
- Press the "Timer 10hr" button again, the trees lights will flash **MULTI** 4 times - Indicating that the timer feature has now been deactivated.
- **Note:** The trees On/Off operation is now controlled by either the manual operation of the remote control, smartphone, tablet or by manually unplugging the tree.



DIMMER FEATURE:

- Press 3 buttons to select from 3 brightness levels.

Please Note: The brightness control is unavailable for the tree's "Sparkle", "Sparkle Flip" and "Light Show" lighting functions.

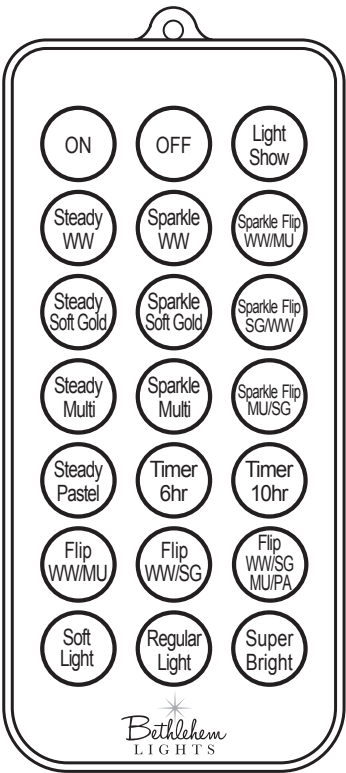 



Fig 7

Fig 8



Download the “Bethlehem” APP!

 1st: Scan the QR code to download the “Bethlehem” app onto your smartphone or tablet.
2nd: Now that the App is installed; scan the QR code again or input the Product ID: **ctr014f** to link the App to your tree - It is that easy!
NOTE: You need to enable *Bluetooth on your smartphone or tablet to use the Bethlehem App.
You can now control your tree’s 14 lighting functions by either the remote control, smartphone or tablet.

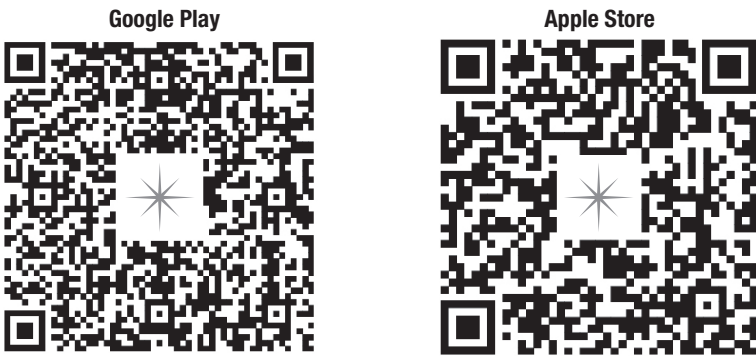

Scan the QR code to download the remote App!



* Bluetooth protocol is not being used to communicate with the tree. A 2.4 GHz frequency transmitter/receiver is being used to communicate with the tree.

TROUBLESHOOTING

1. If the tree does not illuminate press the on button  on your remote control, smart phone or tablet. If failure to light persists, the batteries may need to be replaced. Insert 2 x AAA batteries.

 
NOTE: The tree's 14 function lighting capability is controlled by the use of the remote control provided or by your smartphone or tablet - by downloading the App.

NOTE: By reducing the distance from your tree; you may achieve better remote control reception.

If the tree fails to light due to a damaged or defective remote control; please resort to App operation until a new remote control can be provided. **NOTE:** Replacement parts can be acquired through our customer service center at 1-877-661-8324.

2. If failure to light persists, press the on/off push button foot pedal; as it may be in the "Off" mode.
3. If the top of the tree or another individual lettered section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.
4. If a light set, section or area fails to light. Simply check the coaxial connections - along the entire length area of the tree's power pole (Fig 9).
5. Always ensure that the electric outlet to be used; is functioning & working as it is intended.

NOTE: A SPECIALTY NON-REPLACEABLE LED HAS BEEN APPLIED TO YOUR PRE-LIT TREE; IN THE CASE THAT A INDIVIDUAL LED BULB BURNS OUT, THE REMAINING LED BULBS WILL CONTINUE TO SHINE.

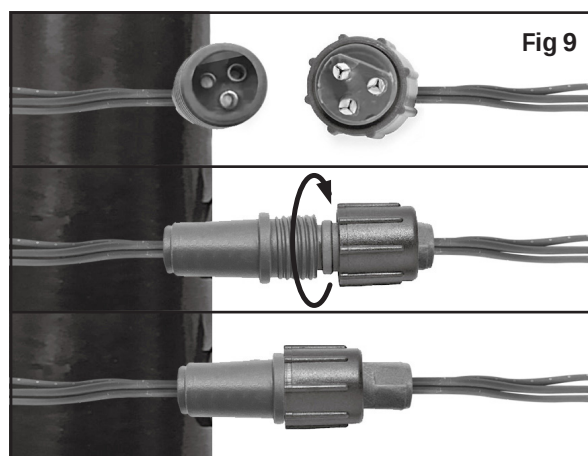

DISASSEMBLY & STORAGE

1. Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the on/off push button foot pedal and plug.
2. Beginning with the tree's top section; lift each section straight up from the section below, and continue working downward.
NOTE: You may have to slightly wiggle each section as you lift each section upward.
3. To remove the bottom and final section; loosen the eyebolt by turning in a counter-clockwise direction and lift section "A" from the support collar of the tree stand.
4. Gently fold the branches of each section upward, towards the center, and position in the storage carton or storage bag.
NOTE: With the exception of the tree's "top" section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage carton or storage bag.
5. Unthread the eyebolt from the tree's stand and fold together; placing in the storage carton or storage bag.
6. Replace the plastic protective caps on the pole's ends before placing in storage carton or storage bag.
7. It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.

NOTE: Store your remote control in a SAFE & DRY location and remove the batteries from the remote control before storage.

NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.