

Thank you for purchasing our 3D moving flame real wax candle. As with any traditional candle, care is required to maintain your candle. For great performance, please take the time to read the instructions.

CONTENTS

1 x 5" Flameless Candle

1 x 7" Flameless Candle

1 x 9" Flameless Candle

1 x Remote Control (CR2025 battery included)

BATTERY INSTALLATION & REPLACEMENT--CANDLES

- Each candle requires 2pcs C batteries (not included).
- Remove battery compartment lid located on the bottom of candles.
- Install 2 C batteries in correct polarity.
- Return battery compartment lid to its original position.

BATTERY INSTALLATION & REPLACEMENT--REMOTE

- Slide battery compartment out (located on bottom edge of remote).

Remove battery and discard properly.

- Clean the battery contacts and also those of the device prior to battery installation.
- Install one 3V CR2025 button cell battery in battery compartment.
- "+" side of battery should face towards you when installing battery.
- Return battery compartment to its original position.

CANDLE ON/OFF/TIMER SWITCH

To turn the candles ON: Slide the power switch on the bottom of each candle to the "ON" position.

To turn the candles Off: Slide the power switch on the bottom of each candle to the "OFF" position.

To set the Timer: Slide the power switch on the bottom of each candle to the "TIMER" position.

The candle will remain "ON" for 6 hours from the time that you switch to "TIMER" position. After 6 hours of run time the candle will automatically turn off for 18 hours. It will automatically repeat the same cycle daily until you reset the timer with remote. To reset the timer, you turn on your candle and choose 2/4/6/8 hours timer on the remote.

MULTI-FUNCTION REMOTE CONTROL

FOR INITIAL USE:

- Remove and discard plastic tabs from remote control battery compartment.
- To turn candle on and off, point remote directly at candle and use remote control "ON/OFF" buttons.

4 "TIMER" OPTIONS

Turn on your candles and press "2H/4H/6H/8H" to set timer for the candles, the candles will light for 2/4/6/8 hours and off. Your candles will repeat the same cycle daily.

2 "MODE" OPTIONS



Press "Candle" button to get the flickering candlelight.

Press "Light" button to get steady candlelight.

2 "DIM" OPTIONS

Press DIM (-) button to reduce brightness.

Press DIM (+) button to increase brightness.

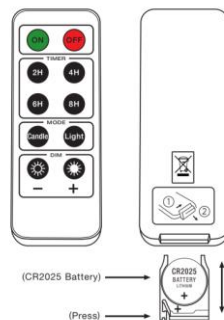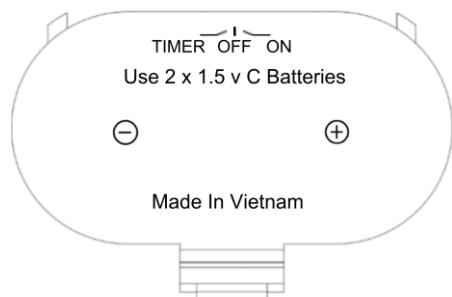

Battery Compartment & Timer/OFF/ON Switch

Remote

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

Warning:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do **NOT** dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 50°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children



WARNING: This product contains a button or coin cell battery.

Maintenance

- For indoor use only.
- Turn off when not in use to save battery life.
- Keep away from water or damp locations.
- Clean your candle as needed with a soft, dry cloth.
- Remove the batteries from your candle once they have run out of power or if your candle has been left unused for an extended period of time.

CAUTION

These flameless candles are made of **REAL WAX**. Remove batteries from equipment if it is not to be used for an extended period of time. **DO NOT** expose batteries to fire or water. **DO NOT** attempt to recharge, use different sizes of batteries, mix old and new batteries, mix alkaline, standard (Carbon-zinc), or rechargeable (Ni-Cd, Ni-Mh, etc) batteries, or install batteries backwards. Never touch damaged or leaking batteries - this could result in burn injuries or cause serious internal injuries if swallowed. Obtain medical attention immediately if this occurs. Misuse can cause batteries to overheat, rupture, leak, or explode, resulting in personal injury and/or property damage. This product is not a toy! Not for children under 6 years of age. For decoration only.

Made in Vietnam