


Voom[®]


CORDLESS POWER SWEEPER

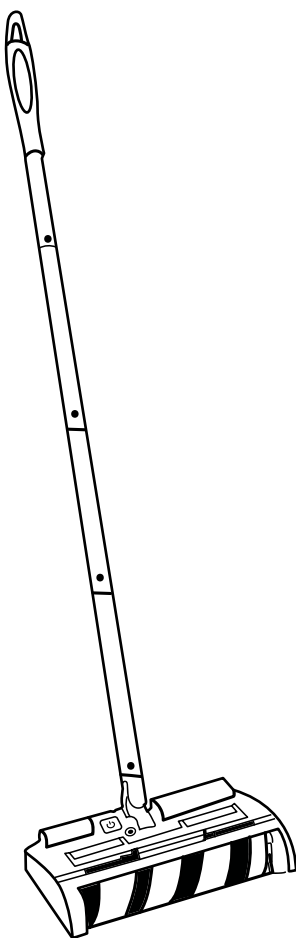

User Manual


Thank you for purchasing the Voom® Power Cleaning Tool - the lightweight, cordless power sweeper that swivels and picks up like no other. Voom® easily cleans all types of messes on all kinds of surfaces like hardwood, tile, even carpet. Change the way you clean with Voom®!

COMPONENTS:

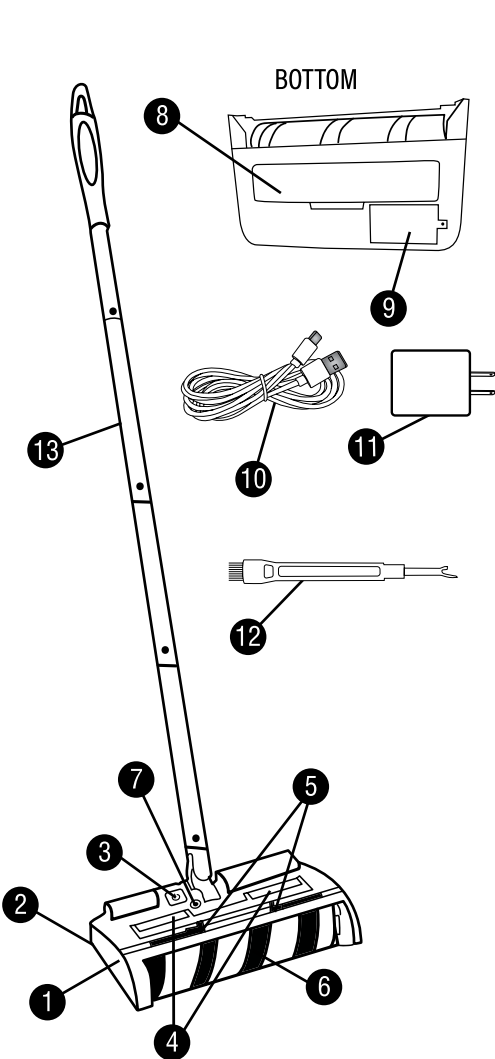


1. Sweeper Head
2. Charging Port
3. On/Off Power Button
4. Air Filters
5. Roller Brush Release Tabs
6. Roller Brush
7. Dirt Tray Release Button
8. Dirt Tray Door
9. Battery Compartment
10. USB-C Charging Cord
11. USB Power Adapter
12. Hair Cleaning Tool
13. Sweeper Pole (4pcs)


OPTIONAL ACCESSORIES AND REPLACEMENT PARTS (MAY NOT BE INCLUDED)

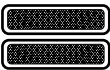-  Replacement Air Filters
-  Replacement Multi-Surface Floor Sliders
-  Replacement Rechargeable Battery
-  Replacement Roller Brush
-  Mini Voom


ASSEMBLY:

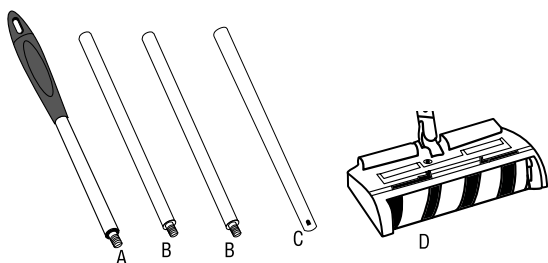

- A. Upper Pole
- B. Middle Poles 2pcs
- C. Lower Pole
- D. Sweeper Head

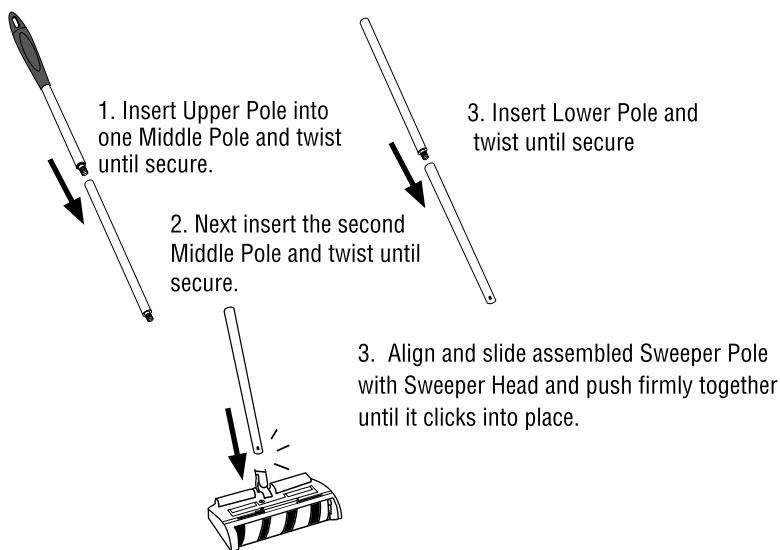


HOW TO CHARGE:

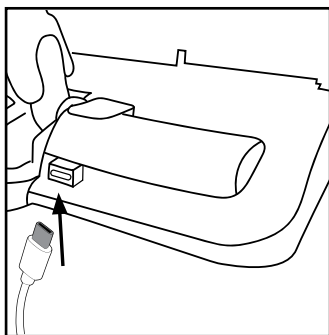

Before first use, fully charge your Voom®. Insert small end (USB-C end) of Charging Cable into Charging Port and large end into a USB port or USB Power Adapter. Indicator light is red when charging and will turn green when fully charged.

Remove Charging Cable when finished charging. If battery is low, indicator light will blink RED to let you know it is time to re-charge your Voom®.

HOW TO USE:

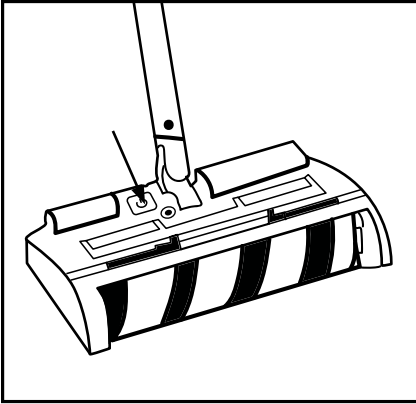

After assembling and charging battery, Voom® is ready to use.


To turn on, press On\Off Power Button on the Sweeper Head. To turn off, press On\Off Power Button again.

For best performance, move Voom® slowly over surface until clean.

When done, empty Dirt Tray as directed in CARE INSTRUCTIONS Section.

If Roller Brush gets stuck, Voom® will stop working to protect motor, and indicator light will blink GREEN for 10 seconds. Turn power off, and then on again to reset.


CARE INSTRUCTIONS:

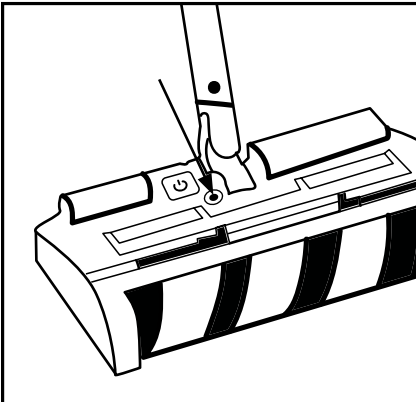

EMPTYING DIRT TRAY

We recommend emptying Dirt Tray after each use. Hold Voom® over a garbage can, press Dirt Tray Release Button to open Dirt Tray Door. When all dirt and debris have been emptied, close Dirt Tray Door and press until you hear it click closed.

CARE INSTRUCTIONS CONTINUED:

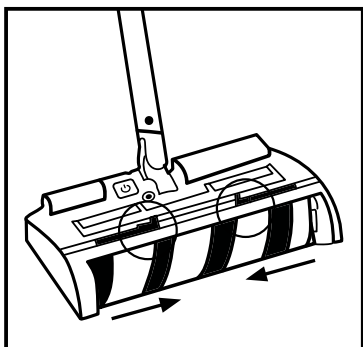


Roller Brush Maintenance

We recommend periodically checking Roller Brush for hair or debris.

1. Squeeze Roller Brush Release Tabs in and gently pull Roller Brush cover door open.


2. Lift Roller Brush out of the Roller Brush compartment.

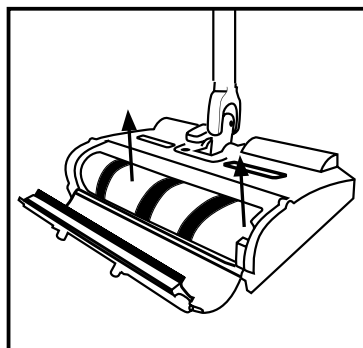

3. If there is any debris or hair wrapped around Roller Brush, carefully use included Roller Brush Cleaning Tool* or scissors to remove it from Roller Brush.


*How to use Roller Brush Cleaning Tool
- Glide Ripping Blade along shaft of Roller Brush and use Comb End to remove debris.

Caution: Roller Brush Cleaning Tool has sharp tip and Ripping Blade. Avoid contact with Tip and Ripping Blade.

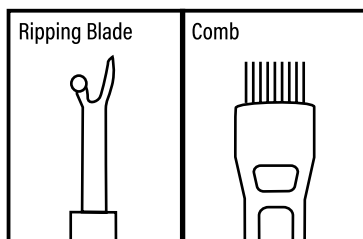


4. Handwash Roller Brush as needed with only water. Let air dry completely for at least 24 hours before re-installing.

5. Place Roller Brush back into Sweeper Head by lining up the notch on right side of Roller Brush with connection point inside Roller Brush Compartment. Press until it clicks securely in place and close Roller Brush cover door.

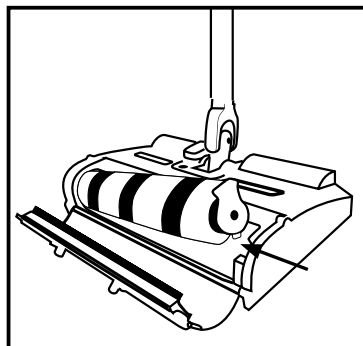

We recommend periodically replacing Roller Brush for best results.


CARE INSTRUCTIONS CONTINUED:

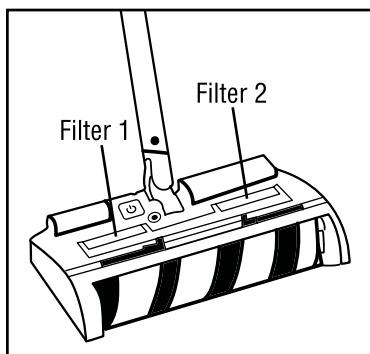

CLEANING AIR FILTERS

The pre-installed Air Filters may become dirty after regular use. To remove, place finger under outer edge of Air Filter, and pop out. Repeat on opposite side. Rinse under running water until clean and let air dry. Replace Air Filters by placing into Sweeper Head and press down until you hear it click into place. Repeat on opposite side.


We recommend periodically replacing Air Filters for best results.

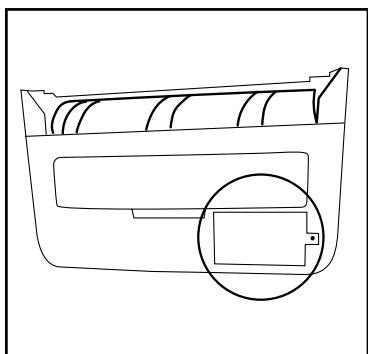

CHANGING THE BATTERY

Voom® battery is replaceable if needed. Locate Battery Compartment on underside of Sweeper Head and remove screw holding door in place. Remove Rechargeable Battery. Replace with new Voom® Rechargeable Battery making sure contact points are properly touching on both battery and unit. Replace Battery Compartment door and screw back into place.

MINI VOOM® INSTRUCTIONS:

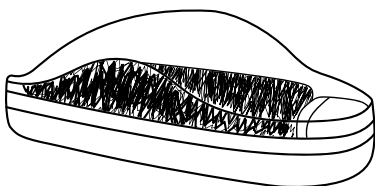

IMPORTANT: Your Mini Voom® is NOT intended for cleaning up liquid messes.

1. Roll Mini Voom® over mess you are cleaning using a side-to-side sweeping motion until clean.
2. Detach clear, dome shaped shell from Mini Voom® simply by pulling it off. Then empty dirt and debris into a garbage can.
3. Reattach dome-shaped shell to Mini Voom®. Your Mini Voom® is ready for use again.

WARNINGS:

- Make sure Voom® is securely assembled before use.
- Never use Voom® to clean up fluids or wet messes, especially not flammable or combustible liquids.
- Keep fingers, hair, all other body parts and clothing away from Roller Brush
- Do NOT use Voom® to clean up any burning or lighted materials such as cigarettes, matches, and ashes.
- Do NOT use on coarse concrete surfaces.
- Do NOT use outdoors: patios, decks, or rough surfaces.
- Voom® mechanical parts are not user-serviceable. Contact a qualified professional for service.
- Make sure Voom® is turned off and that batteries are removed before cleaning its Roller Brush of hair, debris, etc.
- Store your Voom® indoors in a dry, safe place.


CUSTOMER SERVICE:

Customer Satisfaction is our #1 priority!
If you have any questions or problems, email:

Voom@rephelpdesk.com

Voom®

CORDLESS POWER SWEEPER

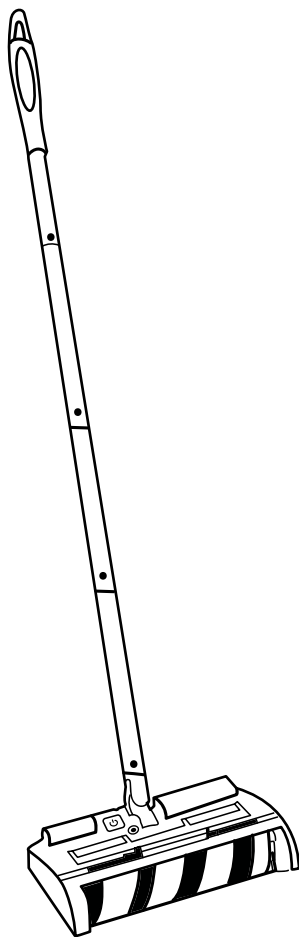

Distributed by

OnTel®
PRODUCTS CORPORATION

©2024 Ontel Products Corp.
Fairfield, NJ 07004
All Rights Reserved.
Made in China

VMSBR-IM-02-1224-200