


**PAGE SIZE:
11"x17"**

**FOLDS IN CENTER TO
8.5" X 11" AS SHOWN**

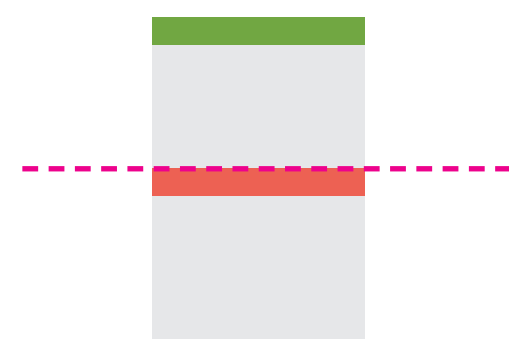

**PowerAirFryer
Pro™**

Quick Start Guide*

Round Basket

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power Air Fryer Pro.

STEP 2



Put food inside the Round Basket and place the Basket in the Unit. Slide the switch on the left side of the Unit to the right and hold the switch while pushing the Basket into the Unit. For detailed instructions, please see the owner's manual.

STEP 3



Select a one-touch cooking preset to begin the cooking cycle. If you are manually setting the time and temperature, press the Power/Start-Stop Button to begin the cooking cycle once the time and temperature are set.

STEP 4



Remove the Round Basket from the Unit using the Fetch Tool or oven mitts and enjoy! Let the Unit continue running after the cooking time has expired to cool off. The Unit will automatically shut down.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).

**PowerAirFryer
Pro™**

Quick Start Guide*

Crisper Trays

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power Air Fryer Pro.

STEP 2



Arrange food on the Crisper Trays and slide the Trays into the shelves inside the Unit.

STEP 3



Select a one-touch cooking preset to begin the cooking cycle. If you are manually setting the time and temperature, press the Power/Start-Stop Button to begin the cooking cycle once the time and temperature are set.

STEP 4



Remove the Crisper Trays from the Unit using oven mitts and enjoy! Let the Unit continue running after the cooking time has expired to cool off. The Unit will automatically shut down.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).



Quick Start Guide*

Rotisserie Shaft

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power Air Fryer Pro.

STEP 2



Carefully poke the Rotisserie Shaft through food. Slide the switch on the left side of the Unit to the right and hold the switch while pushing the Shaft into the Unit. For detailed instructions, please see the owner's manual.

STEP 3



Select a one-touch cooking preset to begin the cooking cycle. If you are manually setting the time and temperature, press the Power/Start-Stop Button to begin the cooking cycle once the time and temperature are set.

STEP 4



Remove the Rotisserie Shaft from the Unit using the Fetch Tool or oven mitts and enjoy! Let the Unit continue running after the cooking time has expired to cool off. The Unit will automatically shut down.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).



Quick Start Guide*

Rotisserie Shaft & Skewers

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power Air Fryer Pro.

STEP 2



Carefully poke the Skewers through food and insert the Skewers into the Skewer Racks, ensuring that the Skewers are evenly spaced. Place the assembled Skewers inside the Unit. For detailed instructions, please see the Owner's manual.

STEP 3



Select a one-touch cooking preset to begin the cooking cycle. If you are manually setting the time and temperature, press the Power/Start-Stop Button to begin the cooking cycle once the time and temperature are set.

STEP 4



Remove the Skewers from the Unit using the Fetch Tool or oven mitts and enjoy! Let the Unit continue running after the cooking time has expired to cool off. The Unit will automatically shut down.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).