




5QT HINGED LID SLOW COOKER

PARTS

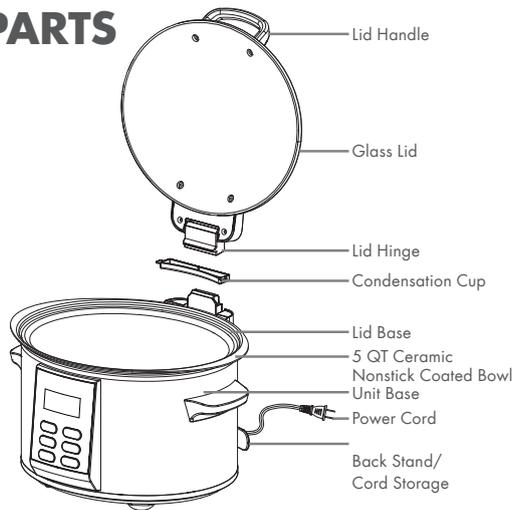

OPERATION INSTRUCTIONS

Your GreenPan 5 QT Slow Cooker cooks food automatically once you set the time and the desired cooking mode. When time expires, the Slow Cooker automatically switches to the Warm setting and the Warm indicator light illuminates. When cooking time and mode are set, the Slow Cooker will perform those functions until the cooking time expires or the Slow Cooker is manually turned off.

Cooking WITH the Timer

1. Place the Slow Cooker on a clean and dry counter.
2. Hold the Lid handle and open glass lid fully.
3. Fill the 5 QT Ceramic Nonstick Coated Bowl with ingredients. If the 5QT Ceramic Nonstick Coated Bowl is removed from Slow Cooker, place the 5QT Ceramic Nonstick Coated Bowl into the Slow Cooker.
4. Close the glass lid. If the Lid is removed, align the Lid hinge with the Lid hinge base behind the Slow Cooker housing, then close the lid.
5. Plug in Slow Cooker. There will be no power to the GreenPan 5 QT Slow Cooker until you press the ON Button.
6. Set the desired cooking time by pushing the + or - button. The timer ranges from 00:30 to 24:00 hours in 30-minute increments.
 - Press the + button to increase time in 30-minute increments or press the - button to decrease time in 30-minute increments.
 - Press and hold + or - to scroll automatically in 30-minute steps.
 - Press + and - simultaneously to reset to 00:00. Repeat the above two steps to reset time.
7. **Setting Cooking Modes:** Set the desired cooking mode by pressing High, Low, Simmer or Keep warm button, the High, Low, Simmer or Warm indicator will illuminate to denote the selected cooking mode. There are 3 modes that can be used for cooking, High, Low and Simmer. Keep Warm can also be used for keeping already cooked food warm. You can adapt many recipes to slow down the cooking time, or speed it up, to coordinate meals to your schedule. You will usually want to use the Low setting for recipes that cook longer. If you're starting a dish later in the day, select the High setting to ensure that your food is cooked, warm, and ready when you'd like to eat.
8. During cooking, to turn the Slow Cooker off manually, press Keep warm/OFF button.
9. If you need to remove the 5QT Ceramic Nonstick Coated Bowl out from the Slow Cooker, using potholders or adiabatic gloves, lift the 5QT Ceramic Nonstick Coated Bowl carefully.

- After setting time, the High, Low, Simmer and Keep warm indicators will still flash. Please proceed to setting the cooking mode.

COOKING GUIDELINES

Setting	Guidelines	Recipe	Timer
High	This is the setting to use when you don't have time for a long, slow cook. It's also the setting to select when "baking" in your GreenPan 5 QT Slow Cooker.	Casseroles, Puddings, Cheesecakes, Rolls	Programmable up to 24 hours, then 4 hours (Warm)
Low	Low is the standard GreenPan 5 QT Slow Cooker temperature and is ideal for foods that you start in the morning before work, and enjoy at the end of your day.	Braises, Roasts, Stew, Ribs, Casseroles, Shanks, Chops, Less Tender Cuts of Meat Soups.	Programmable up to 24 hours, then 4 hours (Warm)
Simmer	The longer the cooking time, the more flavors blend together and intensify. Use this for soups, stews, and homemade stocks.	Soups, Stews, Stocks	Programmable up to 24 hours, then 4 hours (Warm)
Warm	Do not use this setting to cook food or as a cooking function. This setting is intended only to use with preheated foods.	---	Programmable up to 24 hours.

- When the desired cooking mode is selected, the Slow Cooker will beep once, the High, Low, Simmer or Keep warm indicator will illuminate to denote the selected cooking mode and any flashing light will become solid.

NOTE: The cooking mode can be overridden by pressing any other mode buttons.

- For High, Low or Simmer setting, once cooking time has expired, the Slow Cooker will automatically switch to the Warm setting. The Warm setting indicator will light and remain on Warm for 4 hours maximum (this time can be adjusted at any time). When the Warm time expires, the Slow Cooker will beep for 5 seconds and then turn off automatically.

Part	Lid	5 QT Ceramic Non Stick Coated Bowl	Base Unit
Stovetop Safe	Yes	Yes	No
Oven Safe	No	Yes	No
Microwave Safe	No	No	No
Dishwasher Safe	Yes	Yes	No

TIPS

STOVE TO SLOW COOKER

Move your removable 5 QT Ceramic Nonstick Coated Bowl from the stove after searing, browning or sautéing and place back inside the slow cooker base. The 5 QT Ceramic Nonstick Coated Bowl is extra deep to give you plenty of room for family-sized meals. Finish cooking your meal in the slow cooker. You can make a variety of meals for any time of day. From omelets to casseroles, chili, stews, soups, puddings, and more! Morning to evening and everything in between, the GreenPan 5QT Hinged Lid Slow Cooker helps prep, cook, and keep meals warm for when you're ready to eat.

Stovetop Cooking Function

Sear or Brown:

Use the 5 QT Ceramic Nonstick Coated Bowl to sear and brown beef, pork, chicken breasts, fish, and more.

Sauté:

Take the 5 QT Ceramic Nonstick Coated Bowl to the stove to sauté onions, garlic, vegetables, and more.

Finish in Slow Cooker or in Oven:

Make fall off the bone pork, beef, chicken, and more. Or in oven melted mac and cheese.

Multiple Uses for Cooking at any time of day:

Breakfast	Omelet Breakfast Pie, Mexican Casserole
Lunch	Chunky Chicken Chili, Chicken Tortilla Soup, Roast Beef Sandwiches
Dinner	Tacos, Smothered Chicken, Family Favorite, Pot Roast, Korean BBQ Pork Shoulder, Beef Stew, Sausage & Meatballs
Dessert	Chocolate Bread Pudding
Snacks/ Party Food	Bourbon Cocktail Sausages, Baby Back Ribs