




# COMPACT MULTI-FUNCTION ELECTRIC COOKER

## PARTS

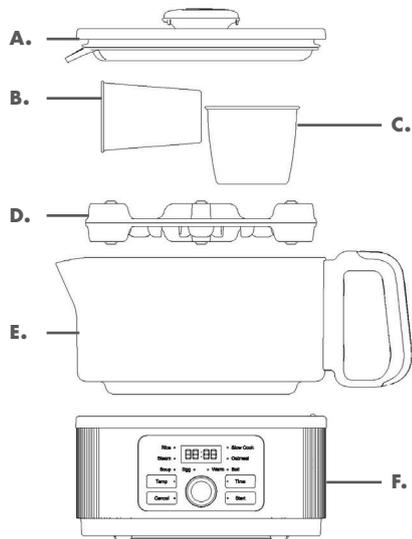

- A. Lid
- B. Egg Measuring Cup
- C. Rice Measuring Cup
- D. Steamer Insert
- E. Ceramic Nonstick Coated Bowl
- F. Body

## OPERATIONS

1. Add ingredients into the bowl.
2. Rotate Modes Selection Dial to desired function.
3. Press "START" to begin mode.
  - a. After selecting the cooking mode, press "START" button. The display window displays the cooking status or time.
4. If you want to stop cooking at any time, press the CANCEL button. Afterwards, you can exit the mode and enter standby mode.
5. You can press Time or Temp (on applicable functions) during cooking modes if you want to adjust. After Time or Temp is selected (on applicable modes) turn the dial to adjust. Wait for 6 seconds. For Rice and Slow Cook modes press Temp to cycle between different cooking option. The functions selection dial is not needed to go between different cooking options. The Compact Multi-Function Electric Cooker will accept new change to Time or Temp.
6. Cooking ends.
  - a. The Compact Multi-Function Electric Cooker will beep three times and enter Keep Warm function, excluding Steam, Egg, and Boil functions for up to 8 hours. After this time has been completed, the Compact Multi-Function Electric Cooker will beep three times then "End" will be displayed, and then will return to the initial state of "00:00" after 1 min.
7. Turn off product.
  - a. Press CANCEL and unit will go into standby mode and then cord can be unplugged.

## CONTROL PANEL



Buttons Modes Selection

Modes Display

### Time Display

This Display will show the amount of time that remains on the mode you have chosen. For some modes, Time will not be displayed but the Display will indicate that the product is on and mode has started.

### Modes Selection Dial

Use the Dial to change modes. If selected mode allows for Time and Temp to be adjusted, the dial can be turned clockwise or counterclockwise to modify their default settings.

### Buttons:

#### Temp

Use this Button to modify temperature on certain functions Press Temp when function is selected and use function selection dial to modify temperature.

For Rice and Slow Cook functions press Temp to cycle between different cooking options. The functions selection dial is not needed to go between different cooking options.

#### Time

Use this button to modify Time. Press Time when function is selected and use function selection dial to modify time. Timer intervals will vary depending on function selected.

#### Cancel


Press Cancel Button to stop function.

#### Start

Press Start to Begin Mode.

## EGG MODE


1. Rotate mode selection dial to choose EGG.
2. Place the steamer in the Ceramic Nonstick Coated Bowl (egg side up, reference below).

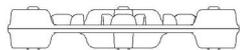

3. Poke a small hole in the bottom of the egg with the pin on the end of the measuring cup. Then, place the puncture hole of the egg facing upwards on the steaming rack.

### Egg Water Volume

4. Fill the measuring cup to the desired doneness of your eggs as well as number of eggs being cooked (1, 3, 5 or 7). The Egg Cooker Measuring Cup shows three sets of markings: Soft Boiled Eggs, Medium Boiled Eggs, Hard Boiled Eggs.

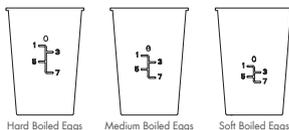

- A. Soft Boil:** For soft boiled eggs reference the egg icon and numbers on the lowest part of the egg cooker cup provided. Fill the water to the number of eggs being cooked.
  - B. Medium Boil:** For medium boiled eggs reference the egg icon and numbers in the middle of the egg cooker cup provided (between soft and hard boiled icon). Fill the water to the number of eggs being cooked.
  - C. Hard Boil:** For hard boiled eggs reference the egg icon and numbers at the top of the egg cooker cup provided. Fill the water to the number of eggs being cooked.
5. Pour in the water from the egg measuring cup and close the lid
  6. To begin cooking press START.
  7. Once Cooking Cycle has completed the Compact Multi-Function Electric Cooker will beep 3 times and the time display will show End. (The water level of the egg cooker cup will determine the amount of time it takes to finish cooking mode.)

## CLEANING & MAINTENANCE

- ⚠ Be sure to unplug the power plug from the wall and wait for the main body of the Compact Multi-Function Electric Cooker to cool before cleaning. Otherwise, it may cause electric shock, fire, burns, and injuries.

Do not use cleaning powder, brushes, cleaning agents etc. After finishing cleaning store product with Lid on.

### Housing

- Wipe with damp cloth.

### Ceramic Nonstick Coated Bowl, Lid, Steamer Insert, Rice Measuring Cup & Egg Measuring Cup

- Please use soft items such as sponges to clean.

### Sensor, Heating Plate

- When there is dirt or debris, gently wipe sensor and heating plate with a damp cloth.

## TIPS & HINTS

**PLEASE NOTE:** A message of “no pot” will appear on screen if there is not enough weight in the Ceramic Nonstick Coated Bowl. Please add more ingredients or rotate handle to the right side of unit. Reference Below:



- The Rice Measuring Cup is about 2/3 U.S. Cup (Note measuring cup is included with this product).
- As there are many kinds of rice available, rice/water measurements may vary. If too firm, add more water, if too soft use less water.
- Rinse rice prior to cooking to remove excess bran and starch. This will improve taste and result in cleaner rice.
- The Compact Multi-Function Electric Cooker can be used as a Kettle. Use Boil function and add your favorite teas, coffee and more!
- Add Lid to the bowl while preheating BOIL mode. This will get to boiling temperature faster. Remove the Lid while Boil Mode is on to avoid overflow.

**IMPORTANT:** For egg measuring cup directions please reference care and use provided.

Do not throw away. Read before operating your new GreenPan Compact Multi-Function Electric Cooker. Keep for future reference. To ensure safe operation and optimum performance, please read the entire Instruction/Care & Use Booklet.

1400029607

## MODES

Mode	Temp Selection	Default Temp	Time Range	Default Time	Automatic Keep Warm
Rice	2 selections “Wht” for white rice “brn” for brown rice	N/A	Automatically adjust based on water and rice amount. Timer will Countdown fro 5 minutes when almost done.	N/A	Yes
Steam	N/A	N/A	5 to 25 min	00:10	No
Soup	170°F, 195°F 212°F	195°F	1 to 4 Hrs	01:30	Yes
Egg	N/A	N/A	N/A	N/A	No
Warm	N/A Approx 165°F	N/A	Counts Up to 8 Hours	N/A	No
Boil	N/A	N/A	5 to 40 min	00:12	No
Oatmeal	No	N/A	Selectable from 10 to 40 min	00:15	Yes
Slow Cook	Hi and Lo	Hi	Selectable from 1 to 8 Hrs	04:00	Yes