



33" W - GRAVITY FREE RECLINER INSTRUCTIONS






To unfold recliner, you may need to release the locking system. If you purchased a recliner with a canopy, the canopy should be snapped to the frame, on the back of the recliner. **NOTE:** Some models may not have a canopy and/or drink tray. Recliner pictured may differ from the model you purchased. The illustrations below are for reference only and your recliner may appear different than illustrated.

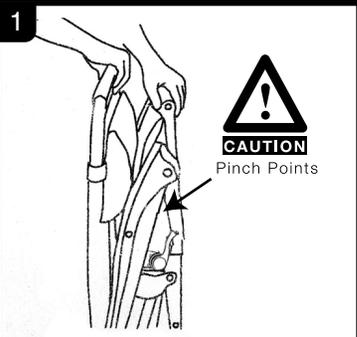

! Moving parts under armrest while reclining. do not put your hands under armrest while in motion.

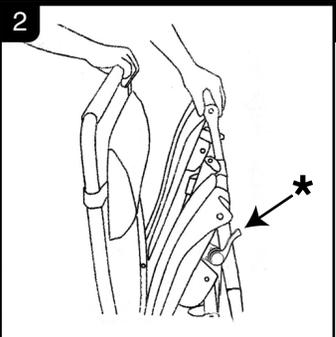

To release the locking system, lift lever on both sides of the recliner

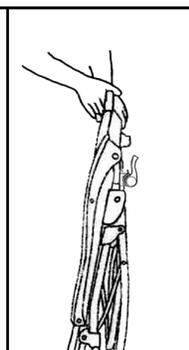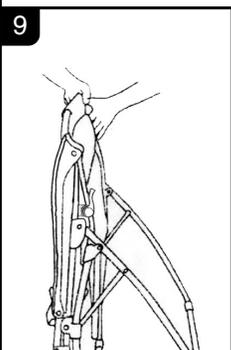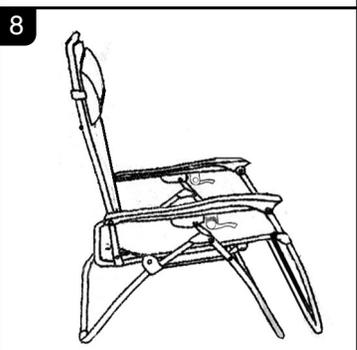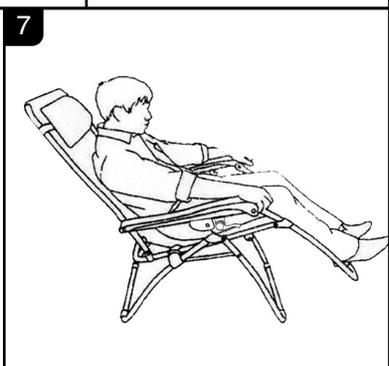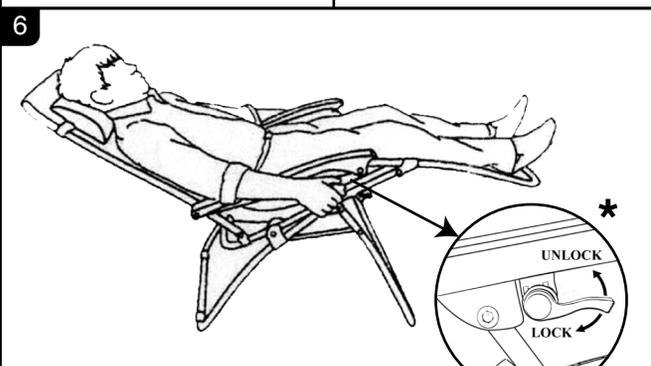

Before closing recliner, make sure the locks are unlocked.

! **ATTENTION** **!**

Remove the drink tray before folding your recliner. If the recliner is folded without doing so, the drink tray will break. Unlock the two locking mechanisms that are under the armrests before folding your recliner. If recliner is folded with out doing so, the locking mechanism will wear.


Make sure your recliner is completely unfolded before sitting in. Please be careful reclining while sitting in it. Body shape and weight will affect the way this recliner operates. Be careful and proceed with caution. To reduce the risk of injury, DO NOT play on, stand, or jump on the recliner. The recliner is intended for sitting and reclining only.

LOCK TOOL INSTRUCTIONS


LOCK TOOL CONSISTS OF 2 PARTS:

- [1] Hexagon Tube
- [1] Flat-Head Rod


HOW TO ADJUST LOCK TENSION, IF NEEDED:

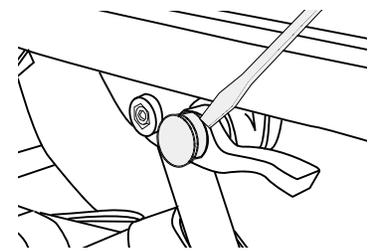

1 Remove the plastic caps covering each nut of the recliner/chair lock using the flat-head rod.

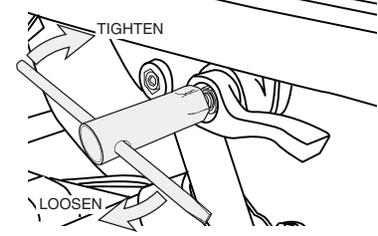

2 Insert the flat-head rod into the side hole of the hexagon tube. Hold it by the flat-head rod in order to tighten or loosen the recliner lock nut to the desired tension. Turn to right to tighten, left to loosen. The locks must not be loose in order for the recliner/chair to lock properly.

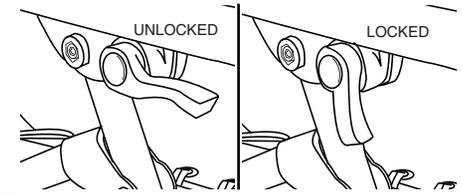

3 Once the desired tension of the lock nut is reached, pop the plastic caps back in to cover the nuts. To lock the recliner, move the lever down. To unlock the recliner/ chair, move the lever up.

PLEASE NOTE: Lock lever should point away from you in the unlocked position before use.

IF YOU PURCHASED A RECLINER OR CHAIR WITH A DRINK TRAY AND/OR PILLOW, SEE BELOW FOR INSTALLATION INSTRUCTIONS. PLEASE NOTE THAT THE RECLINER OR CHAIR, DRINK TRAY AND/OR PILLOW PICTURED BELOW MAY DIFFER IN STYLE AND/OR COLOR FROM WHAT YOU HAVE PURCHASED.

ATTACHING THE PILLOW



1 Bungee cord through 1 eyelet, then pull bungee cord taut.



2 Place pillow on seat, leaning against the bottom of the backrest. Make sure pillow straps are not being blocked by the armrests.



3 Put canopy up, which will be snapped in place on the back via Canopy Snap Lock.



4 Lay pillow flat against front of recliner/chair as you wrap the pillow strap around the frame towards the back.

NOTE: Pillow straps should only overlap the frame.



5 Guide the bungee cord through the other eyelet.

If your recliner/chair, has a canopy, place pillow straps above the canopy snap locks.



6 Adjust pillow to desired height.

ATTACHING THE DRINK TRAY



With recliner opened, place drink tray on the RIGHT side (when sitting) of recliner underneath armrest. Tilt the wide opening of the drink tray up and over the meeting poles to attach it.



Start to slide drink tray down until it cannot be pushed down anymore. Press firmly to ensure cup holder is securely in place.

