

moxee mobile hotspot

K779HSDL



Quick Start Guide


6SLT7790001

Device overview



1. Menu button
2. Signal and Roaming status icon
3. Network mode icon
4. Wi-Fi signal icon
5. Unread message icon
6. Battery icon
7. Power Button
8. Micro USB Port
9. Battery cover
10. The point of removing the back cover

Display layout and icons

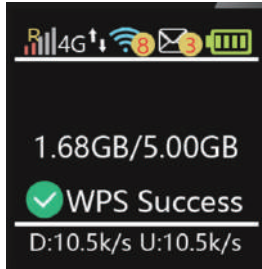


Icon	Description
	Signal and Roaming status icon
	Network mode icon
	Data flow icon
	Wi-Fi signal and number of access users
	The number of unread messages, maximum is 100
	Battery capacity icon, if battery capacity is lower than 25%, this icon is red
	Data Statistics, used/total
	WPS status indicator
	Download and upload Data Speed

Installing the SIM Card

Follow the instruction to install the SIM card.


1. Remove the SIM card from the outer card, being careful not to touch the gold contacts.
2. Turn the power off. Remove the battery cover and take the battery out. Locate the SIM card slot. Hold the card so the writing on the back of the card is facing you and the gold contact points are properly aligned with the SIM card slot.
3. Insert the SIM card into the slot until it is fully inserted.

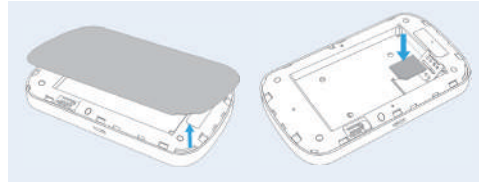

Note: Do not bend, scratch and avoid exposing your SIM card to static electricity, water or dirt.

Inserting and Charging the Battery

1. Remove the battery cover and align the battery contacts with the terminals in the battery compartment as shown. Push the battery down until it clicks into place.
2. Place the battery cover over the battery compartment and press it downward until it clicks into place.

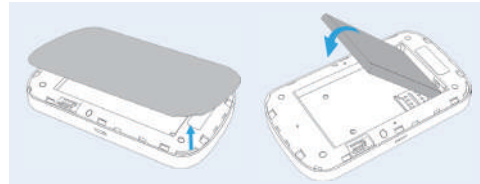

3. Your device comes with a charger. To charge: Plug one end of the charger into an electrical outlet and the other end into the device's Micro USB Port.



Removing the SIM Card

1. Turn the power off. Remove the battery cover and take out the battery.
2. Gently remove the SIM card from the SIM card slot.

Setting up Wi-Fi connection

1. Press and hold the "power" button for 3 seconds until the welcome logo is displayed on the display, and Wi-Fi is on.
2. Look for the network (SSID) named "Moxee TetherXX_2.4G" or "Moxee TetherXX_5G". Where XX are the last two digits of the device IMEI.
3. Click Connect and enter the default WiFi KEY which printed on the label. You can find the label when you remove the back cover.

Note: Your Wi-Fi SSID and password will also be displayed on the WIFI Info page of the device screen each time the device is powered on.

Setting up your WPS

If your terminal support WPS, you do not have to input the password manually once your WPS has been set up.

To use WPS please follow these steps:

1. Enable WPS in the WebUI through Settings->Wireless->WLAN Settings->WPS
 2. Press "Menu" button on the device to select "WPS Active" page on the display
 3. Press "Power" button to active WPS function
- Then you can enable the WPS function on your terminal to connect the hotspot.

Logging into the Device Management website

1. Make sure your device is connected to the hotspot via Wi-Fi or Micro-USB cable.
 2. Open the browser, and input <http://192.168.1.1> or <http://device.WebUI> in the address bar.
 3. Enter username and password, and click "Login".
- The administrator has the right to check and modify configuration permission.

Note: The default user name is "admin"; the default password is 12\$XXX (XXX is the last three digits of IMEI).

Note: You can find the default User Name and Password printed in the device label by removing the back cover and battery.

How to change the SSID & Password

1. Make sure to connect your device (tablet, pc, etc) to the hotspot via Wi-Fi or Micro-USB cable.

Open the browser on your device and log in to <http://192.168.1.1> or <http://device.WebUI>

2. Select Settings> Wireless> WLAN Settings, then you will see "Wi-Fi Name(SSID)" and "Password". Make sure you delete the old name and password and enter the new name and password as you require.
3. Select "Apply" button, wait for the screen to display prompting "Success", and then log out.
4. Then you should select the new SSID and input the new password to connect the WiFi.

Restore Factory Settings

If you are uncertain of which Wi-Fi settings you have configured or changed, you can restore the factory defaults that come with the device to reconfigure the device Wi-Fi setting.

1. Log into Device Management Website to restore to factory default settings.
2. Press and hold "Reset" button for 5 seconds, and device will be activated again and restored to factory settings.

Note: Reset button will delete all the device's user-defined Wi-Fi settings and restore Admin setting and Wi-Fi Setting to factory default.

Trouble Shooting:

If you are having trouble with device, here are a few things you can do to get it to function properly.

1. If the device is not responsive, reboot it by press the "Power" button for about 8 seconds
2. Restore factory settings

Q&A

Q: What do I do if I see the SSID but failed to connect?

- A: 1. Check if the password you entered is the correct one.
2. Check if WPS security is enabled on your PC? If so, check the device to see if it is expecting a WPS action from your PC.

Q: What to do if there is no service?

A: The possible reasons are an unstable network signal, or a hardware problem.

You can try the following solutions:

1. If you are inside a building or near a structure that may be blocking the signal, change the position or location of the device. For example, try moving the device close to a window.
2. Check the hardware for any loose parts or damage.

Q: What to do if I have forgotten my Wi-Fi Key?

- A: 1. You can find the Wi-Fi Key in the Wi-Fi Info page on the LCD.
2. You can also reset the device to factory defaults by press the reset button for 5 seconds.

Q: What to do if "PIN locks" or "PUK locks"?

A: The SIM card is locked. Login into the WebUI (<http://192.168.1.1> or <http://device.WebUI>) and input the PIN or PUK code you received from your carrier provider and Enter your PIN code or PUK code you got from the operator.

Note: If you entered wrong PIN code 3 times, then PUK is needed, and if the wrong PUK is entered 10 times, the SIM card will be locked forever.

Q: Data connection failed.

A: You may be on a not network or limited coverage area, try to move to a different location or a better network coverage area.

Q: The modem cannot connect to the internet when overseas

A: You can check if the data roaming function is enabled in the Device Setting page on the display of the device.

Note: Make sure you have international roaming enabled on your plan. You can contact your service provider before you go overseas to enable roaming.

To the Owner

- Some electronic devices, such as the electronic system of vehicles, are susceptible to electromagnetic interference sent by your device if inadequately shielded. Please consult the manufacturer of your device before using if necessary.
- Operating your device may interfere with medical devices like hearing aids and pacemakers. Please always keep them more than 20 centimeters away from such medical devices when they are turned on. Turn your device off if necessary. Consult a physician or the manufacturer of the medical device before using your device.
- Be aware of the usage limitation when using your device at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Turn off your device if required.
- The use of electronic transmitting devices is forbidden in aircrafts, at gas stations, and in hospitals. Please observe and obey all warning signs and power off your device in these conditions.
- Do not touch the inner antenna area if not necessary; it will affect your device's performance.
- Store your device out of the reach of little children. Your device may cause injury if used as a toy.
- Do not touch the metallic parts of your device when the device is operating as this may cause burns.

Using Your Device

- Please use original accessories or accessories that are authorized. Using any unauthorized accessories may affect

your device's performance, and violate related national regulations about telecom terminals.

- Avoid using your device near or inside metallic structures or establishments that can emit electromagnetic waves; it may influence signal reception.
- Your device is not waterproof. Please keep it dry and store in a shady and cool place.
- Do not use your device immediately after a sudden temperature change. In such case, it will produce moisture inside and outside your device. Wait until it becomes dry.
- Handle your device carefully. Do not drop, bend, or strike it; your device may get damaged.
- Do not attempt to disassemble the device.
- An operating temperature range of -10°C ~ +45°C and humidity range of 5% ~ 95% are recommended.

Battery Handling

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire, as this can cause an explosion.
- Do not disassemble or modify the battery.
- When not using the battery for a long period, remove it from your device and store it in a cool, dry place.
- Never use a damaged or worn-out charger or battery.
- Return the worn-out battery to the provider or put it in an approved recycling container. Do not put it in your regular house trash.

WARNING!

Do not handle or touch the battery if it is damaged.

Limited Warranty

This warranty does not apply to defects or errors in the

Product caused by:

- i. Reasonable abrasion.
 - ii. End User's failure to follow KonnectONE's installation, operation or maintenance instructions or procedures.
 - iii. End User's mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the Product.
 - iv. Modifications or repairs not made by KonnectONE or a KonnectONE-certified individual.
 - v. Power failures, surges, fire, flood, accidents, actions of third parties or other events outside KonnectONE's reasonable control.
 - vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
 - vii. Any other cause beyond the range of normal usage intended for the Product.
- End User shall have no right to reject or return the Product, or receive a refund for the Product from KonnectONE under the above-mentioned situations.
 - This warranty is End User's sole remedy and KonnectONE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

KonnectONE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not KonnectONE had been advised, knew or should have known of the possibility of

such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

Radio Frequency (RF) Energy

This model device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the position required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model device as reported to the FCC when worn on the body, as described in this user guide, is 1.06 W/kg (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this

model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching for: 2APQU-K779HSDL

FCC Compliance

FCC ID: 2APQU-K779HSDL

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


- Consult the dealer or an experienced radio/TV technician for help.



WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

moxee dispositivo hotspot

K779HSDL

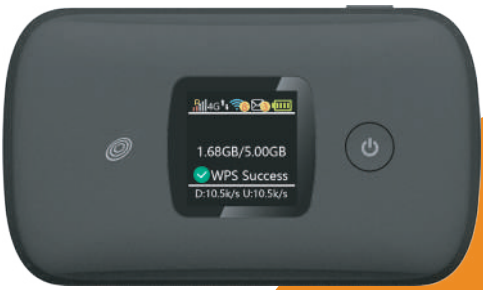

Guía de Inicio


6SLT7790001

Descripción General del Dispositivo



1. Botón de Menú
2. Icono de estado de señal y roaming.
3. Modo de red
4. Icono de señal Wi-Fi
5. Icono de mensaje no leído
6. Icono de la batería
7. Botón de encendido
8. Micro USB
9. Cubierta de la batería.
10. El punto de retirar la cubierta posterior

Diseño de pantalla e iconos

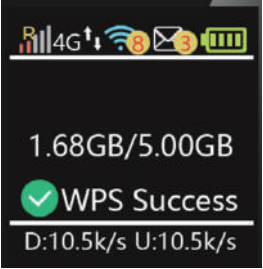


Icono	Descripción
	Icono de estado de señal y roaming
	Icono del modo de red
	Icono de flujo de datos
	Señal de Wi-Fi y número de usuarios de acceso
	El número de mensajes no leídos, su máximo es 100
	Icono de capacidad de la batería, si la capacidad de la batería es inferior al 25%, este icono es rojo.
	Estadísticas, usadas/totales
	Indicador de estado de WPS
	Descargar y cargar la velocidad de los datos

Instalación de la Tarjeta SIM

Siga las instrucciones para instalar la tarjeta SIM.

1. Retire la tarjeta SIM de la tarjeta externa, teniendo cuidado de no tocar los contactos dorados.
2. Apague el dispositivo. Retire la tapa de la batería y retire la batería. Localice la ranura de la tarjeta SIM. Sujete la tarjeta para que la escritura en la parte posterior de la tarjeta quede hacia usted y los contactos dorados estén correctamente alineados con la ranura de la tarjeta SIM.
3. Inserte la tarjeta SIM en la ranura hasta que esté completamente insertada.

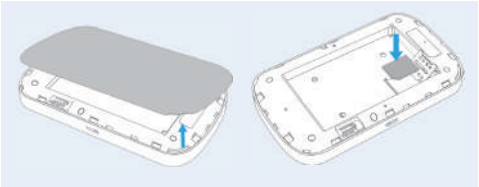

Nota: No doble, raye y evite exponer su tarjeta SIM a electricidad estática, agua o suciedad.

Insertar y cargar la batería

1. Apague el dispositivo. Retire la tapa de la batería y saque la batería.
2. Retire suavemente la tarjeta SIM de la ranura para tarjeta SIM.

- No desmonte ni modifique la batería.

- Cuando no utilice la batería durante un largo período, retírela del dispositivo y guárdela en un lugar fresco y seco.

- Nunca utilice un cargador o batería dañados o desgastados.
- Deseche las baterías usadas en un contenedor de reciclaje aprobado.

¡ADVERTENCIA!
No manipule ni toque la batería si está dañada.

Seguridad

Garantía Limitada

Esta garantía no se aplica a defectos o errores en el Producto causados por:

- i. Abrasión razonable.
- ii. El usuario final no ha seguimiento las instrucciones o procedimientos de instalación, operación o mantenimiento de KonnectONE
- iii. Mal manejo, mal uso, negligencia o instalación, desmontaje, almacenamiento, servicio u operación del Producto por parte del Usuario final.
- iv. Modificaciones o reparaciones no realizadas por KonnectONE o un individuo certificado por KonnectONE.
- v. Fallas de energía, sobretensiones, incendios, inundaciones, accidentes, acciones de terceros u otros eventos fuera del control razonable de KonnectONE.
- vi. Uso de productos de terceros, o uso en conjunto con productos de terceros, siempre que tales defectos son causados por el uso combinado.
- vii. Cualquier otra causa que exceda el rango de uso normal previsto para el Producto.

- Guarde el dispositivo fuera del alcance de los niños pequeños. El dispositivo puede causar lesiones si se usa como juguete.

- No toque las partes metálicas del dispositivo cuando el dispositivo esté funcionando, ya que esto puede causar quemaduras.

Uso de su dispositivo

- Utilice accesorios originales o accesorios autorizados. El uso de accesorios no autorizados puede afectar el rendimiento de su dispositivo y violar las regulaciones nacionales relacionadas con los terminales de telecomunicaciones.
- Evite usar su dispositivo cerca o dentro de estructuras metálicas o establecimientos que puedan emitir ondas electromagnéticas; puede influir en la recepción de la señal.
- El dispositivo no es resistente al agua. Por favor, manténgalo seco y guárdelo en un lugar sombrío y fresco.
- No utilice el dispositivo inmediatamente después de un cambio repentino de temperatura. En tal caso, producirá humedad dentro y fuera de su dispositivo. Espere hasta que se seque.
- Manipule su dispositivo con cuidado. No lo suelte, se doble ni lo golpee; su dispositivo puede dañarse.
- No intente desmontar el dispositivo.
- Se recomienda un intervalo de temperatura de funcionamiento de -10°C - +45°C y un intervalo de humedad del 5% - 95%.

Manejo de la batería

- No cortocircuite la batería, ya que esto puede causar calor y fuego excesivos.
- No almacene la batería en zonas calientes ni la deseche en un incendio, ya que esto puede causar una explosión.

se muestre en la pantalla y el Wi-Fi esté encendido.

2. Busque la red (SSID) llamada **"Moxee TetherXX_2.4G"** o **"Moxee TetherXX_5G"**. Donde XX son los dos últimos dígitos del dispositivo IMEI.

3. Haga clic en Conectar e introduzca la clave WiFi predeterminada que se imprimió en la etiqueta. Puede encontrar la etiqueta cuando retire la cubierta posterior.

Nota: El SSID y la contraseña de Wi-Fi también se mostrarán en la página información wifi de la pantalla del dispositivo cada vez que se encienda el dispositivo.

Configurando su WPS

Si su terminal admite WPS, no tiene que ingresar la contraseña manualmente una vez que se haya configurado su WPS.

Para usar WPS, siga estos pasos:

1. Habilite WPS en la WebUI a través de Configuración-> Inalámbrico-> Configuración de WLAN-> WPS
2. Presione el botón **"Menú"** en el dispositivo para seleccionar la página **"WPS Active"** en la pantalla
3. Presione el botón **"Encendido"** para activar la función WPS. Luego puede habilitar la función WPS en su terminal para conectar el punto de acceso.

Iniciar sesión en el sitio web de Device Management

1. Asegúrese de que su dispositivo esté conectado al Dispositivo mediante Wi-Fi o un cable Micro-USB.

2. Abra el navegador e ingrese <http://192.168.1.1> o <http://device.WebUI> en la barra de direcciones.

3. Ingrese nombre de usuario y contraseña, y haga clic en **"Iniciar sesión"**.

El administrador tiene el derecho de verificar y modificar el permiso de configuración

Nota: El nombre de usuario predeterminado es "admin"; el valor por defecto la contraseña es 12\$XXX (XXX son los últimos tres dígitos de IMEI).

por la FCC es de 1.6 W/kg. Las pruebas de SAR se llevan a cabo utilizando posiciones de funcionamiento estándar aceptadas por la FCC con el dispositivo transmitiendo a su nivel de potencia certificado más alto en todas las bandas de frecuencia probadas. Aunque el SAR se determina en el nivel de potencia certificado más alto, el nivel de SAR real del dispositivo mientras está en funcionamiento puede estar muy por debajo del valor máximo. Esto se debe a que el dispositivo está diseñado para funcionar a múltiples niveles de energía para utilizar sólo la posición necesaria para llegar a la red. En general, cuanto más cerca esté una estación base inalámbrica, menor será la salida de energía. El valor SAR más alto para el modelo de dispositivo, como lo que se informa a la FCC cuando se utiliza cerca del cuerpo, como se describe en esta guía de usuario, es de 1.06 W/kg (Las mediciones realizadas cerca del cuerpo difieren entre los modelos de dispositivo, según las mejoras disponibles y los requisitos de la FCC).

Si bien puede haber diferencias entre los niveles SAR de varios dispositivos y en varias posiciones, todos cumplen con los requisitos del gobierno.

La FCC ha otorgado la Autorización de Equipo para este dispositivo con todos los niveles de SAR reportados evaluados de conformidad con las pautas de exposición de RF de la FCC. La información SAR en este dispositivo está en archivo con la FCC y se puede encontrar en la sección Display Grant de <http://www.fcc.gov/oet/ea/fccid/> después de buscar por 2APQU-K779HSDL.

Cumplimiento de la FCC

FCC ID: 2APQU-K779HSDL

Este dispositivo cumple con la parte 15 de las reglas de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencias dañinas, y (2) este dispositivo debe aceptar cualquier interferencia.

Nota: Puede encontrar el nombre de usuario y la contraseña predeterminados impresos en la etiqueta del dispositivo quitando la tapa posterior y la batería.

Cómo cambiar el SSID y la contraseña

1. Asegúrese de conectar su dispositivo (tableta, pc, etc.) al punto de acceso a través de Wi-Fi o cable Micro-USB. Abra el navegador de su dispositivo e inicie sesión en <http://192.168.1.1> o <http://device.WebUI>

2. Seleccione Configuración-> Inalámbrica-> Configuración de WLAN, luego verá **"Nombre de Wi-Fi (SSID)"** y **"Contraseña"**. Asegúrese de eliminar el nombre y la contraseña anteriores e ingrese el nuevo nombre y contraseña según lo requiera.

3. Seleccione el botón **"Aplicar"**, espere a que la pantalla muestre el mensaje **"Éxito"** y luego cierre sesión.

4. A continuación, debe seleccionar el nuevo SSID e introducir la nueva contraseña para conectar el WiFi.

Restaurar la configuración de fábrica

Si no está seguro de qué configuración de Wi-Fi ha configurado o cambiado, puede restaurar los valores predeterminados de fábrica que vienen con el dispositivo para reconfigurar la configuración de Wi-Fi del dispositivo.

1. Inicie sesión en el sitio web de administración de dispositivos para restaurar la configuración predeterminada de fábrica.

2. Mantenga presionado el botón **"Restablecer"** durante 5 segundos, y Dispositivo se activará nuevamente y se restaurará a la configuración de fábrica.

Nota: el botón Restablecer eliminará todas las configuraciones de Wi-Fi definidas por el usuario del dispositivo y restaurará la configuración de administración y la configuración de Wi-Fi a los valores predeterminados de fábrica.

Precaución: Los cambios o modificaciones no aprobados expresamente por el fabricante podrían anular la autoridad del usuario para operar el equipo.

NOTA: Este equipo ha sido probado y se ha comprobado que cumple con los límites para un dispositivo digital de Clase B, de conformidad con la parte 15 de las Reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas a las comunicaciones radioeléctricas. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, que se pueden determinar apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Reoriente o reubique la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico de radio/TV con experiencia para obtener ayuda



ADVERTENCIA: Cáncer y daño reproductivo
www.P65Warnings.ca.gov.

Nota: Si ingresó un código PIN incorrecto 3 veces, entonces se