


OPERATING MANUAL
INSTRUCCIONES DE SEGURIDAD

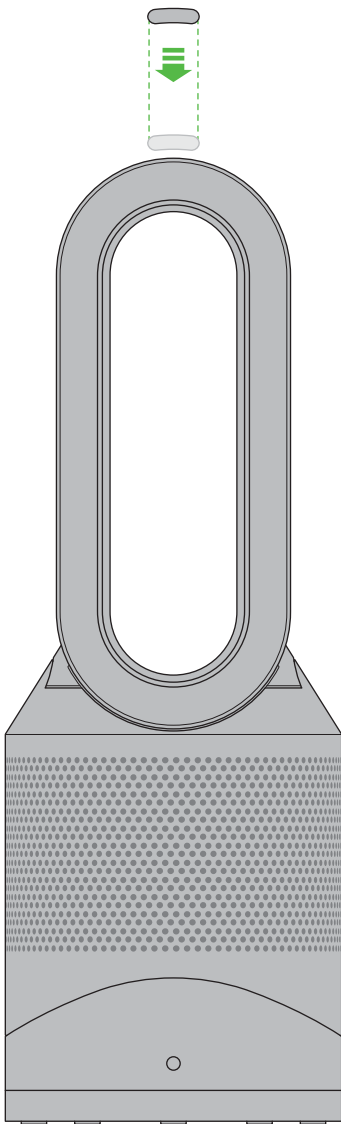

REGISTER TODAY

3 easy ways to
register your 2 year
limited warranty.

REGISTRE HOY

3 maneras fáciles
de registrar su garantía
limitada de 2 años.



IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS MACHINE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE MACHINE

When using an electrical machine, basic precautions should always be followed, including the following:

WARNING

THE FAN AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has a pacemaker or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the machine.

WARNING

These warnings apply to the machine, and also where applicable, to all tools, accessories, chargers or mains adaptors.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. When used in heating mode the machine is hot when in use and for a short period after use. To avoid burns, do not let bare skin touch hot surfaces. When moving the machine hold it by the base, not the air loop amplifier.
4. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains, at least 0.9m (3 feet) from the front of the machine and keep them away from the sides and rear when the machine is plugged in.
5. Use only as described in this Dyson Operating Manual. Do not carry out any maintenance other than that shown in this manual, or advised by the Dyson Helpline. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
6. Ensure machine is fully assembled in line with the instructions before use. Do not dismantle the machine or use without the loop amplifier fitted.
7. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children of less than 3 years should be kept away unless continuously supervised. Children should be supervised to ensure that they do not play with the machine and remote control.
8. Children aged from 3 years and less than 8 years shall only switch on/off the machine provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the machine or perform user maintenance. CAUTION – Some parts of this machine can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
9. This Dyson machine is not intended for use by persons (including children) with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety.
10. Extreme caution is necessary when any machine is used by or near children or infirm persons and whenever it is left operating and unattended.
11. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas or similar indoor locations. Never locate the machine where it may fall into a bath or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
12. This machine has hot parts inside. Do not use it in areas where petrol, paint, or flammable liquids are used or stored or where their vapors are present. Do not use in conjunction with or directly next to an air freshener or similar products.
13. Do not locate directly below a main electricity supply socket.
14. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
15. Do not handle any part of the plug or machine with wet hands.

16. Do not use with a damaged cord or plug. If the supply cord is damaged it must be replaced by Dyson, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.
18. Do not stretch the cord or place the cord under strain. Keep cord away from heated surfaces.
19. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
20. To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow. Do not put any object into the inlet grill or the exhaust opening as this may cause an electric shock or fire, or damage the machine.
21. Do not use on soft surfaces, such as a bed, where openings may become blocked.
-  22. In order to avoid overheating, do not cover the machine.
23. For the best performance, place on the floor, in the corner of the room, at least 1 meter (3 feet) from any wall and facing into the center of the room.
24. Turn off all controls before unplugging. Always unplug heater when not in use.
25. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
26. WARNING: Chemical Burn and Choking Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
27. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.
28. Contact the Dyson Helpline when service or repair is required. Do not disassemble the machine as incorrect reassembly may result in an electric shock or fire.
29. Do not use any cleaning agents or lubricants on this machine. Unplug before cleaning or carrying out any maintenance.
30. Always carry the machine by the base, do not carry it by the loop amplifier.
31. To avoid a tripping hazard wind the cord when not in use.
32. Do not use near furnaces, fireplaces, stoves or other high temperature heat sources.
33. Do not use in conjunction with or directly next to an air freshener or similar products. Do not spray or apply perfumes directly on or near the filter. Keep essential oils and chemicals away from the machine.
34. The machine should not be forcefully turned or oscillated, under any circumstances. This will cause damage to the oscillation mechanism.
35. When removing or replacing the filter, take care to keep your fingers clear between the filter and the purifier base.

IMPORTANT SAFETY FEATURES

For your safety this machine is fitted with automatic cut-out switches that operate if it tips over or overheats. If the switches operate, unplug the machine and allow it to cool. Before restarting, check and clear any blockages and ensure the machine is on a solid level surface.

READ AND SAVE THESE INSTRUCTIONS


THIS DYSON MACHINE IS INTENDED FOR HOUSEHOLD USE ONLY



Do not pull on the cord.



In order to avoid overheating and fire hazard, do not cover the machine.

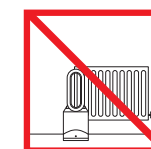

Do not store near heat sources.



Do not carry by the air loop amplifier. The air loop amplifier is not a handle.



Do not use near open flames.



Do not spray scented products such as air freshener or perfume near the filter or the machine.

Each time the heating mode is selected, it conducts a short calibration cycle. Airflow will be automatically controlled during this cycle. Once the calibration cycle is complete, it will revert to the selected airflow speed.

On first use, the machine will default to a temperature 5°F higher than the detected room temperature. Thereafter, the machine will remember the last target temperature set.

Select the desired room temperature. Pressing the large red button on the remote control increases the target temperature by 1°F; the smaller red button on the remote control decreases it by 1°F. The machine will not operate in heater mode unless the target temperature is above the room temperature.

Press and hold the power button to run through the target temperatures.

To set the sleep timer, select the desired time. When time reaches zero, the machine will go into standby mode. To cancel, increase the time until two dashes appear.

When using the sleep timer, the LED display will turn off after 10 seconds of inactivity.

Carefully hold the base and the main body. Tilt the amplifier forward or backward for the required airflow angle.

Remote control

Remote control docks magnetically. Attach the remote control to the top of the machine with the buttons facing down.

To operate, point the remote control toward the front of the base.

Airflow speed control

Press the red thermostat control button until the digital display shows the target room temperature. The power button light will change from blue to red to indicate that you have entered heating mode. The heating symbol will be red while heating and will change to white when the target room temperature has been reached. Once the target room temperature has been reached, the machine will stop heating the air. If the room temperature falls below the target temperature, the machine will start to heat again. The red circle surrounding the power button remains on when the machine is in heater mode. To adjust the airflow speed use the airflow control button.

Press the blue cooling mode button to enter cooling mode. The power button light will change from red to blue to indicate that you have entered cooling mode. To adjust the airflow speed use the airflow control button.

Diffused and focused modes

Diffused mode
Press the wide angle button to change from a personal directed airflow to a whole room airflow.
Heating and cooling modes work in this mode.

Personal heating mode
Press the narrow angle button to change from whole room heating to personal heating.
Heating and cooling modes work in this mode.


Oscillation and airflow speed control


Oscillation control
To start the machine oscillating, press the oscillation control button. To stop the machine oscillating, press it again. The machine will not oscillate when the control buttons are pressed.

Airflow speed control
To change the airflow speed press the airflow control button. The digital display will show the new fan speed. If in heater mode after 3 seconds it will change back to displaying the target temperature.

Clearing blockages

Cleaning

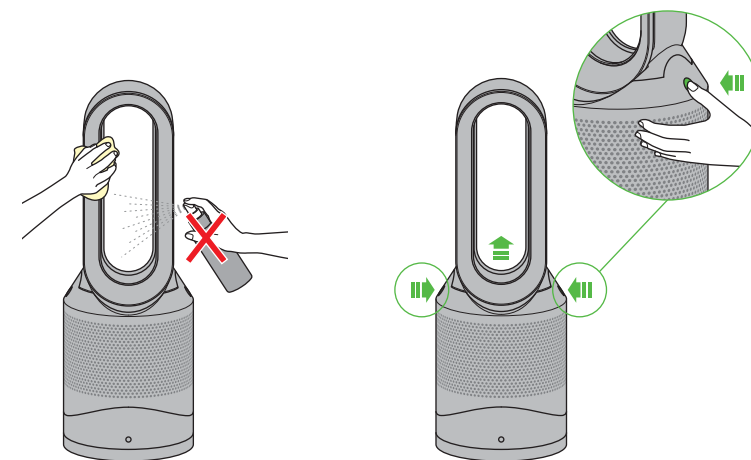


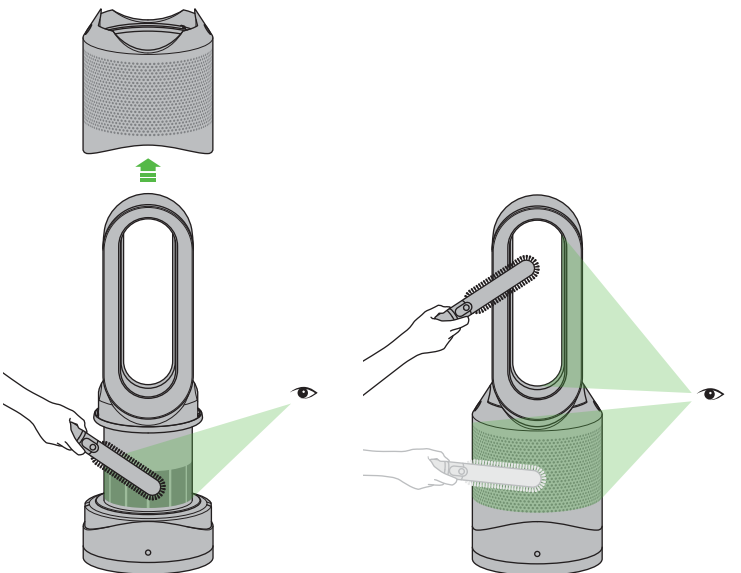

Unplug from the main power source. If the machine has been in use, leave for 1 to 2 hours in order to allow the machine to cool down completely. Look for blockages in the air inlet holes and in the small aperture inside the air loop amplifier. Use a soft brush to remove debris.

Unplug from the main power source. If the machine has been in use, leave for 1 to 2 hours before cleaning to allow the machine to cool completely. Dust may accumulate on the surface of the machine. Wipe dust from the loop, filter unit and other parts with a dry or damp cloth when dust accumulates. Do not use detergents or polishes.


Caution: hot when in use

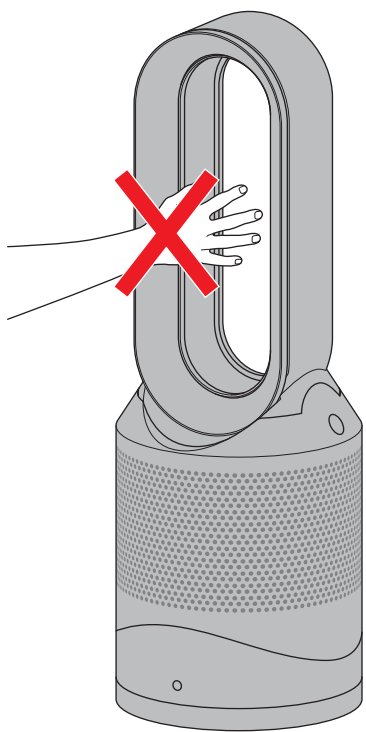

This machine is hot when in use and for a short period after use. Do not let bare skin touch hot surfaces. If children are present, consider positioning the machine out of their reach.

Battery replacement




Battery type CR 2032.

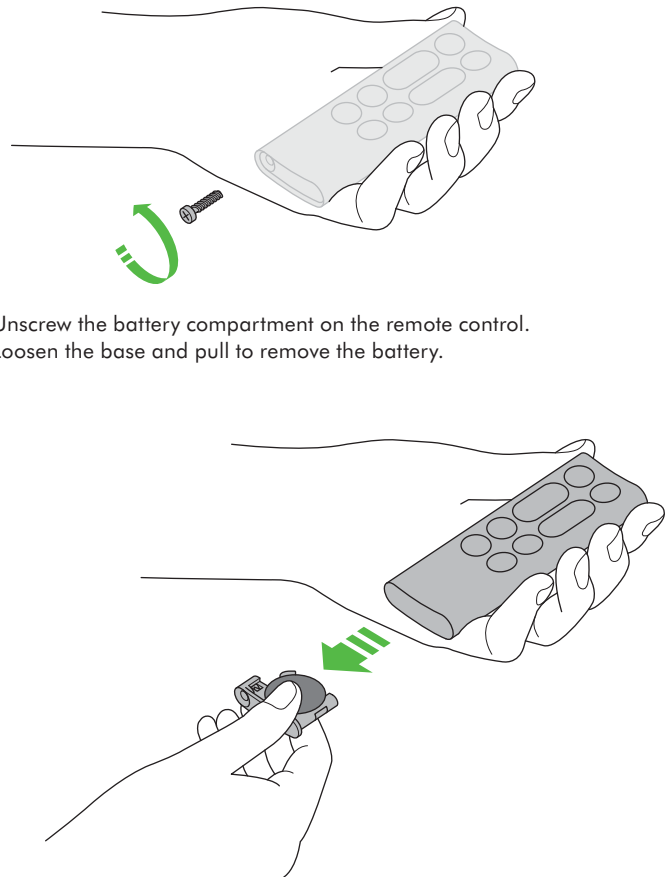





Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.

Replacing the filter unit


When your non-washable filter unit needs replacing the machine will display the pattern shown. To replace the non-washable filter unit, follow these steps. If the machine has been in use, leave for 1 to 2 hours before replacing the filter unit to allow the machine to cool down completely. Your Dyson machine is programmed to remind you to replace the filter unit after 12 months based on 12 hours usage a day. Please note your indicator will activate sooner with more use. The indicator is only a guide. Use in heavily polluted environments may require the filter unit to be replaced more regularly.

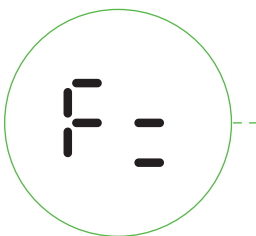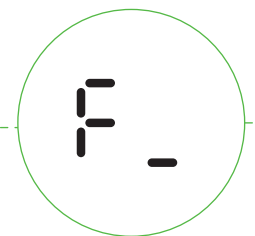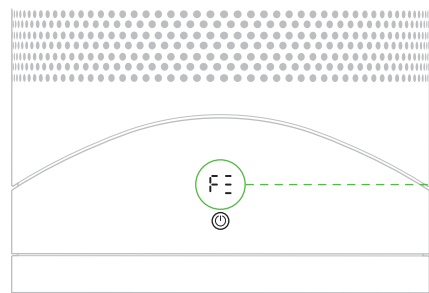

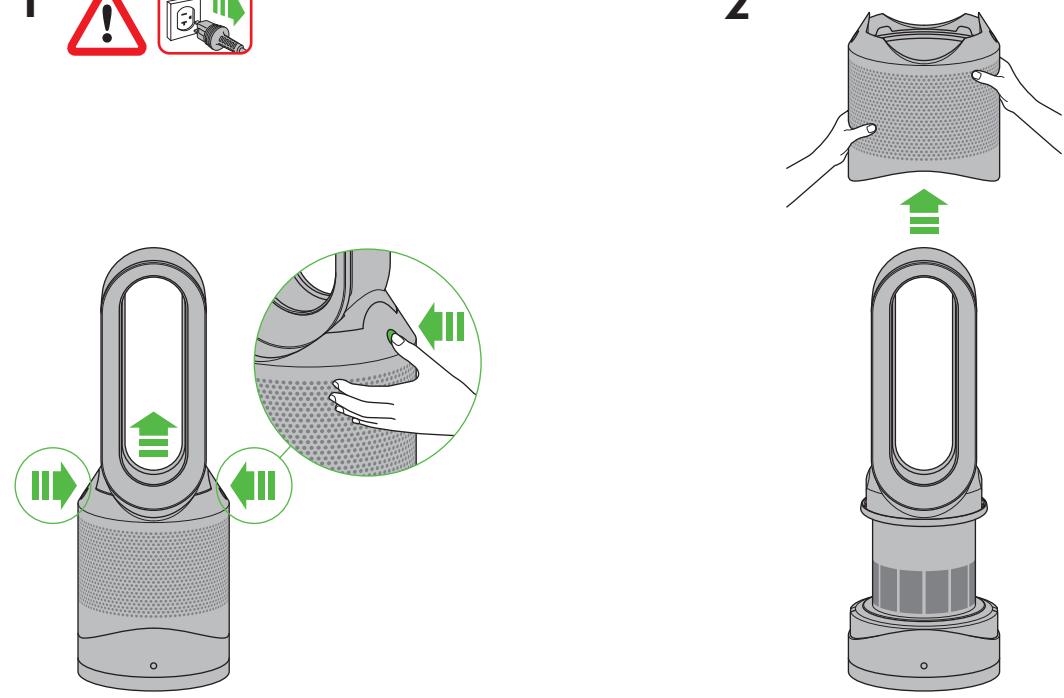


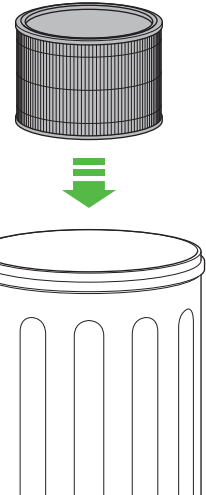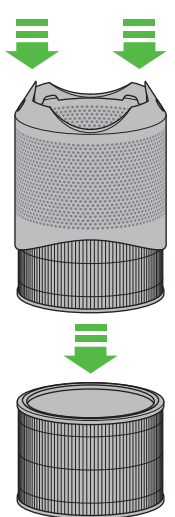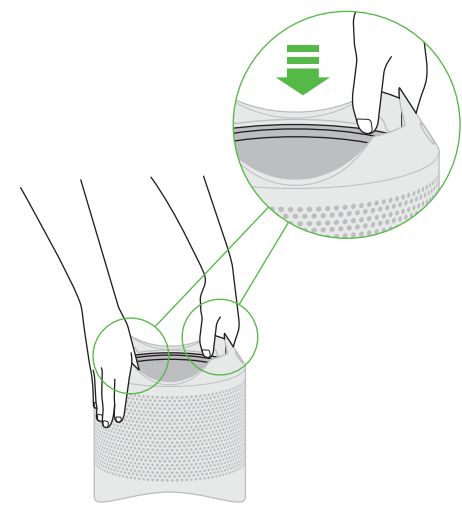


6

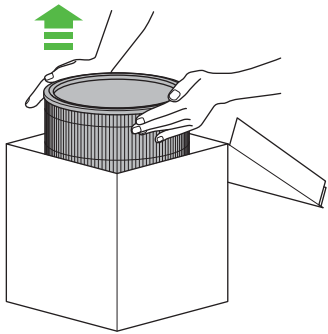


7

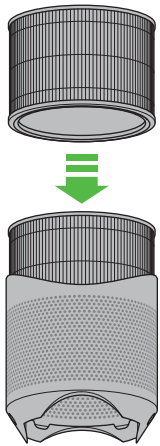


8

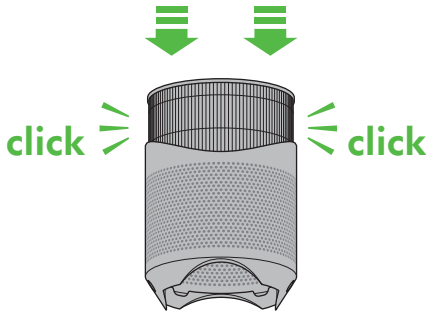



9

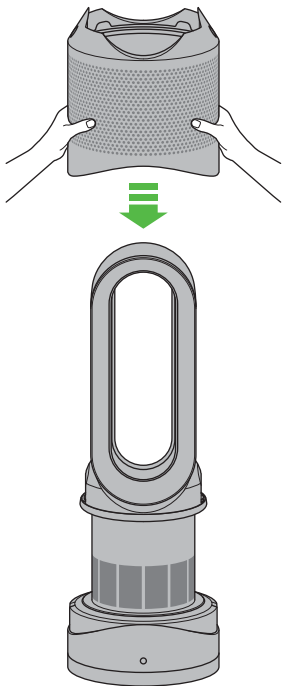

10

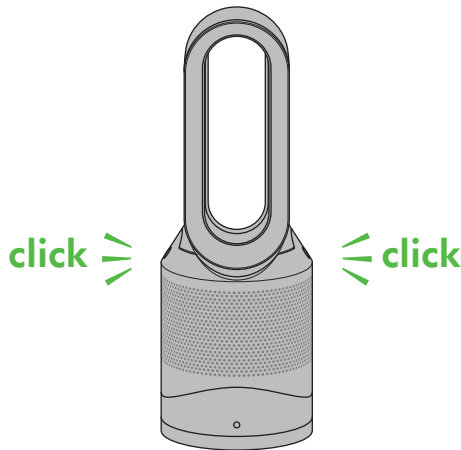

11

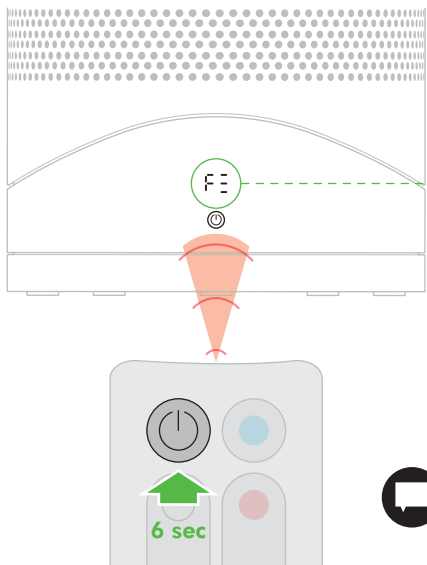

When you have re-assembled your machine, press and hold the 'Standby ON/OFF' button for 6 seconds on the remote control to reset the filter indicator.

A clockwise-rotating loading pattern will be shown on the LED display.

Once the loading pattern is complete, the machine will return to its normal usage.

USING YOUR DYSON MACHINE

PLEASE READ THE "IMPORTANT SAFETY INSTRUCTIONS" IN THIS DYSON OPERATING MANUAL BEFORE PROCEEDING.

LOOKING AFTER YOUR DYSON MACHINE

- Do not carry out any maintenance or repair work other than that shown and described in this Dyson Operating Manual, or advised by the Dyson Helpline.
- Always disconnect the plug from the main outlet before inspecting for problems. If the machine will not operate, first check the main outlet has an electricity supply and that the plug is properly inserted into the outlet.
- If the fuse needs replacing, please check 'User servicing instructions'.

OPERATION

- Ensure machine is fully assembled in line with the instructions before use. Do not dismantle the machine or use without the loop amplifier fitted.
- The machine will not operate in heating mode unless the target temperature is above the room temperature.
- Each time the heating mode is selected, it conducts a short calibration cycle. Airflow will be automatically controlled during this cycle. Once the calibration cycle is complete, it will revert to the selected airflow speed.
- The machine will not oscillate when the control buttons are pressed.
- Do not lubricate any part of this machine.

CONTROL WITHOUT REMOTE

- Press the standby button on the machine to turn ON/OFF.
- Press and hold the standby button on the machine to adjust the target temperature. The target temperature will increase to a maximum before decreasing. If the target temperature is set at 32°F it will switch from heating to cool mode.
- The airflow, diffused and personal heating modes, oscillation function and sleep timer controls cannot be operated without the remote control.

LED DISPLAY

- The LED Display will dim after 10 seconds of use.
- Press any button, other than the standby ON/OFF, to reactivate.
- Do not press standby ON/Off as this will turn the machine off.

SLEEP TIMER

- To set the sleep timer, press and hold the timer button to select the desired time. When time reaches zero, the machine will go into standby mode. To cancel, reduce the time until two dashes appear.
- The LED display will turn off after 10 seconds of inactivity - this is a power saving feature and avoids light interference at night time.
- Press any button, other than the standby ON/OFF, to reactivate.
- When sleep timer is ON, do not press the standby ON/OFF as this will turn the machine off and turn sleep timer off too.

TILT FUNCTION

- Carefully hold the base and the main body. Tilt the amplifier forward or backward for the required airflow angle.

AUTOMATIC CUT-OUT

- For your safety this machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug the machine and allow it to cool. Before restarting the machine check and clear any blockages and ensure the machine is on a solid level surface.
- In heating mode the machine will automatically switch 'OFF' after 9 hours of continuous use and will return to standby mode. To restart the machine, press the power button on either the remote control or the base.

TROUBLESHOOTING

- Fault codes F4, F5, F6: If one of these appears on the display, unplug the machine, wait for 30 to 60 seconds and/or plug the machine into a different socket. If you continue to receive the fault code, please contact the Dyson Helpline.
- Fault codes F2, F3, F7: If one of these appears on the display, please contact the Dyson Helpline.

REPLACEABLE PARTS

BATTERY REPLACEMENT



CAUTION

- Switch 'OFF' and unplug the machine before replacing the batteries.
- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Always replace the screw in the remote control.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Limited functionality is available without the remote control (see 'Control without remote').

NON-WASHABLE FILTER UNIT

- Your filter unit is non-washable and non-recyclable.
- To replace your filter unit follow the steps as shown.
- Failure to replace the filter when prompted may result in changes to product performance and appearance.
- A new filter unit can be purchased at www.dyson.com/filter.

DISPOSAL INFORMATION

- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Your filter unit is non-washable and non-recyclable.
- The battery should be removed from the product before disposal.
- Dispose of the exhausted filter in accordance with local ordinances or regulations.
- California: This product includes a separate remote control device with a coin cell battery. The coin cell battery contains Perchlorates. Special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate

DYSON CUSTOMER CARE

THANK YOU FOR CHOOSING TO BUY A DYSON MACHINE.

After registering your 2 year warranty, your Dyson machine will be covered for parts and labor (excluding filters) for 2 years from the date of purchase, subject to the terms of the warranty. If you have any questions regarding your Dyson machine, visit www.dyson.com for online help, general tips and useful information about Dyson. Alternatively, you can call the Dyson Helpline with your serial number and details of where/when you bought the machine. If your Dyson machine needs a repair, call the Dyson Helpline so we can discuss the available options. If your Dyson machine is under warranty, and it is a covered repair, it will be repaired at no cost.

PLEASE REGISTER AS A DYSON MACHINE OWNER

To help us ensure you receive prompt and efficient service, please register as a Dyson machine owner. There are three ways to do this:

- Online at www.dyson.com
- Telephone the Dyson Helpline, 866-277-9896.
- Complete the enclosed Warranty Form and mail it to us.

This will confirm ownership of your Dyson machine in the event of an insurance loss, and enable us to contact you if necessary.

2 YEAR LIMITED WARRANTY

TERMS AND CONDITIONS OF THE DYSON 2 YEAR LIMITED WARRANTY

WHAT IS COVERED

- Your Dyson machine is warranted against original defects in materials and workmanship for a period of 2 years from the date of purchase, when used for normal domestic purposes in accordance with the Dyson Operating Manual. Please retain your proof of purchase. If you do not have your proof of purchase, your warranty will start 90 days after the date of manufacture, according to Dyson's records. This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period. The replacement of any part of your machine under warranty will not extend the period of warranty. Any parts which are returned and replaced by Dyson will become the property of Dyson. Please call the Dyson Helpline at 866-277-9896 for more information.
- This warranty is only valid if the machine is used in the country in which it was sold.
- This limited warranty is subject to the following terms:

WHAT IS NOT COVERED

- Replacement filters. The machine's filter is not covered by the warranty.
- Damage caused by not carrying out the recommended machine maintenance.
- Dyson shall not be liable for costs, damages or repairs incurred as a result of, due to, or from:
- Purchases of machines from unauthorized dealers.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Dyson Operating Manual.
- Use of the machine other than for normal domestic purposes within the United States, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Dyson Operating Manual.
- Use of parts and accessories other than those produced or recommended by Dyson.
- External sources such as weather, electrical outages or power surges.
- Repairs or alterations carried out by unauthorized parties or agents.
- Clearing blockages from your machine.
- Normal wear and tear (e.g. fuse etc.).
- Damage as a result of use not in accordance with the rating plate.
- Additionally, this limited warranty does not apply to any machine that has had the serial number altered or removed.
- If there is any doubt as to what is covered by the warranty, please contact Dyson.

WARRANTY LIMITATIONS AND EXCLUSIONS

- Any implied warranties relating to your machine including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty. This limitation is not allowed by some States, and so this limitation may not apply to you.
- Your remedy for breach of this warranty is limited to the warranty service described below. Dyson will not be liable for any consequential damages or incidental damages you may incur in connection with your purchase and use of your machine. This limitation is not allowed by some States and so this limitation may not apply to you.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by State.
- This limited warranty is not transferable.

WARRANTY SERVICE

- Please fill out and return the Warranty Form, or register online at www.dyson.com
- Before service can take place, the terms of the warranty require that you contact the Dyson Helpline with your model name/number, serial number, date and place of purchase.
- Please keep your purchase receipt in a safe place to ensure you have this information.
- All work will be coordinated by Dyson or its authorized agents.
- Any replaced defective parts will become the property of Dyson.
- Service under this warranty will not extend the period of this warranty.
- If your fan is not functioning properly, please call the Dyson Helpline at 866-277-9896. Most issues can be rectified over the telephone by our trained Customer Care staff.

WHEN REGISTERING YOUR DYSON MACHINE

- You will need to provide us with basic contact information to register your product and enable us to support your warranty.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations. We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website.privacy.dyson.com

CONFORMITY INFORMATION

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note your serial number for future reference.




This illustration is for example purposes only.





Cada vez que se selecciona el modo de calefacción, se realiza un breve ciclo de calibración. El flujo de aire se controlará en forma automática durante este ciclo. Una vez que finalice el ciclo de calibración, volverá a la velocidad del flujo de aire seleccionada.

En el primer uso, el equipo brindará en forma predeterminada una temperatura 5°F más alta que la temperatura ambiente actual. En usos posteriores, el equipo recordará la última temperatura objetivo que se configuró.

Seleccione la temperatura ambiente que desea. Al presionar el botón rojo grande en el control remoto la temperatura objetivo aumenta 1 °F; el botón rojo pequeño la disminuye 1 °F. La máquina no funcionará en modo calentador salvo que la temperatura objetivo sea superior a la temperatura ambiente.

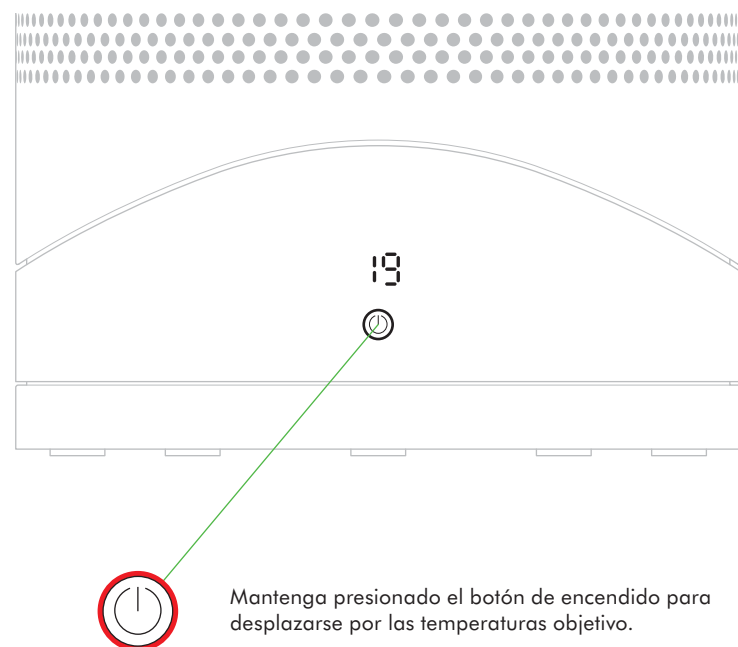


Mantenga presionado el botón de encendido para desplazarse por las temperaturas objetivo.

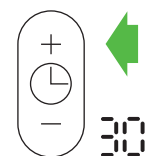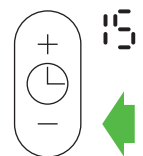


Para configurar el temporizador, seleccione el tiempo deseado. Cuando el tiempo llegue a cero, el máquina pasará al modo en espera. Para cancelar, reduzca el tiempo hasta que aparezcan dos rayas.

Cuando use el temporizador de inactividad, la pantalla LED se apagará después de 10 segundos de inactividad.

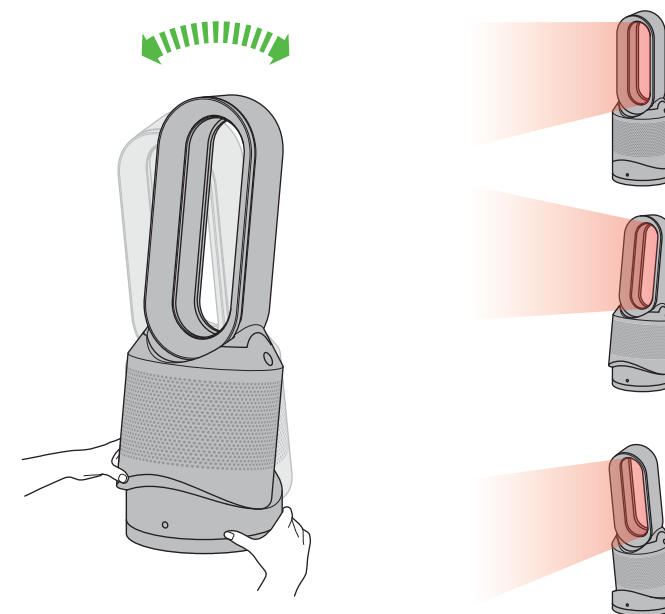

Sujete con cuidado la base y el cuerpo principal. Incline hacia adelante o hacia atrás para obtener el ángulo de flujo del aire que desea.

Modo en espera activado /desactivado

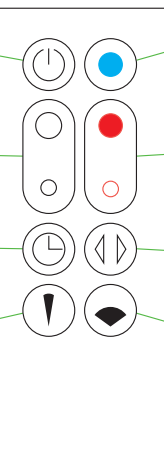

Modo de enfriamiento


Control del termostato

Modo de oscilación activado/desactivado


Modo de difusor

El control remoto se acopla en forma magnética.


Coloque el control remoto en la parte superior del máquina con los botones hacia abajo.

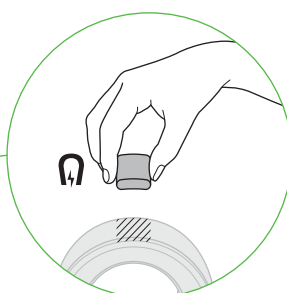


Para utilizar el máquina, apunte el control remoto al frente de la base.




19°

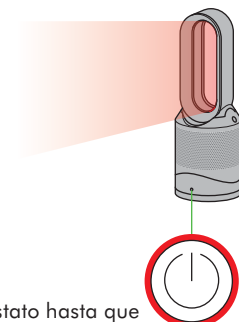


Presione el botón rojo del control del termostato hasta que la pantalla digital muestre la temperatura ambiente objetivo. El color de la luz del botón de encendido cambiará de azul a rojo para indicar que ha pasado al modo de calentamiento. El símbolo de calentamiento permanecerá rojo mientras el aparato esté calentando y cambiará a blanco cuando se haya alcanzado la temperatura ambiente objetivo. Una vez alcanzada la temperatura ambiente objetivo, el aparato dejará de calentar el aire. Si la temperatura ambiente cae por debajo de la temperatura objetivo, el aparato comenzará a calentar de nuevo. El círculo rojo alrededor del botón de encendido permanece encendido cuando el producto está en modo de calentamiento. Para ajustar la velocidad de flujo del aire, utilice el control de flujo del aire.



02

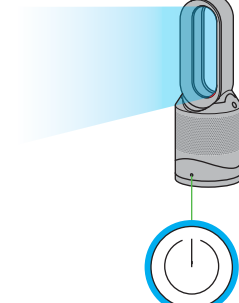


Presione el botón azul de modo de enfriamiento para pasar al modo de enfriamiento. El color de la luz del botón de encendido cambiará de rojo a azul para indicar que ha pasado al modo de enfriamiento. Para ajustar la velocidad de flujo del aire, utilice el control de flujo del aire.

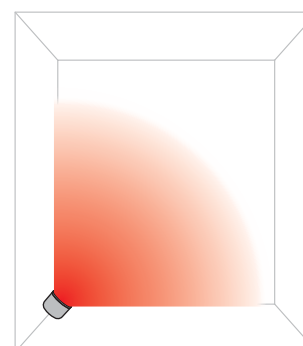

Modo de difusor

Presione el botón del ángulo amplio para cambiar de un flujo de aire dirigido personal a un flujo de aire para toda la habitación.


Los modos de calefacción y enfriamiento funcionan de esa manera.

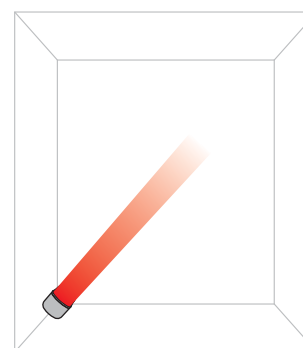

Modo enfocado



Presione el botón del ángulo angosto para cambiar de un flujo de aire para toda la habitación a un flujo de aire personal.

Los modos de calefacción y enfriamiento funcionan de esa manera.

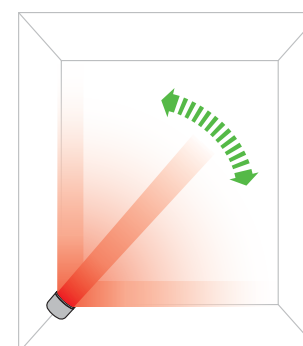


Control de velocidad del flujo de aire

Para cambiar la velocidad del flujo de aire presione el botón del control del flujo de aire. La pantalla digital mostrará la nueva velocidad del ventilador. Si está en modo calentador, después de transcurrir 2.5 segundos cambiará nuevamente para mostrar la temperatura objetivo.

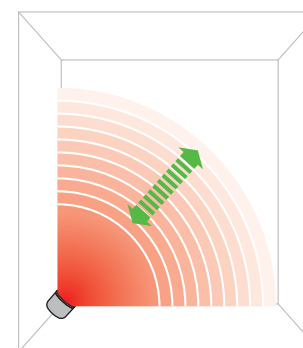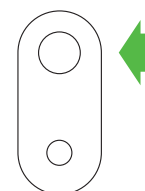


Control de oscilación


Para que el equipo comience a oscilar, presione el botón de control de oscilación. Para detener la oscilación, presione el botón nuevamente. El equipo no oscilará cuando se presionan los botones de control.

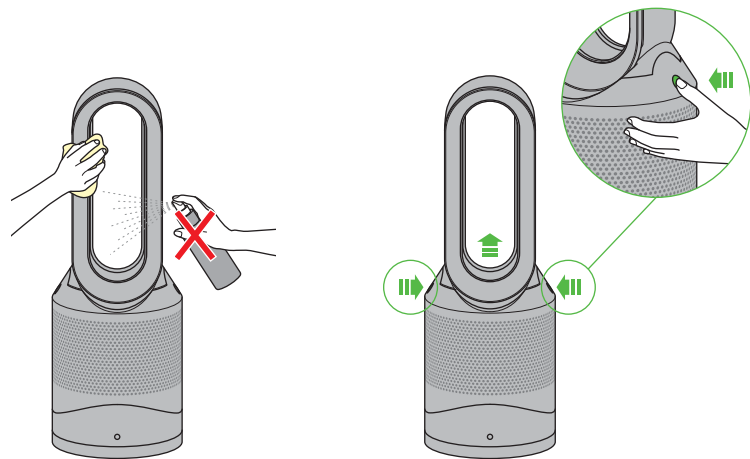

Desconéctela de la fuente principal de energía. Si la máquina ha estado en uso, déjela por 1 o 2 horas para permitirle que se enfríe completamente. Busque obstrucciones en los agujeros de la entrada de aire y en la pequeña abertura ubicada en el bucle amplificador de aire. Utilice un cepillo suave para eliminar cualquier desecho.

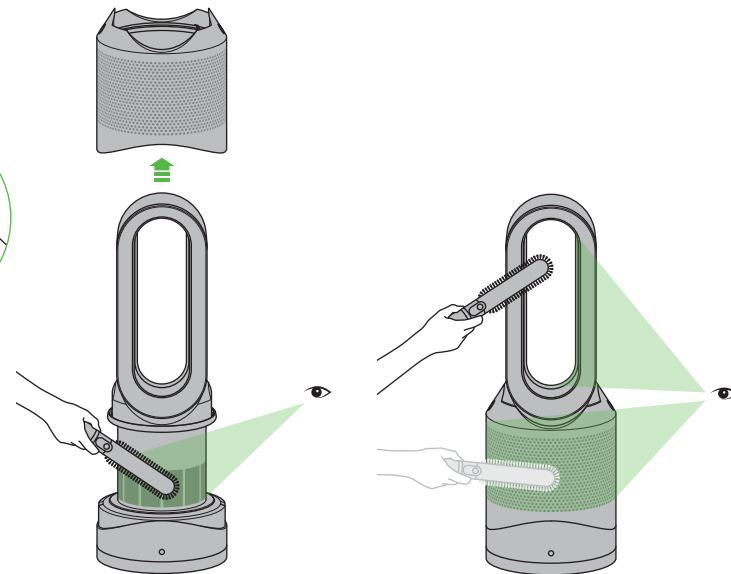


Desconéctelo del suministro de corriente eléctrica. Si el máquina ha estado en uso, déjelo por 1 o 2 horas antes de limpiarlo para permitirle que se enfríe completamente. Se puede acumular polvo en la superficie del máquina. Cuando se acumule polvo, quítelo del bucle, del filtro de la unidad y de otras partes con un paño seco o húmedo. No use detergentes o pulidores.

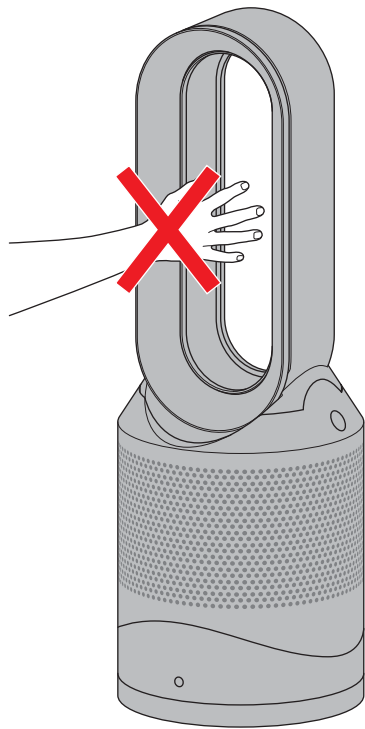


Este máquina se calienta durante el uso y sigue caliente durante un período breve después del uso. No permita que la piel toque las superficies calientes. Si hay niños alrededor, tenga la precaución de colocar el máquina lejos de su alcance.


Batería tipo CR 2032.

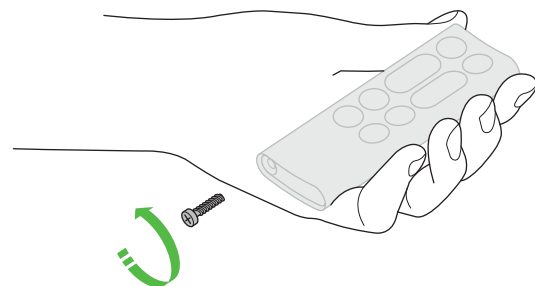


Desatornille el compartimento de la batería del control remoto. Desajuste la base y tire para quitar la batería.

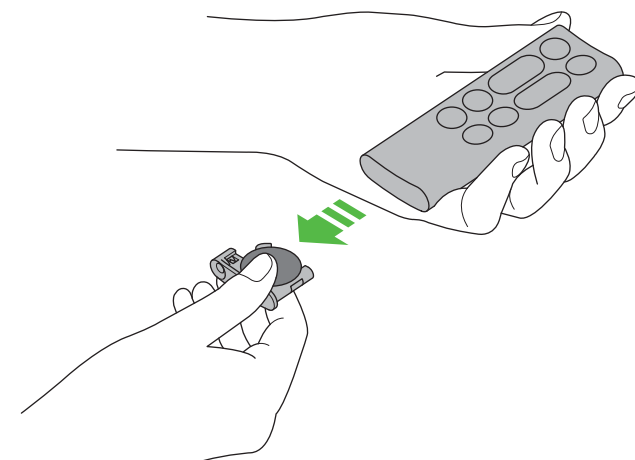

Cuando la unidad de filtro no lavable debe reemplazarse, el máquina exhibirá el patrón que se muestra. Para reemplazar la unidad de filtro no lavable, siga estos pasos. Si el máquina ha estado en uso, déjelo por 1 o 2 horas antes de reemplazar la unidad de filtro para permitirle que se enfríe completamente. Su máquina Dyson está programado para recordarle que reemplace la unidad de filtro después de 12 meses sobre la base de un uso de 12 horas por día. Observe que el indicador se activará antes si hay un mayor uso. El indicador es sólo una guía. El uso en ambientes altamente contaminados puede requerir que la unidad de filtro se reemplace más regularmente.

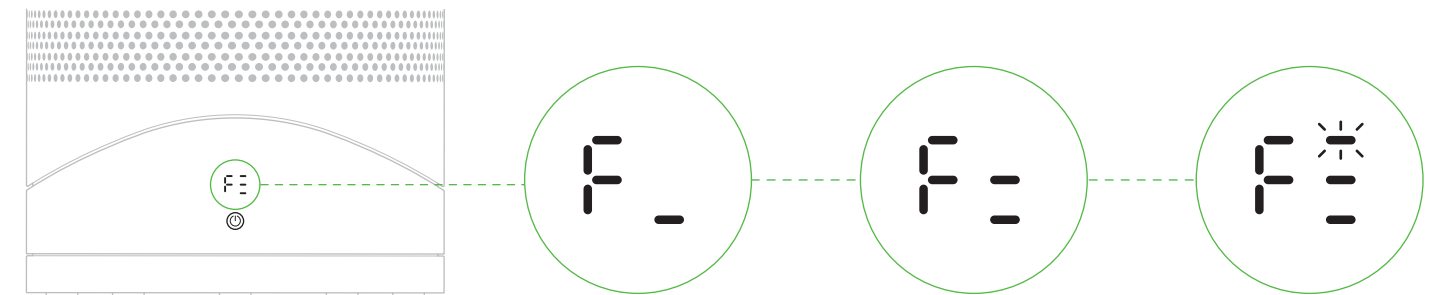


2

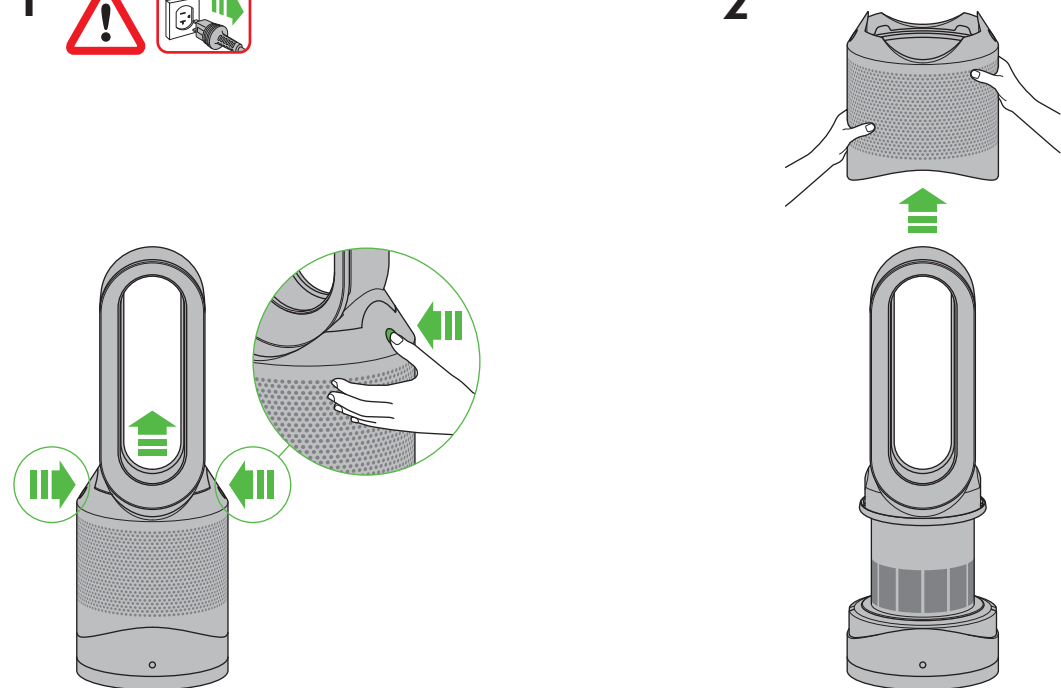


3

4


5

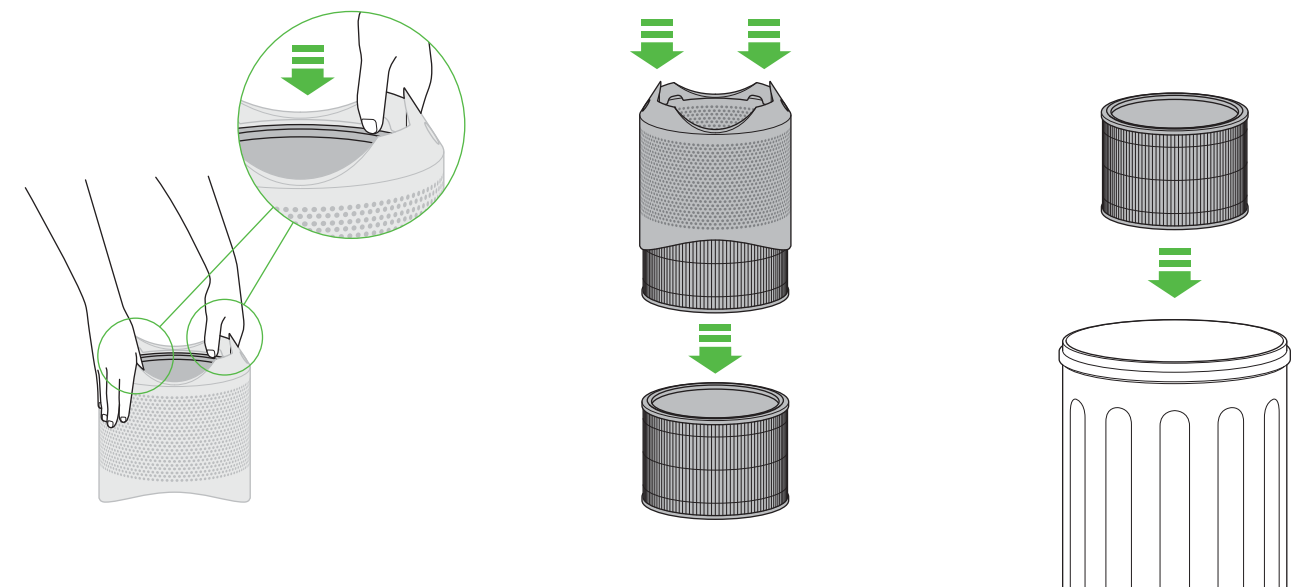


6

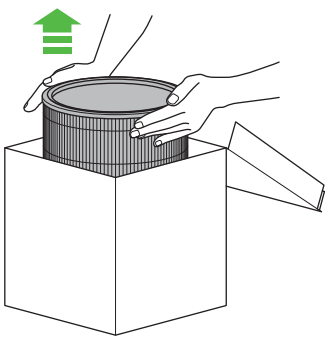


7

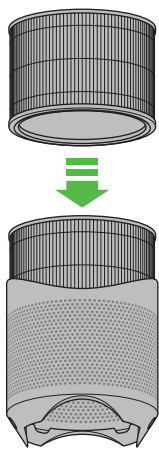


8

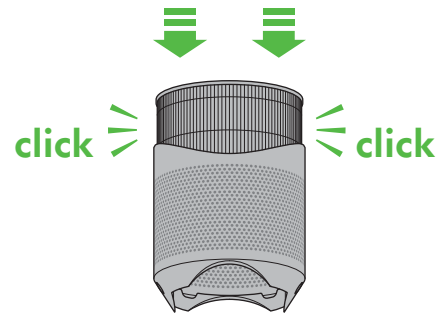

9

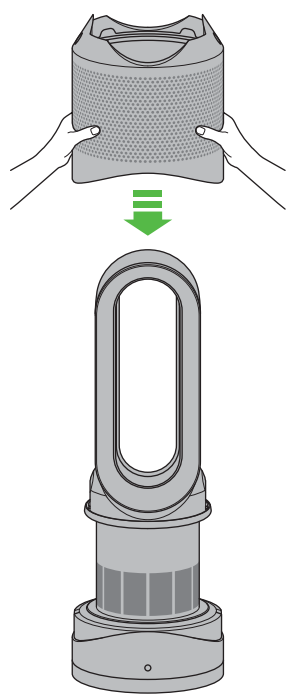


10

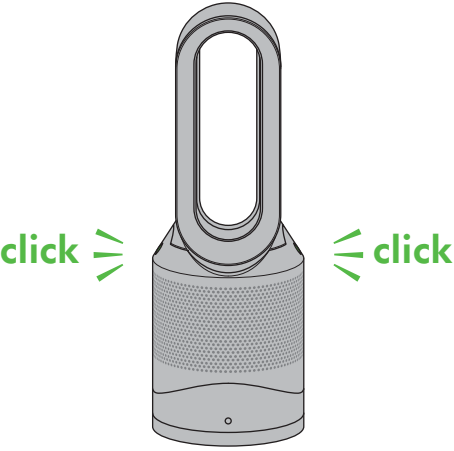

11



Cuando haya vuelto a montar la máquina, mantenga presionado el botón de encendido durante 6 segundos en el control remoto para restablecer el indicador del filtro.

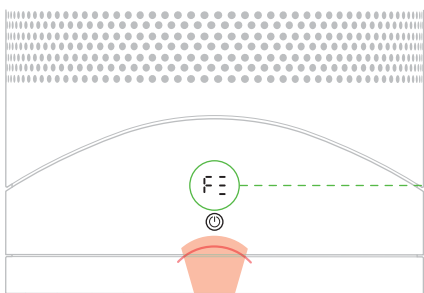

Se mostrará en la pantalla LED un patrón de carga que gira en el sentido de las agujas del reloj.

Una vez que se haya completado el patrón de carga, la máquina volverá a su uso normal.

USO DE SU MÁQUINA DYSON

ANTES DE CONTINUAR, SÍRVASE LEER LAS “INSTRUCCIONES DE SEGURIDAD IMPORTANTES” DE ESTE MANUAL DE FUNCIONAMIENTO DYSON.

CÓMO CUIDAR SU MÁQUINA DYSON

- No realice ningún tipo de mantenimiento o reparaciones que no sean las indicadas y descritas en este Manual de Funcionamiento Dyson o que se le sugiera en el servicio de Atención al Cliente de Dyson.
- Antes de revisar la máquina para detectar cualquier problema, desconecte el enchufe de la red eléctrica. Si el equipo no funciona, verifique primero que la toma de corriente de la red eléctrica tenga suministro y que el enchufe esté colocado correctamente en la toma de corriente.
- Si es necesario cambiar el fusible, consulte las ‘Instrucciones de servicio para el usuario’.

FUNCIONAMIENTO

- Antes de utilizar la máquina, asegúrese de que esté completamente armado según las instrucciones. No desarme la máquina ni lo utilice sin colocar el bucle amplificador.
- El equipo no funcionará a menos que la temperatura objetivo sea superior a la temperatura ambiente.
- Cada vez que se selecciona el modo de calefacción, se realiza un breve ciclo de calibración. El flujo de aire se controlará en forma automática durante este ciclo. Una vez que finalice el ciclo de calibración, volverá a la velocidad del flujo de aire seleccionada.
- El equipo no oscilará si se presionan los botones de control.
- No lubrique ninguna parte de este equipo.

SIN CONTROL REMOTO

- Presione el botón del modo en espera para encender o apagar el aparato.
- Mantenga presionado el botón de modo en espera para ajustar la temperatura objetivo. La temperatura objetivo aumentará hasta un máximo y luego comenzará a disminuir. Si la temperatura objetivo se establece en 32 °F, cambiará de modo de calefacción a modo de enfriamiento.
- El flujo de aire, los modos de calefacción personalizada y de difusor, la función de oscilación y el temporizador no se pueden hacer funcionar sin el control remoto.

PANTALLA LED

- La pantalla LED se atenuará después de 10 segundos de uso.
- Presione cualquier botón, que no sea el de modo de espera (ON/OFF), para reactivar.
- No presione modo de espera (ON/OFF) porque apagará el aparato.

TEMPORIZADOR

- Para configurar el temporizador, mantenga presionado el botón del temporizador para seleccionar el horario deseado. Cuando llegue a cero, el equipo pasará al modo en espera. Para cancelar, reduzca el horario hasta que aparezcan dos rayas.
- La pantalla LED se apagará después de 10 segundos de inactividad, esta es una función de ahorro de energía y evita la interferencia de luz durante la noche.
- Presione cualquier botón, que no sea el de modo de espera (ON/OFF), para reactivar.
- Cuando el temporizador de sueño está encendido (ON), no presione el modo de espera (ON/OFF) porque apagará el aparato y también el temporizador de sueño.

FUNCIÓN DE INCLINACIÓN

- Sujete con cuidado la base y el cuerpo principal. Incline hacia adelante o hacia atrás para obtener el ángulo de flujo del aire que desea.

DESCONEXIÓN AUTOMÁTICA

- Por su seguridad, este equipo cuenta con interruptores de apagado automático que funcionan si el equipo se calienta o sobrecalienta. Si los interruptores comienzan a funcionar, desconecte el equipo y deje que se enfríe. Antes de poner nuevamente en funcionamiento el equipo, inspeccione y elimine cualquier obstrucción y compruebe que esté colocado sobre una superficie firme y nivelada.
- Cuando el equipo está en modo de calefacción se apagará automáticamente después de funcionar durante 9 horas seguidas y se colocará en modo de espera. Para reiniciar el equipo, presione el botón de encendido en el control remoto o en la base.

RESOLUCIÓN DE PROBLEMAS

- Códigos de falla F4, F5, F6: Si alguno de estos códigos aparece en la pantalla, desenchufe el equipo, espere de 30 a 60 segundos o enchufe el equipo en otra toma de corriente. Si continúa recibiendo el código de falla, comuníquese con la línea directa de Asistencia al Cliente de Dyson.
- Códigos de falla F2, F3, F7: Si alguno de estos códigos aparece en la pantalla, comuníquese con la línea directa de Asistencia al Cliente de Dyson.

PIEZAS REEMPLAZABLES

REEMPLAZO DE BATERÍA



PRECAUCIÓN:

- Apague y desenchufe la máquina antes de reemplazar las baterías.
- Desatornille el compartimento de la batería del control remoto. Desajuste la base y tire para quitar la batería.
- No instale al revés ni cortocircuitos las baterías.

- No intente desmontar o cargar las baterías. Mantenga alejado del fuego.
- Reemplace siempre los tornillos en el control remoto.
- Siga las instrucciones del fabricante de las baterías al instalar nuevas baterías (batería tipo CR 2032).
- Sin el control remoto, la funcionalidad es limitada (consulte 'Sin control remoto').

UNIDAD DE FILTRO NO LAVABLE

- La unidad de filtro no es lavable ni reciclable.
- Para reemplazar la unidad de filtro, siga los pasos según se muestra.
- No sustituir el filtro cuando se indica puede dar lugar a cambios en el rendimiento y el aspecto del producto.
- Puede comprar una unidad de filtro nueva en www.dyson.com/filter.

INFORMACIÓN DE ELIMINACIÓN DE RESIDUOS

- Deseche o recicle las baterías de conformidad con las ordenanzas o regulaciones locales.
- Mantenga las baterías usadas lejos de los niños porque aún pueden causar daño si se tragan.
- Los productos Dyson están hechos a partir de materiales reciclables de alta calidad. Recíclelo siempre que sea posible.
- La unidad de filtro no es lavable ni reciclable.
- Antes de desechar el producto, debe quitarle las baterías.
- Deseche el filtro gastado de acuerdo a ordenanzas o regulaciones locales.
- California: Este producto contiene un control remoto separado con una batería de célula de moneda. La batería de célula de moneda contiene Perchlorates. Manejo especial puede aplicar. Vea www.dtsc.ca.gov/hazardouswaste/perchlorate

SERVICIO DE ATENCIÓN AL CLIENTE DYSON

GRACIAS POR ELEGIR COMPRAR UNA MÁQUINA DYSON

Después de registrar la garantía de 2 años, su máquina Dyson tendrá cobertura de repuestos y mano de obra (excluyendo filtros) por 2 años a partir de la fecha de compra, según los términos de la garantía. Si tiene preguntas sobre su máquina Dyson, visite www.dyson.com para obtener ayuda, consejos generales e información útil en línea sobre Dyson. Alternativamente, puede llamar a la Línea directa de asistencia al cliente de Dyson con el número de serie e información de cuándo y dónde compró la máquina. Si su máquina Dyson necesita reparación llame a la Línea de ayuda de Dyson para poder analizar las opciones disponibles. Si su máquina tiene garantía y la reparación necesaria está incluida dentro de esa garantía, se reparará sin costo alguno.

REGÍSTRESE COMO PROPIETARIO DE UNA MÁQUINA DYSON

Para ayudarnos a asegurarle que reciba un servicio rápido y eficaz, por favor regístrese como propietario de una máquina Dyson. Hay tres maneras de hacerlo:

- En línea en www.dyson.com
 - Llamando por teléfono a la Línea de ayuda de Dyson, 866-277-9896.
 - Enviando por correo el formulario de garantía que se anexa, dirigido a nuestra dirección.
- Esto confirmará que la máquina Dyson es de su propiedad en caso de que ocurra una pérdida cubierta por el seguro, y nos permitirá contactarle con usted si fuese necesario.

2 AÑOS DE GARANTÍA LIMITADA

TÉRMINOS Y CONDICIONES DE LA GARANTÍA LIMITADA DE 2 AÑOS DE DYSON

QUÉ ESTÁ CUBIERTO

- Su máquina Dyson está garantizado contra defectos originales de materiales o mano de obra por un período de 2 años a partir de la fecha de compra, cuando se utilice para fines domésticos normales y de acuerdo con el Manual de Instrucciones de Dyson. Conserve su factura de compra. Si no tiene la factura de compra, la validez de la garantía empezará a contar desde los 90 días posteriores a la fecha de fabricación, según los registros de Dyson. Esta garantía proporciona, sin costo para usted, toda la mano de obra y piezas para poner su máquina en perfectas condiciones de funcionamiento durante el plazo de garantía. El reemplazo de cualquier pieza de la máquina con garantía no extiende el período de la garantía. Todas las piezas que se reemplacen o se devuelvan a Dyson se convertirán en propiedad de Dyson. Comuníquese con la Línea Directa de Asistencia al Cliente de Dyson al 866-277-9896 para obtener más información.
- Esta garantía solo tendrá validez si la máquina se utiliza en el país en el que se realizó la venta.
- Esta garantía está sujeta a los siguientes términos:

QUE NO ESTA CUBIERTO

- Filtros de reemplazo. Los filtros de la máquina no están cubiertos por la garantía.
- Daño causado por no llevar a cabo el mantenimiento recomendado de la máquina. Dyson no será responsable de los costos, daños o reparaciones originados como resultado de o debido a lo siguiente:
- Compras de máquinas de un proveedor no autorizado.
- El funcionamiento o manejo descuidado, uso indebido y/o falta de mantenimiento o el uso de forma contraria al Manual de Instrucciones de Dyson.
- El uso de la máquina contrario a los usos domésticos normales dentro de los Estados Unidos de América, por ejemplo, para el uso comercial o alquiler.
- El uso de piezas que no estén contempladas en el Manual de Instrucciones de Dyson.

- El uso de piezas y accesorios que no sean los producidos o recomendados por Dyson.
- Fuentes externas como el clima, las interrupciones eléctricas o las sobrecargas de energía.
- Reparaciones o alteraciones llevadas a cabo por partes o agentes no autorizados.
- Eliminación de obstrucciones en el aparato.
- Desgaste y deterioro normal (p. ej. el fusible, etc.).
- Daño como resultado de un uso que contravenga las indicaciones de la placa de especificaciones.
- Además, esta garantía limitada no se aplica a ningún máquina cuyo número de serie se haya alterado o quitado.
- Si hay alguna duda sobre la cobertura de la garantía, comuníquese con Dyson.

LIMITACIONES Y EXCLUSIONES DE LA GARANTÍA

- Cualquier garantía implícita relacionada con su máquina, incluyendo pero sin limitarse a una garantía de comerciabilidad o garantía de idoneidad para un propósito en particular, se limita a la duración de esta garantía. Esta limitación no está permitida por algunos estados, por lo que esta limitación puede no aplicarse a usted.
- El recurso por el incumplimiento de esta garantía se limita al servicio de garantía que se describe a continuación. Dyson no es responsable por ningún daño indirecto o daño inherente en el que pueda incurrir en conexión con la adquisición y uso de su máquina. Esta limitación no está permitida por algunos estados y, por lo tanto, podría no aplicarse en su caso.
- Esta garantía le otorga derechos legales específicos. Usted podría tembien otros derechos los cuales varían de acuerdo al estado.
- Esta garantía limitada no es transferible.

SERVICIO DE GARANTÍA

- Es posible que haya optado por registrar su máquina de manera automática. Si no fue así, visite Dyson.com para registrar su máquina.
- Antes de llevar a cabo el servicio, los términos de la garantía limitada requieren que usted se ponga en contacto con el servicio de Atención al Cliente Dyson con el nombre o número de su modelo, el número de serie, así como el lugar y la fecha de compra.
- Por favor mantenga la factura de compra en un sitio seguro para asegurarse de tener esta información.
- Todo trabajo será coordinado por Dyson o sus agentes autorizados.
- Cualquier pieza defectuosa que se reponga es propiedad de Dyson.
- El servicio que ampara esta garantía no amplía el período de la misma.
- Si su ventilador no funciona correctamente, comuníquese a la línea de ayuda de Dyson al 866-277-9896. Nuestro personal de Atención al cliente podrá rectificar telefónicamente la mayoría de los problemas.

INFORMACIÓN IMPORTANTE PARA LA PROTECCIÓN DE DATOS

- Cuando registre su producto Dyson:
- Deberá suministrarnos información básica de contacto para registrar su producto y para que podamos respaldar su garantía.
 - Cuando se registre, tendrá la posibilidad de elegir si quiere recibir comunicaciones de nosotros. Si acepta recibir comunicaciones de Dyson, le enviaremos detalles de ofertas especiales y noticias sobre nuestras más recientes innovaciones. Nunca venderemos su información a terceros. Usaremos la información que comparta con nosotros únicamente de la manera que se define en nuestras políticas de privacidad, que están disponibles en nuestro sitio web [privacy.dyson.com](#)

INFORMACIÓN DE CONFORMIDAD

- Se han realizado pruebas en este equipo que han permitido determinar que cumple con los límites establecidos para los dispositivos de Clase B, en base al artículo 15 de las Normas FCC. Estos límites están diseñados para brindar una protección razonable contra interferencias dañinas en instalaciones residenciales. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza según las instrucciones, puede causar interferencia dañina en las comunicaciones radiales. Sin embargo, no existe garantía alguna de que no se produzca interferencia en una instalación en particular. Si este equipo causa interferencias dañinas en la recepción de una radio o un televisor (que se puede determinar mediante el encendido y el apagado del equipo), se recomienda que el usuario trate de corregir la interferencia mediante la aplicación de una o más de las siguientes medidas:
- Cambie la orientación o la ubicación de la antena receptora.
 - Aumente la distancia entre el equipo y el receptor.
 - Conecte el equipo a una toma de corriente que se encuentre en un circuito distinto al que está conectado el receptor.
 - Solicite ayuda al proveedor o a un técnico de radio o TV con experiencia. Los cambios o modificaciones no aprobados por el grupo responsable de las reglas de conformidad pueden invalidar la autoridad del usuario en la operación del máquina.

Anote su número de serie para futuras consultas.



Esta figura es únicamente para mostrar un ejemplo.

Date of purchase | Fecha de compra / /

Serial number | Número de série

Title | Tratamiento

Last name | Apellido

First name | Nombre

Address | Dirección

Zip Code | Código postal

email | email

Telephone | Teléfono

☐

From time to time, we'd like to send you emails about new Dyson technology and services or get your opinion about your purchase. If you'd like us to keep in touch, please check this box.

Ocasionalmente, nos gustaría enviarle correos electrónicos con información sobre los nuevos servicios y tecnologías de Dyson o para saber su opinión sobre su compra. Si desea que nos mantengamos en contacto, seleccione esta casilla.

SMARTPHONE
Download the Dyson Link app and you will be taken through registration as part of the set up.

TELÉFONO INTELIGENTE
Descargue la aplicación del vínculo Dyson y se lo guiará por la registración como parte de la configuración.

ONLINE
Convenient and instant.
www.dyson.com/register

EN LÍNEA
Conveniente y al instante.
www.dyson.com/register

PHONE
Dyson Helpline:
866-277-9896
(Mon-Fri 8am to 8pm CST;
Sat 9am to 6pm CST).

POR TELÉFONO
Servicio de atención al cliente
Dyson: **866-277-9896**
(Lunes a Viernes de
8 a.m. – 8 p.m., hora Centro;
Sábados de 9 a.m. – 6 p.m.,
hora Centro).

MAIL
Complete and return the form in the envelope supplied.

POR CORREO
Complete este formulario y envíelo.

