SPIRALIZER PASTA STYLES

SELECT DESIRED BLADE DISC PRIOR TO ASSEMBLY

THIN

ANGEL HAIR
YELLOW DISC

SPAGHETTI
RED DISC

FETTUCCINE
GREEN DISC

PAPPARDELLE
ORANGE DISC

RIBBON
BLUE DISC

THICK

AUTO-SPIRALIZER™ CONT.

HOW TO SPIRALIZE

1.
Insert food through opening in top of Feed Chute Lid.

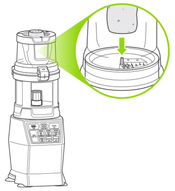

2.
Center food over Blade Disc pin, then press down, securing food on pin.

3.
Place Food Pusher on top of ingredient and press down firmly to hold in place.

4.
Select **START/STOP** to begin Spiralizing. Continue to press firmly with Food Pusher to guide ingredient through Feed Chute.

5.
Spiralizing is complete when Food Pusher sits flat atop Feed Chute Lid. Press **START/STOP** to power off.

After spiralizing an ingredient, all leftover pieces must be removed from the Collecting Bowl and Blade Disc before spiralizing again. To remove feed chute lid press the release button located on side of gray front tab.

WARNING: Handle Blade Discs with care, as the blades are sharp.

WARNING: When using the Auto-Spiralizer, always use the Food Pusher. Never feed ingredients by hand or with other utensils. Failure to use the Food Pusher may cause personal injury.

TEAR HERE

AUTO-iQ BOOST™

Auto-iQ Boost gives you the perfect consistency for all your recipes, from smoothies and juices to sauces and dips. Here's how to get the best results with each program on your Ninja® 4-in-1 Kitchen System. (Certain Auto-iQ® programs are compatible with each container. You are only able to select those programs that are illuminated.)

HOW BOOST WORKS
BOOST defaults to preset settings. Toggle between YES and NO to customize the consistency of your recipe.

BOOST YES:
Use BOOST YES for the finest breakdown or the most even consistency in all recipes.

BOOST NO:
Use BOOST NO for more thickness or texture in all recipes.

CLEANING

Dishwasher: The containers, lids, Blade Discs, and blade assemblies are all dishwasher safe. The lids, Blade Discs, and blade assemblies are top-rack dishwasher safe. Ensure the Blade Discs and blade assemblies are removed from the containers before placing in the dishwasher.

Hand washing: Wash containers, lids, Blade Discs, and blade assemblies in warm, soapy water. When washing the Blade Discs and blade assemblies, use the provided cleaning brush or a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle Blade Discs and blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

WARNING: Handle the Blade Discs and blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

NN210Q

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA

NINJA® 4-IN-1 KITCHEN SYSTEM™ QUICK ASSEMBLY

HIGH-SPEED BLENDER CUP

PARTS

HIGH-SPEED BLENDER CUP

SPOUT LID

PRO EXTRACTOR BLADES® ASSEMBLY

ASSEMBLY

1.
Fill Single-Serve Cup with desired contents.

2.
Screw on Pro Extractor Blades Assembly clockwise until you have a tight seal.



2.
Flip cup upside down and lower it onto base.

3.
Turn cup clockwise to lock in place.

BLEND & ENJOY

Connect base to power source. Display will read "--" once base is properly connected.

1.
Select any of the highlighted programs to begin blending.

2.
When blending is complete, turn cup counterclockwise and lift to remove.

3.
Turn blade assembly counterclockwise to remove.

4.
Place Spout Lid on top of cup and turn clockwise to lock in place.

Once a container is locked onto base, the program buttons compatible with that container will illuminate.

WARNING: Handle the Pro Extractor Blades Assembly with care, as the blades are sharp.

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA® 4-IN-1 KITCHEN SYSTEM™ QUICK ASSEMBLY

TOTAL CRUSHING® BLENDER

PARTS

TOTAL CRUSHING BLENDER PITCHER

PITCHER LID

STACKED BLADE ASSEMBLY

ASSEMBLY

1. Place the Total Crushing Blender Pitcher on base and turn clockwise to lock in place.

2. Holding Stacked Blade Assembly by the top of the shaft, insert it into pitcher.

3. Align arrows on Pitcher Lid and handle, then lower handle to lock in place.

BLEND & ENJOY

Connect base to power source. Display will read "--" once base is properly connected.

1. Select any of the highlighted programs to begin.

2. When blending is complete, turn pitcher counterclockwise and lift to remove.

3. To pour out thinner mixtures, ensure that lid is locked in place, then open Pour Spout.

4. For thicker mixtures, press RELEASE button and lift handle to remove lid, then carefully lift out blade assembly before pouring.

Once a container is locked onto base, the program buttons compatible with that container will illuminate.

WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto the pitcher before pouring. If pouring without lid, carefully remove Stacked Blade Assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**

PRECISION PROCESSOR™

PARTS

PROCESSOR BOWL

BOWL LID

CHOPPING BLADE ASSEMBLY

DOUGH BLADE ASSEMBLY

ASSEMBLY


1. Place Processor Bowl on base and turn clockwise to lock in place.

2. Holding the blade assembly by the top of the shaft, insert it into bowl.

3. Lower Bowl Lid onto bowl and turn clockwise to lock in place.

PROCESS & ENJOY

Connect base to power source. Display will read "--" once base is properly connected.

1. Select any of the highlighted programs to begin.

2. Remove bowl from base by turning it counterclockwise, then lifting it off.


3. Remove lid by pressing the release button on side of front tab, then twisting counterclockwise and lifting up.


4. Remove blade assembly before emptying bowl.

Once a container is locked onto base, the program buttons compatible with that container will illuminate.

WARNING: Chopping Blade Assembly is sharp and not locked in place. Before pouring, carefully remove blade assembly. Failure to do so will result in a risk of laceration. Refer to the Ninja® Owner's Guide for additional information.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**

AUTO-SPIRALIZER™

PARTS

SPIRALIZER BOWL

COLLECTING BOWL

FEED CHUTE LID

FOOD PUSHER

BLADE DISC

ASSEMBLY

Connect base to power source. Display will read "--" once base is properly connected.

1. Place Spiralizer Bowl on base and turn clockwise to lock in place.

2. Place Collecting Bowl inside Spiralizer Bowl, aligning it over gear shaft.

3. Select Blade Disc and fit it onto top of Collecting Bowl. Rim of Blade Disc should sit flush against top of bowl.

4. Place Feed Chute Lid on top of Spiralizer Bowl. Turn lid clockwise, aligning gray tabs on lid with front of bowl.

Once a container is locked onto base, the program buttons compatible with that container will illuminate.

WARNING: Handle Blade Discs with care, as the blades are sharp.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**

TEAR HERE

SPIRALIZER FOOD PREP

FOR BEST RESULTS, PREPARE YOUR INGREDIENTS BEFORE SPIRALIZING



Trim ingredients so they are no taller than the Feed Chute (4"). For butternut squash and potatoes, the max recommended height is 3".

Cut both ends off ingredient to create flat surfaces, helping to secure ingredient to both the Blade Disc pin and Food Pusher.



Cut ingredient so it is no more than 3" wide. Trim evenly from all sides to maintain a roughly cylindrical shape. **DO NOT** cut in half lengthwise.

Peel ingredients with tough skin, like sweet potatoes or butternut squash.

Trim tapered ingredients like carrots to make them more symmetrical. Ingredients must be larger than 1.5" in diameter.