AIR INNOVATIONS®

Portable Telescopic Fan

Available in these colors!

USB TYPE C CABLE INCLUDED

www.Air-Innovations.com

Air Innovations® 2023 Great Innovations, LLC. All Rights Reserved. US & International Patents Pending. Printed In China

AIR INNOVATIONS®

Portable Telescopic Fan

Instruction Manual & Warranty Information

READ AND SAVE THESE INSTRUCTIONS

2 IN 1 TABLE & FLOOR FAN

AMERICAN COMPANY SINCE 2003

Model No. AI-4000

CONTENTS

Important Safeguards/Battery Precautions.....1

Parts and Features/Charging.....2

Set-Up.....3

Operation/Timer.....4

Cleaning/Storage.....4

Warranty.....5

SPECIFICATIONS

MODEL:	AI-4000
SIZE:	8.66 x 8.66 x3.54" (Folded)
DIMENSIONS:	13.5" to 35" (Fan Height Extended)
NET WEIGHT:	2.88Lbs.
BATTERY CAPACITY:	7200mAh
BATTERY RUN TIME:	Low/Med/High (18H/12H/6H)
BATTERY CHARGE TIME:	6H
BATTERY VOLTAGE:	3.7V
INPUT:	5VDC, 2A

1 YEAR WARRANTY

AIR INNOVATIONS®

Sleep Better, Feel Better, Look Better!

Air Innovations® Rechargeable Telescopic Table & Floor Fan comes with a 1-year Manufacturer's Warranty. Please register your warranty online today. Simply scan the QR code below or go to: www.Air-Innovations.com/warranty

Model No. AI-4000

SCAN ME

If this unit should become defective within 1-year from the date of purchase, or if you have any questions or comments regarding replacements for any of our products, please register your warranty and contact us directly at:

Call us toll free at: 844-600-1370
Monday thru Friday 8:30 AM to 5:00 PM EST.
Visit us on the web at: www.Air-Innovations.com/warranty
E-mail us: CLAIMS@AIR-INNOVATIONS.COM
Or write us:
Air Innovations
Attn: Quality Assurance Dept.
2301 SW 145th Ave.
Miramar, FL. 33027 USA

THIS UNIT COMES WITH A 1-YEAR WARRANTY SUBJECT TO THE FOLLOWING CONDITIONS: In the first year, all repairs will be performed free of charge or the unit will be replaced. This warranty is not transferable, it is valid only for the original purchaser. This warranty will be voided if the unit is subjected to unauthorized repair or impact damage. If you have any questions please call toll free: 844-600-1370. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

OPERATION

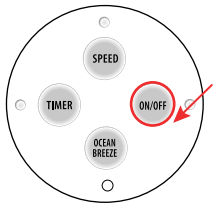

Press **ON/OFF** to power the fan.

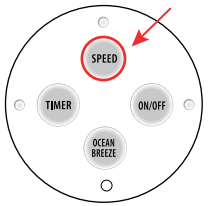

Press **SPEED** once for low, twice for medium,and three times for high. Press again to return the fan to low.

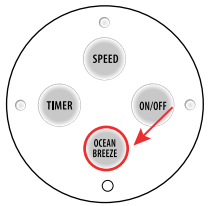

The **OCEAN BREEZE** function simulates a gentle outdoor wind. Press once for low-medium, and twice for medium-high speed.

TIMER

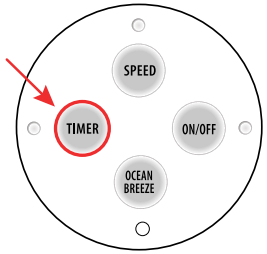

The **TIMER** may be used with the **SPEED** settings or the **OCEAN BREEZE** function.

- Press once for 2 hours, twice for 4 hours and three for 6 hours.
- Light becomes brighter with the longer time setting.
- Press a fourth time to turn the timer off.

CLEANING: Always make sure the device is turned off before cleaning

TO UNLOCK

1. To remove:
Place hand on each side of grill. Using your thumbs, turn grill counterclockwise to unlock.

2. To Clean:
Using a damp cloth, wipe off the dust from the grill and fan blades. **DO NOT immerse the fan in water or any other liquid.**

TO LOCK

3. To Replace:
Place hand on each side of grill. Using your thumbs, turn grill clockwise until it clicks and locks into place.

STORAGE: When done using the fan, return it to its folded position

1. Lower Telescopic arm all the way down.

2. Bring the arm DOWN into the base while pressing down on the top.

3. Fold down the top section of the fan & push to close.

SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

- Read all instructions.
- Keep fan out of reach of children.
- **DO NOT** operate any appliance after it malfunctions, or is dropped, or damaged in any manner.
- **DO NOT** immerse the unit in water or any other liquid.
- **DO NOT** attempt to disassemble the unit; there are no serviceable parts inside.

BATTERY PRECAUTIONS

This fan has a built-in 3.7V 7200mAh lithium battery. When you purchase this fan, the rechargeable batteries are not fully charged. For first time use, charge the batteries for at least 6 hours.

- When using for the first time or after long term storage, fully charge the battery before use.
- Only use the USB-C charging cable provided by the manufacturer to charge the battery.
- **DO NOT** incinerate or mutilate your rechargeable fan; this may cause bursting or release of toxic material.
- If your fan or batteries have been exposed to excessive temperature or leakage occurs from the batteries, stop use of the product.
- Once the rechargeable batteries have reached the end of their life, they cannot be replaced, but you can continue to use the fan with the USB-C charging cable.
- At the end of product life please dispose of the unit following your state and local guide lines for recycling batteries and electrical products.

PARTS & FEATURES

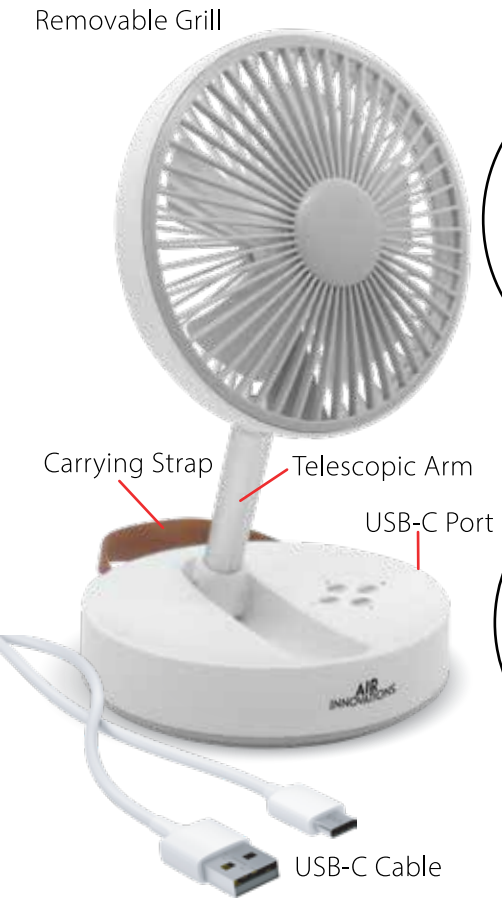

180-Degree Range

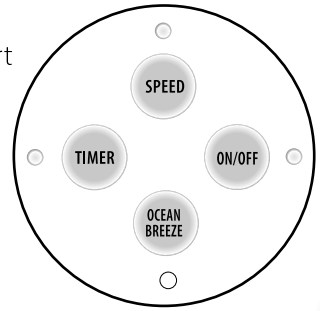

POWER, SPEED, OCEAN BREEZE & TIMER BUTTONS

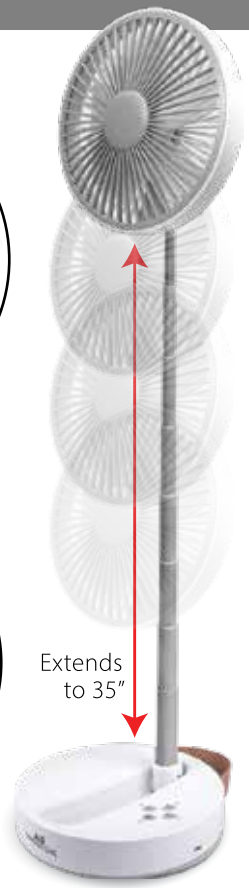

Floor Fan Position

CHARGING

1. Insert the USB-C end into the on the side of the fan.
2. Plug the cable into any USB port or wall adapter. Unit will be fully charged after approximately 6 hours.

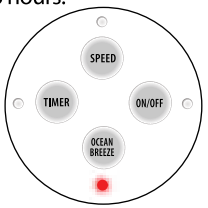

Solid red light indicates that the fan is charging.

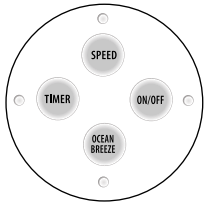

Solid white light indicates a full charge.

USB-C Cable Included

Note: Fan can operate while charging.

TABLE FAN SET-UP

1. Hold the base of the fan down with one hand and lift the top up with the other hand.

2. Grab Fan head and raise arm.

3. Push arm back until fully vertical.

FLOOR FAN SET-UP

1. Hold the base of the fan down with one hand and lift the top up with the other hand.

2. Grab Fan head and raise arm.

3. Push arm back until fully vertical.

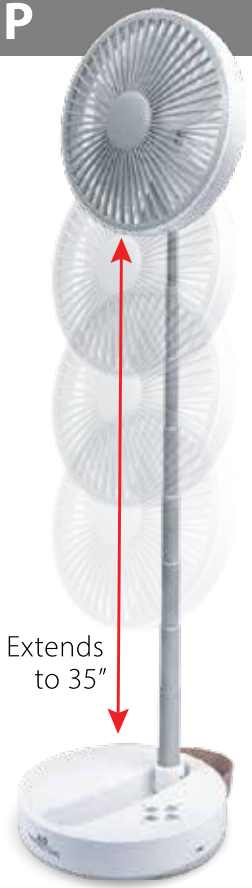

4. Extend the telescopic arm to desired height.