clarisonic

SMART PROFILE™

EASIER

REDESIGNED USER INTERFACE

TURBO BUTTON
Add a power boost to your cleanse.
From any speed, at any time.

MODE/SPEED BUTTON
Use to switch between Smart and Manual mode.
Also used to change speed in Manual mode.

POWER FUNCTION
Turns the device on and off. Also can be used to pause or reset a cleansing cycle.

MANUAL MODE
Total control—Speed 1, 2, 3 or 4. You decide.

SMART MODE
Let the brush head guide your cleanse, no thought necessary (default setting).

BATTERY LIFE INDICATOR
Keeps a close watch on your battery life so you don't get caught in the middle of a cleanse.
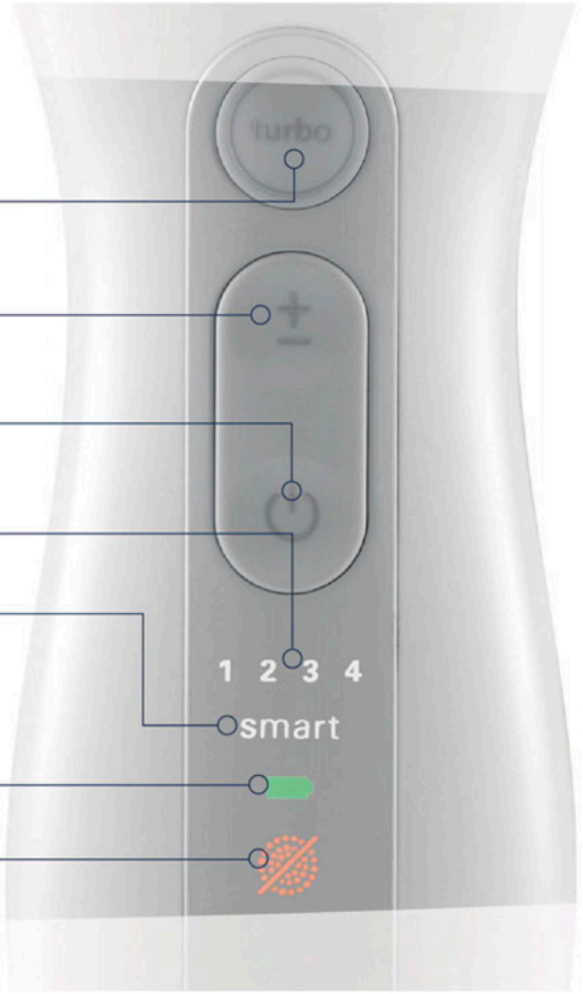
REPLACE BRUSH HEAD INDICATOR
Tracks your brush head use, letting you know when it's time to replace it.