

# INSTRUCTIONS

**TOOLS NEEDED:** Phillips head screwdriver and a 3/8" wrench or socket or adjustable wrench.

1. Start assembly of bench bottom by inserting planking into the slots of one leg (F). Use two large planks (A) in the outside slots and one small plank (B) into the middle slot. (DO NOT use small plank with pre-drilled holes).
2. Next insert small planking with drilled holes (C) into middle slot of bottom part of leg (F).
3. Attach other leg (F) into the planking. Make sure planking is completely inserted into all leg slots. Sit bench upright.
4. Assemble the bench back by inserting the planking in the arms (D), use 2 large planks (A) on the outside slots and 1 small plank (B) in the middle slot. Insert 3 planks into one arm and then slide the other arm on the planks. Make sure that each plank is completely inserted into each arm slot.
5. Attach bench back to bench bottom by aligning the slot at the bottom front of the arm with the knuckle on the top of the leg. (This makes up the hinge of the bench). Make sure the bottom of the arm touches the top of the bench bottom. After these are aligned, insert the plastic hinge pin through the hole on the hinge.
6. Line up pre-drilled 2 X 4 plank holes with the leg pre-drilled holes. Now place two bolts on each leg through the 2 X 4 plank. This might require a small hammer to tap the bolts into place to insure a good tight fit. Attach locking nylon nut that needs to be securely tightened. (DO NOT overtighten).
7. Insert the 2 support braces (E) onto the small planking (C) under the seat of bench. When assembling braces, it is necessary to turn each one so it will lie flat, then push end onto plank. The seat of the bench will sit on the long part of the support. The smaller end of the support will slide in the small 2 X 4 pre-drilled plank.  
(Space 2 braces at about 1/3, 1/3, 1/3 of the width of the bench, as shown).
8. To convert bench into table, pull the back of the bench forward until the armrest sits on the leg assembly.

• 5 Year limited parts & labor warranty • Made in USA • email: [service@premiereproducts.us](mailto:service@premiereproducts.us)





## Parts List / Despiece

- A. 4 Large Planks (2 X 6) / Piezas anchas
- B. 2 Small Planks (2 X 4) / Piezas estrechas
- C. 1 Small Plank with pre-drilled holes (2 X 4) / Pieza estrecha con agujeros
- D. 2-Arms (Left & Right) / Brazos (derecho e izquierdo)
- E. 2- Support Braces / Abrazadera - Soporte
- F. 2-Legs (Left & Right) / Patas (derecha e izquierda)

## Hardware Pack: / Tornilleria:

- 2 Hinge pins & 4-2 1/4 inch bolts with locking nylon nuts. Attach (C)
- / 2 bolsa de tornillos (2 bulones de plástico + 4 tornillos con tuercas de seguridad)

NOTE: Hinge knuckle determines front of bench

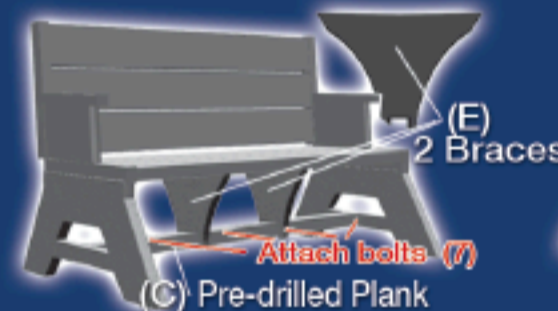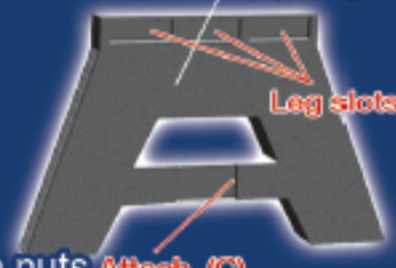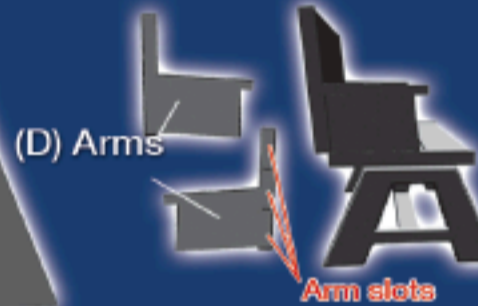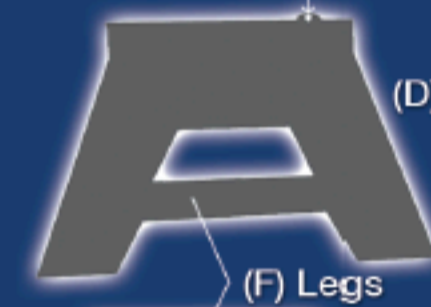

Two benches required for full picnic table.

Customer Service: Service à la clientèle : 1-800-508-2253 Additional parts, including braces, can be purchased separately.

Clean your Convert-A-Bench by using a mild detergent or all-purpose spray cleaner and water. For better care, the Convert-A-Bench should be covered during the off-season and kept out of the weather whenever possible.

To avoid damage, do not drop or misuse this product. Caution: supervision is necessary when converting the bench into a table due to potential injury.

# INSTRUCCIONES

**HERRAMIENTAS NECESARIAS:** Destornillador Phillips y de 3/8" o una llave de tubo o llave ajustable.

Debido al proceso de fabricación se recomienda limpiar cada pieza con un paño antes de empezar el montaje.

1. Empiece el montaje del banco uniendo las piezas dentro de las ranuras de las patas (F). Utilice las 2 piezas anchas (A) para las ranuras de fuera y 1 pieza estrecha (B) para la ranura del medio. No utilice la pieza estrecha con agujeros.
2. Después, inserte la pieza estrecha con agujeros (C) dentro de la ranura de la parte de debajo de la pata (F).
3. Ensamble la otra pata (F) con las piezas. Asegúrese de que las piezas estén bien ensamblados dentro de las ranuras de las patas. Coloque el banco boca arriba para comprobarlo.
4. Monte el respaldo del banco uniendo las piezas con los brazos (D). Utilice 2 piezas anchas (A) para las ranuras de afuera y 1 pieza estrecha (B) para la ranura del medio. Ensamble las 3 piezas dentro de un brazo (D) y después una el otro brazo (D) a las piezas. Asegúrese de que las piezas estén completamente ensamblados dentro de las ranuras de los brazos (D).
5. Para unir el respaldo con el asiento del banco, alinee los agujeros de la parte de debajo de los brazos con los agujeros de la parte de arriba de las patas. Utilice los bulones de plástico para unir y asegurar ambas partes.
6. Alinee la pieza estrecha con agujeros (C) con los agujeros de las patas. Coloque los tornillos en cada pata (ayúdese de un pequeño martillo para ajustar los tornillos) y enrosque la tuerca para asegurar el banco.
7. Inserte las 2 abrazadera-soporte (E) dentro de la pieza estrecha (C) en la sede del banco. Durante el montaje de los apoyos, es necesario convertir cada uno por lo que se acueste, luego empuje final en plancha. La sede del banco se sentará en la parte larga de la ayuda. El extremo más pequeño del soporte se desliza en la pequeña 2 X 4 tablón pre-perforados. (Espacio 2 llaves en alrededor de 1/3, 1/3, 1/3 de la anchura de la bancada, tal como se muestra).
8. Para convertir el banco en la tabla, tire de la parte posterior del banco hacia adelante hasta que el brazo se encuentra en el conjunto de la pata.