



SUREFIT

FURNITURE COVER MEASURING GUIDE

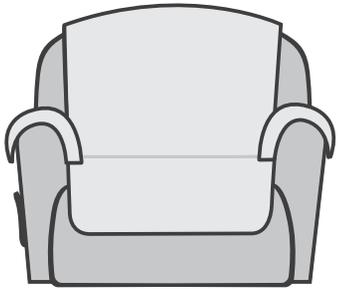


Recliner

Seat and Back Width - 24"
Seat Depth - 34"
Backdrop Length - 48.5"

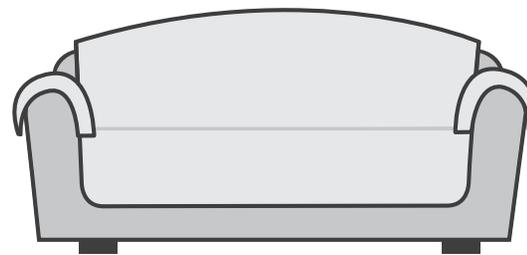


Loveseat

Seat and Back Width - 52"
Seat Depth - 35"
Backdrop Length - 50"

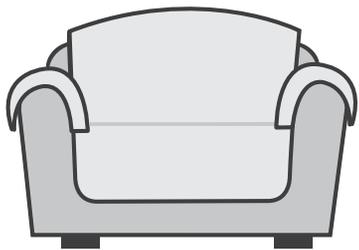

Chair


Seat and Back Width - 26"
Seat Depth - 35"
Backdrop Length - 50"

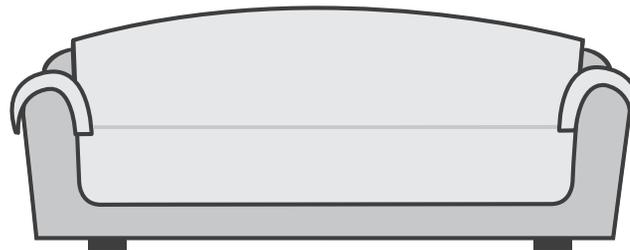


Sofa

Seat and Back Width - 76"
Seat Depth - 35"
Backdrop Length - 50"


 EASY AS 1, 2, 3 TO INSTALL

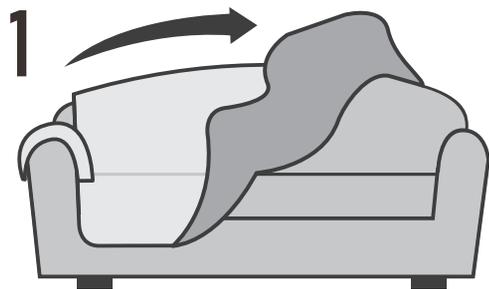

Place cover on top of furniture and tuck in flaps for a secure fit.

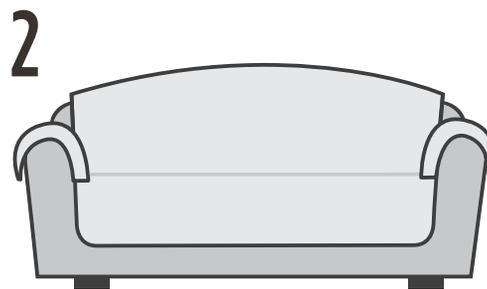

Flatten cover and position arms.

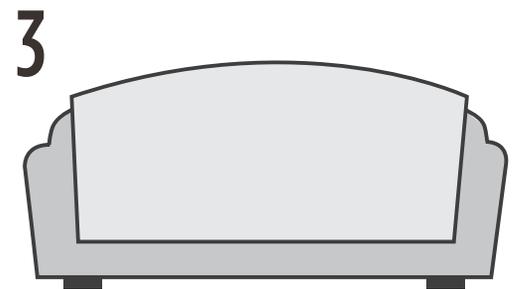

Adjust back drop.