



How to Use the VOLOOM Volumizing Hair Tool



1. Section Hair

- Part hair normally and then section off the top layer that you would like to stay smooth. Clip this layer to the other side.
- Take a thin section of hair alongside your face, 1/2 to 1 inch wide, and clip it off to the side with the top layer of untreated hair.
- These sections will not be VOLOOMed, and will hide the texture created by the iron.



2. VOLOOM Hair

- Section off another layer, underneath upper smooth layer.
- Hold the under-layer straight up from head and clamp VOLOOM for 1-2 seconds near the scalp and release.
- Continue the clamp and release technique two or three more times, moving down the hair shaft. Stop at mid-cheek level.
- Never attempt to pull hair through the VOLOOM.




3. Repeat

- Unclip all the VOLOOMed hair sections.
- Repeat steps 1 and 2 on the other side.
- When finished, brush hair to smooth.

4. Finished Look.

Hair will remain volumized for days without the need for additional styling products.

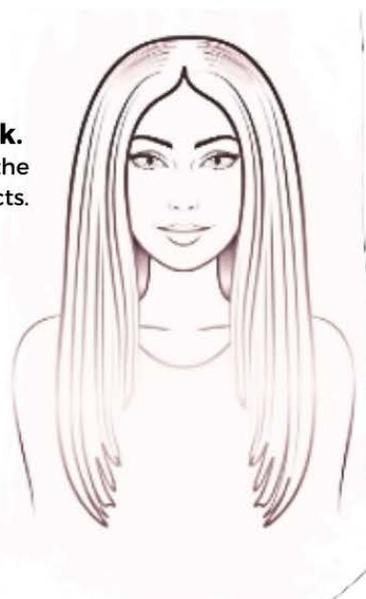

Tips and Tricks

- When you first clamp down on hair using VOLOOM you may notice an imprint, but this will relax and be hidden under the top smooth layer.
- Use the adjustable heat setting to customize the VOLOOM to your individual hair type and further limit heat damage.
- The most effective way to control the volume is to control the size of the sections you use. More numerous, thin sections will yield more volume.
- For less texture, don't VOLOOM as many sections or clamp the plates completely together.
- You can also use VOLOOM to add height, grip and volume to ponytails and up-dos.

Check out our website for our line of low residue hair care products and additional how-to videos. www.VOLOOM.com