

TO USE

Prior to the first use, charge the Clarisonic Mia 2 handle for 24 hours.

- If you use makeup, remove eye makeup by hand.
- Wet your skin and the brush head with warm water.
- Liberally apply cleanser to your skin or to the brush head.
- Push the on/off button to turn on your Mia 2.
- Select desired speed.
- Follow T-TIMER® prompts while gently moving brush head in small circular motions.
- Mia 2 will automatically shut off after one minute

NOTE: Keep brush head flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

FEATURES OF YOUR CLARISONIC *Mia2*™

SPEED SETTINGS

The Mia 2 offers a choice of 2 speeds: low, and normal. To change speeds, press the speed button while the Clarisonic Mia 2 is on. The factory setting is low speed. Speed is indicated visually.


Speed settings for facial cleansing

Speed	Visible indication
Low	lower LED light on
Normal	upper LED light on

CLEANSING TIMER (T-TIMER®)

For even and thorough cleansing of your face, the Mia 2 features a proprietary T-TIMER that pauses momentarily to indicate it is time to move to another part of your face. Your Clarisonic is set to a one-minute setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

To pause the cleansing cycle for up to 30 seconds, simply press the on/off button. The lights around the button fade in and out while in pause mode. To resume, press the on/off button.

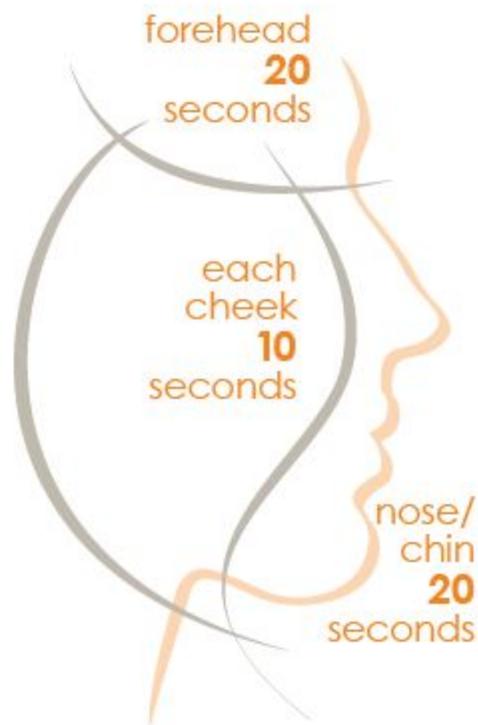

CHARGING

Your Mia 2 is rechargeable with the included pLink charger, which magnetically attaches to the handle as shown. A fully charged Mia 2 gives 24 minutes of use.



Charge Indicators

Action	Indicator
Attach pLink charger	Brush head pulses once
Charge the handle	Charge indicator lights fade in and out while charging Charge indicator lights glow solid when fully charged
Detach pLink charger	Brush head pulses once if partially charged Brush head pulses twice if fully charged
After 24 minutes of use, the handle needs to be charged	Brush head pulses and charge indicator lights flash Allow approximately 18 hours for a full charge

The pLink charger is compatible with 100-240 Volts AC; 50/60 Hz, allowing it to be used worldwide with the appropriate country adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

NOTE: The Mia 2 handle is not compatible with the charging cradle for the full-size Clarisonic models.