• **PLEASE NOTE: YOUR TEST STRIP MAY HAVE A THIN PLASTIC FILM ON TOP OF IT. IF SO, PLEASE REMOVE THAT FILM BEFORE PLACING THE TEST STRIP IN THE SANITIZER.**

• **Place the test strip inside your sanitizer, on the silver side, with the back of the strip facing the silver and the HoMedics logo facing the UV-C LEDs**

• **Be careful when zipping and unzipping the sanitizer to ensure the test strip does not slide around or flip over**
• **Power the sanitizer on and run for a full sanitizing cycle**
• **As soon as the cycle is complete, open the sanitizer and check the test strip**
• **The letters UV CLEAN will have turned purple, indicating the UV-C LEDs worked!**
• **The purple letters will quickly disappear so the test strip can be used again, so make sure you look at the strip immediately after the sanitizing cycle finishes**

***Please see the UV Test Strip video for visual representation.**

FRONT

BACK

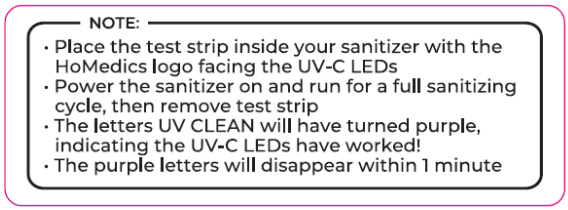

INFORMATION PROVIDED BY HoMEDICS