



**RevitaSpa**<sup>®</sup>  
by **AIR** INNOVATIONS.

**Color-Changing LED  
Aromatherapy Diffuser**



**Instruction Manual and Warranty Information - Read and Save These Instructions.**

# Contents

Safety Instructions .....	1
How It Works / Specifications .....	2
Parts & Contents .....	3
Filling & Operating Instructions.....	4
Weekly Cleaning & Care .....	5
Storage / About White Dust.....	6
Other Great Products.....	7
Warranty .....	8



If you have a respiratory condition, please contact your physician prior to use.

## FCC Statement

### Potential for Radio/Television interference

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

- This product is for household use only; **DO NOT** use outdoors.
- ⚠ **WARNING: NEVER** operate in the presence of explosive or flammable gases.
- Operate diffuser only when fully assembled.
- Close supervision is necessary when any appliance is used near children.
- Always use on an elevated firm, level surface where it is not easily knocked over.
- ⚠ **WARNING: DO NOT** place the appliance directly on the floor, near computers or sensitive electronic equipment.
- Only use Power Adapter and accessories provided by the manufacturer for this product.
- Before use, extend the cord and inspect for any signs of damage.  
⚠ **WARNING: DO NOT** use if cord has been damaged.
- Keep cord away from heated surfaces and arrange cord away from traffic areas and where it will not be tripped on.
- ⚠ **WARNING: DO NOT** block any air outlets or intakes.
- ⚠ **WARNING: NEVER** use the diffuser after a malfunction, after it has been dropped or damaged in any way.
- ⚠ **WARNING: DO NOT** operate if Water Reservoir is empty.
- Always fill Water Reservoir with water before adding essential oils. Only fill the Water Reservoir to the suggested capacity (210ml); do not use hot water in the unit.
- Empty Water Reservoir when not in use.
- Unplug diffuser when not in use, when moving location, or before cleaning.
- ⚠ **WARNING: ALWAYS** unplug the Power Adapter by grasping the adapter itself; never pull on cord. Ensure that hands are dry.
- ⚠ **WARNING:** To protect against electrical shock, **DO NOT** immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
- Always unplug and empty the Water Reservoir when not in use for a long period of time.
- Clean the Water Reservoir every week and perform regular maintenance of the Ultrasonic Nebulizer. ⚠ **WARNING: NEVER** scrape the Ultrasonic Nebulizer with a hard or sharp object.
- ⚠ **WARNING: DO NOT** rinse Base under faucet or immerse the Base in water.

# How It Works

Thank you for choosing RevitaSpa™ Color-Changing LED Aromatherapy Diffuser. This product comes with a 1-YEAR WARRANTY, as your satisfaction is our primary concern.

RevitaSpa™ Color-Changing LED Aromatherapy Diffuser uses Ultrasonic Cool Mist Technology to create humidity instantaneously, working silently to erase the discomforts of dry air. Add essential oil to the diffuser to fill your space with a soothing, aromatic fragrance while color changing lights cycle through the spectrum.

# Specifications

Product Model	Power Consumption	Rating Voltage / Current	Water Capacity	Dimensions	Weight
RS-9851	12W	DC 24V/500mA	210ml	D4.92" x H7.99"	.66 lbs.

# Parts & Contents




Inside Base View

1. Outer Cover
2. Base
3. Power Button
4. Inner Cover
5. Water Reservoir
6. Air Outlet
7. LED Light
8. Ultrasonic Nebulizer
9. Power Adapter

# Filling & Operating Instructions

## Filling the Aromatherapy Diffuser

1. Place the Aromatherapy Diffuser on a flat, level surface.
2. Remove the Outer Cover from the base. Next, remove the Inner Cover. (figure 2)
3. Use ONLY clean, cool water to fill the Water Reservoir. (figure 3)  
⚠ **WARNING: DO NOT** fill the Water Reservoir past the MAX Fill indicator.  
⚠ **WARNING: DO NOT** allow water to enter the Air Outlet as this could damage the Diffuser.
4. Add 5-7 drops of your favorite essential oil to the water. (figure 4) Add more essential oil if a stronger scent is desired.
5. Put the Inner and Outer Covers back on.

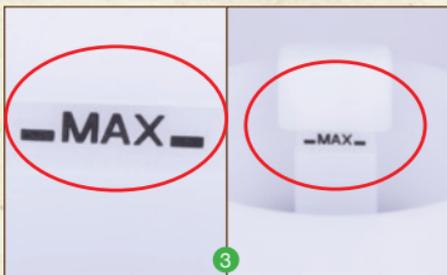

## Operating the Aromatherapy Diffuser

1. Plug the adapter into the diffuser, then plug the adapter into an outlet.
2. **Power Button**
  - Press the Power Button once to start the mist function and turn on the color-changing light.
  - Press the button again to turn off the color-changing light.
  - Pressing the button a third time will turn the diffuser off.
3. **Auto Safety Shut Off** - When your diffuser runs out of water, it will automatically shut off.



# Weekly Cleaning & Care

⚠ **WARNING:** Before cleaning always turn power **OFF** and unplug the unit.



## Base & Surface Cleaning

Gently wipe with a soft damp cloth and a mild detergent; do not use any solvents or aggressive cleaning agents.

⚠ **WARNING: NEVER** scrape the Ultrasonic Nebulizer with a hard or sharp object.

⚠ **WARNING:** When emptying the Water Reservoir on the base, make sure that the water is poured away from the air outlet. If water is poured into the outlet it may damage the aroma diffuser.



## White Dust Cleaning

If mineral deposits “White Dust” are evident around the Ultrasonic Nebulizer, clean with a soft cloth and a small amount of undiluted white vinegar. If necessary, mix a solution of 50% white vinegar and 50% water and fill the Water Reservoir with enough solution to cover the Ultrasonic Nebulizer. Allow it to soak for an hour and then use a cotton swab to gently loosen buildup. Rinse Reservoir with water and wipe with a soft cloth.



# Storage

1. Follow all cleaning instructions prior to storage.
2. Dry all parts, including the inside of the Water Reservoir. ⚠ **WARNING: NEVER** leave water inside the Water Reservoir for several days.
3. Preferably store in its original box, in a dry place away from high temperatures.
4. Follow all cleaning instructions after long periods of storage.

## About White Dust

Use of high-mineral content water may cause a white mineral residue to accumulate on room surfaces near the aroma diffuser. The mineral residue is commonly referred to as “White Dust”. The higher the mineral content (the harder your water is), the greater the potential for White Dust. The White Dust is not caused by a defect in the aroma diffuser, but is due only to minerals suspended in the water from your tap.

⚠ **WARNING:** If you have hard tap water **STOP** using tap water and use **ONLY** filtered or distilled, cold boiled or bottled water to minimize the White Dust residue.



Try These Other Great  
Products For Your Life!



Available at: [www.ForLifeProducts.com](http://www.ForLifeProducts.com), [www.Air-Innovations.com](http://www.Air-Innovations.com), [www.Pursfection.com](http://www.Pursfection.com), [www.RejuvenateProducts.com](http://www.RejuvenateProducts.com)



*Pursfection*



**Rejuvenate**   
Make it **NEW** Again!



# 1-YEAR WARRANTY - RS-9851

RevitaSpa™ Color-Changing LED Aromatherapy Diffuser comes with a 1-year manufacturer's warranty. If this unit should become defective within 1-year from the date of purchase, or if you have any questions or comments or regarding replacements for any of our products, please contact us directly at:

Call us toll free at: 844-600-1370  
Monday thru Friday 8:30 AM to 5:00 PM EST.  
Visit us on the web at: [www.Revita-Spa.com](http://www.Revita-Spa.com)  
e-mail us: [sales@revita-spa.com](mailto:sales@revita-spa.com)

Or write us:  
Air Innovations  
Att: Quality Assurance Dept.  
2301 SW 145<sup>th</sup> Ave.  
Miramar, FL. 33027 USA

Please fill out the warranty card and  
mail back to the above address.  
Or, register your warranty online today.  
Simply go to: <http://www.Air-Innovations.com>

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE \_\_\_\_\_

E-MAIL \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

PLACE OF PURCHASE \_\_\_\_\_

Please check here if you would not like to receive any solicitations from our company

## **THIS UNIT COMES WITH A 1-YEAR WARRANTY SUBJECT TO THE FOLLOWING CONDITIONS:**

In the first year, all repairs will be performed free of charge or the unit will be replaced. This warranty is not transferable, it is valid only for the original purchaser. This warranty will be voided if the unit is subjected to unauthorized repair or impact damage. If you have any questions please call toll free: 844-600-1370.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



RevitaSpa®  
By **AIR** INNOVATIONS.



RevitaSpa<sup>®</sup>  
by AIR INNOVATIONS.

Color-Changing LED  
Aromatherapy Diffuser



Air Innovations<sup>®</sup> © Great Innovations, LLC 2017. All Rights Reserved.  
US & International Patents Pending. Printed In China.