


Lumenology™

4-In-1

Quick Start Guide

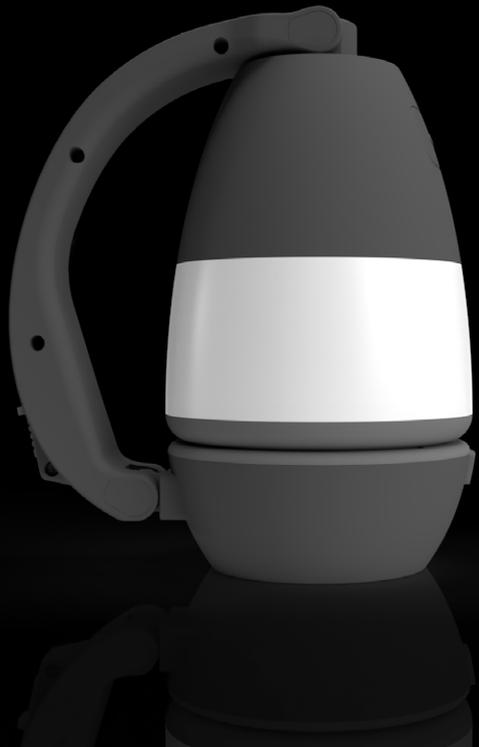


WHAT'S INCLUDED

- (1) Lumenology 4-In-1
- (1) 24" Micro to USB Charging Cable
- (1) User Manual



COMPONENTS

- | | |
|-------------------|-------------------|
| 1. Release Button | 7. Light Switch |
| 2. Lamp Light | 8. Handle |
| 3. Lamp Swivel | 9. Silicone Cover |
| 4. Rotation Joint | 10. USB Output |
| 5. Lantern | 11. Micro Input |
| 6. Flashlight | |

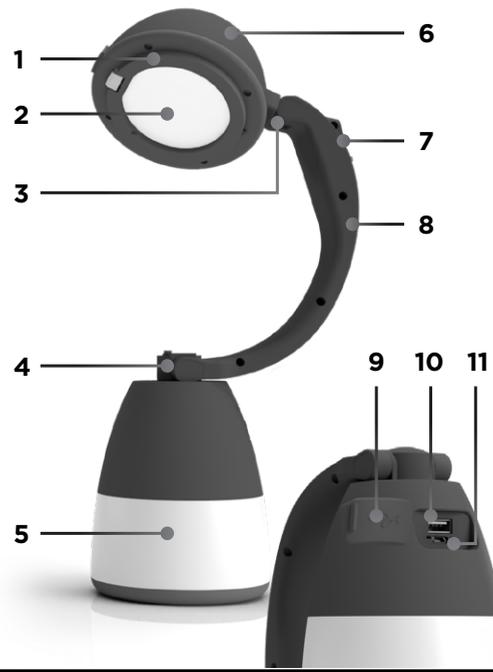

HOW TO USE

Recharging the Battery:

1. Use the included 24" Micro to USB Charging Cable to recharge. The LED Power Indicator will blink red.
2. Once the battery is fully charged, the LED Power Indicator will go solid.

Operating the Light Modes

Use the Light Switch on the Handle to control the light and brightness modes.

Light Modes:

- Off
- Low Brightness
- High Brightness
- Flashlight



SWITCHING LIGHT SOURCES

Flashlight

1. Move the Light Switch to the third gear to use the Flashlight feature.

Lantern

1. Move the Light Switch to the first or second gear to use the Lantern feature.

Desk Lamp

1. Press the Release Button and rotate the middle section away from the Flashlight. Stand the light upright on the base of the Lantern.
2. Move the Light Switch to the first or second gear to use the Desk Lamp feature.
3. Swivel the head of the Desk Lamp to the desired position.

Charging a Mobile Device:

1. Plug a USB cable into the USB-A Output & into a device. The device will begin to charge, and the LED Power Indicator will illuminate green.

TECH SPECS

Model: LMLOGY-4IN1-XXX

Battery: 1,800mAh Lithium

Recharging Time: 3-4 Hours

Battery Life: 5-8 Hours (Using Light)

Micro (Input): 5V/1A

USB-A (Output): 5V/1A

Light Range: 328-656 ft (100-200 m)

Light Brightness: 350 Lumens

Water Resistant: Rated IPX4

Size: 5.13 in x 3.41 in x 6.25 in -12.50 in

Weight: 0.55 lb

SAFETY INFORMATION

By using the Lumenology 4-In-1, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates (“Limitless”) shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the Lumenology 4-In-1. By using the Lumenology 4-In-1, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the Lumenology 4-In-1, you further agree to hold harmless Limitless, (and Limitless’ officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the Lumenology 4-In-1.

WARNING

- The Lumenology 4-In-1 is **NOT** a toy and should be kept away from children.
- Do **NOT** look directly into the light, shine light into your eyes or the eyes of others.
- Do **NOT** use the Lumenology 4-In-1 in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the Lumenology 4-In-1 if it has been damaged and/or modified.
- Do **NOT** subject the Lumenology 4-In-1 to harsh chemicals.
- Do **NOT** submerge the Lumenology 4-In-1 or its accessories in water.
- Do **NOT** insert any foreign objects into the openings or port of the Lumenology 4-In-1.
- Do **NOT** charge the Lumenology 4-In-1 in high humidity conditions.

- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- Do **NOT** attempt to disassemble, repair, or open the Lumenology 4-In-1 or its accessories in any way.
- Batteries should be recycled or disposed of, as per state and local guidelines.

To view the complete user manual, please scan:



SCAN TO LEARN MORE

LIMITLESS™

All rights reserved.
Limitless Lumenology™, Lumenology™, and Limitless™ are trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown.
Accessories sold separately.

LimitlessInnovations.com

Support@LimitlessInnovations.com
(855) 843-4828

Limitless Innovations, Inc.
4800 Metalmaster Way
McHenry, IL 60050

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations