





## User's Manual

Smart Glasses EM105A

### Buttons & Touch Control

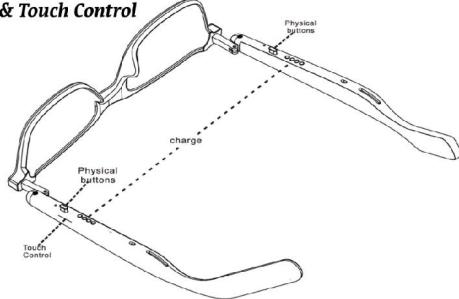


### 1, Power On/Off

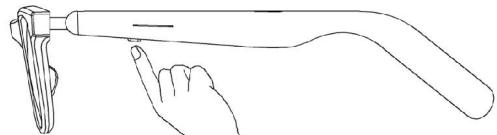

- To Power On - Press and hold both the left and right button simultaneously for 5 seconds.
- Automatically power on when removed from charging
- To Power Off - Press and hold either left or right button for 5 seconds. In the unconnected state the product will automatically power off after 5 minutes of no operation.

### 2, Magnetic Charging

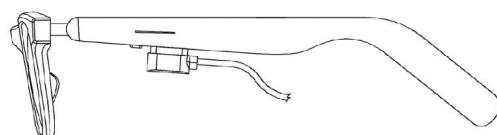


- Charge using the original magnetic charging cable.
- Charging On Light - Red light
- Fully Charged - lights off
- Remove the charging cable after fully charged

### 3, Bluetooth Pairing

- First pairing method: Go to "Settings" and choose a Bluetooth device. To connect successfully, pair the new device and choose "EM105A."
- To clear the pairing record, click the button four times during startup to extend it for 10 seconds.




### 4, Music Controlled by Touch

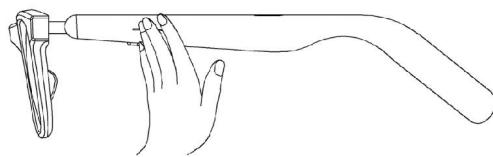


- Next Song - Double tap the right touch control
- Previous Song - Double tap the left touch control
- Pause / Play - Tap the touch control either left or right

### 5, Volume & Voice Assistant by Touch

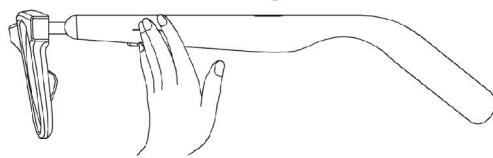

- Volume up - Long hold the left touch control
- Volume down - Long hold the right touch control
- Voice Assistant - Triple tap the left or right touch control

### 6, Answer Call

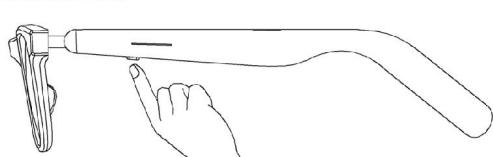

- Answer / End a call - Single press the left or right button
- Reject incoming call - Double press the left or right button