




Quick Set up Guide

Please make sure to read the EyeVac Plus User Manual for all operation details

How to replace liner the bag



1 Lift off the trash bin Lid.

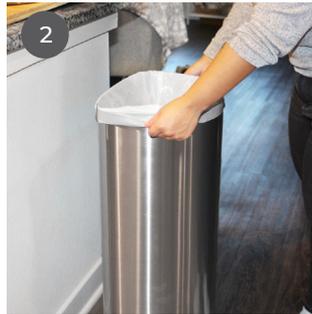

2 Place a 13 Gal liner bag Inside the EyeVac+.



3 Ensure that liner bag's draw string is placed just over the rim. This will prevent the lid connection from being interrupted.

How to open the lid



4 Place the trash bin lid back on.



5 Open lid with by waving hand in front of sensor.



6 The Infrared Sensor activates the motor and the trash bin lid will open. The lid will open and close automatically 5 seconds after the last sensor activation.

Remarks

To keep the trash bin lid open, wave your hand in front of the trash bin lid sensor for 3 seconds. The trash bin Lid will open and remain open. To close lid and return to normal operation, wave your hand in front of the trash bin Lid Sensor for 3 seconds.


If lid is not opening or closing properly a hard reset may be necessary. To perform a hard reset first power off the lid using the power switch in the back of the lid. Then power on to resume normal operation.

Do not push or force the lid up or down



Quick Set up Guide

Please make sure to read the EyeVac+ User Manual for all operation details

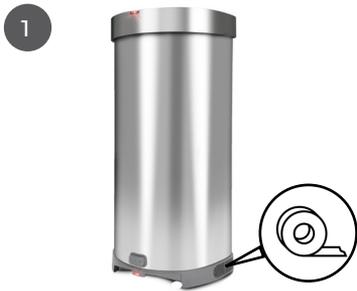

Remove EyeVac+ from packaging and set upright on any non-carpeted flooring. Remove packing tape from Exhaust Filter on the side of the unit and all plastic on outside body of the Bin.



Plug in your EyeVac+ in the desired location.



Press POWER Button to indicate either MANUAL or AUTO Modes

Press the Vacuum POWER Button (located on the bottom of the unit) to turn ON. EyeVac+ will be in AUTO Mode. Press the Vacuum POWER Button again to select MANUAL Mode



When ready, simply sweep debris towards the Inlet. If in AUTO Mode the Vacuum Sensors will detect the sweeping motion. If in MANUAL Mode simply tap the Manual Activation Button and the Vacuum will activate.

Remarks

Please make sure to read your EyeVac User Manual.

Do not throw away the Canister Lid.

Ensure that all filters are properly locked and flush in their correct positions.

For assistance please visit Eyevac.com/connect and fill out a Service Request Form and our Customer Service Team will resolve the issue as soon as possible.