

Step 1

Download the Ring app



The Ring app will walk you through the process outlined in this manual, but in case you like reading small print we've also included this manual.

Visit: ring.com/app



Visit the online setup guide for extra help

We have an online guide with videos and tutorials all about setting up and using your Ring Video Doorbell.

Visit: ring.com/setup

2

Step 2


Say "Hello" to the back of your Ring Doorbell

Setup Button – The orange button is the **setup button**. You'll be instructed to push it during the in-app setup.

Charging Port – If you're not wiring your Ring Doorbell, you'll need to charge it periodically by plugging the provided orange cable into the **charging port**.

For more, visit: ring.com/charging

Setup Button Charging Port

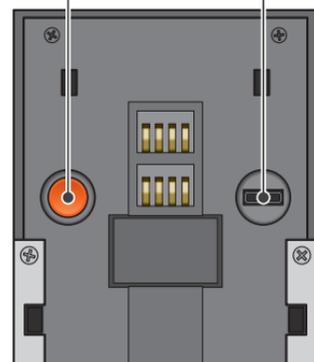

3

Step 3

Perform the in-app setup

The Ring app will walk you through this process.

Download the Ring app by visiting ring.com/app



Select the plus sign in the Ring app to set up a new device, and when prompted, select **Video Doorbell**.

Perform setup inside near your router. **You'll need your network name and Wi-Fi password.**

4

Step 4

Push the Front Button to Run a Test

After setup, push the front button on your Ring Doorbell **indoors near your router** to see video from your Ring Doorbell in the Ring app. **Then test your Ring Doorbell outside.**



If video quality from your Ring Doorbell is not as good **outdoors** as it was **indoors**, you may need to move your router closer to your door, or invest in an extender.

Learn more at: ring.com/extender

5

Step 5

Remove Your Existing Doorbell (optional)

If you're replacing a wired doorbell, first turn off the power at the breaker. Then remove your doorbell from the wall, and disconnect the wires.



6

Step 6

Install the Mounting Bracket

Take everything that came in the box, along with a power drill if you're installing on **stucco, brick or concrete**, to the spot where you'll be installing your Ring Doorbell.




Snap the provided level onto the mounting bracket and use it to help position the bracket.

Then **remove the orange tape**, and use the mounting bracket as a template to mark the four corner holes.

7

Installing the Mounting Bracket (continued)

On **stucco, brick, or concrete** install the anchors using the provided drill bit and a power drill before installing the mounting bracket.

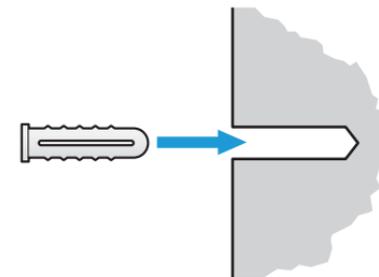

On **wood or siding**, you can skip this part, and screw the bracket directly into your wall.

If you have a smaller drill bit, it may help to use this bit to drill pilot holes.

8




ring
Video Doorbell
Setup & Installation



Installing the Mounting Bracket (continued)

Drive the screws into the anchors, or directly into your wall until they are flush with the mounting bracket, and the bracket is flat against your wall.

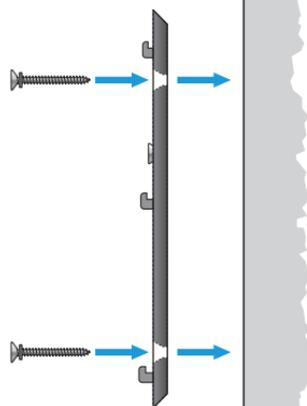

i If your wall is not completely flat, be careful not to screw the bracket in so tightly that it bends.

9

Step 7

Connect the Wires (optional)

Connect the wires coming out of your wall to the screws on the bracket. Note that **it doesn't matter which wire connects to which screw.**



i The wiring must be connected to a transformer with a voltage of **8VAC – 24VAC** and an internal doorbell or resistor.

DC transformers and (therefore) most intercoms are not supported.

10



Diode not sold with doorbell.


For more information please visit www.ring.com/help

11

Step 8

Attach Your Doorbell to the Bracket

Line up the holes in your Ring Doorbell with the slots on the bracket. **Push firmly towards the wall and then down until you feel a click.**

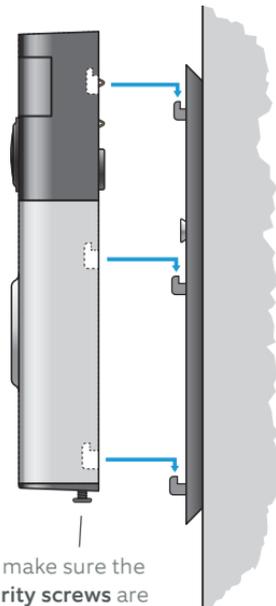

First make sure the security screws are loose.


12

Step 9

Secure Your Ring Doorbell

Use the star-shaped end of your Ring screwdriver to tighten the **security screws** on the bottom of your Ring Doorbell.

Then restore power at the breaker.

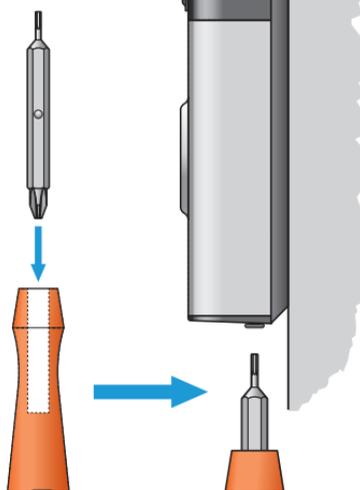

13

Ring Light Patterns


The front light on your Ring Doorbell uses a number of patterns to communicate messages.

Here are some common ones:

Wired		White Solid
Front Button Pushed		Blue Spinning
Ring Speaker Enabled		Blue Solid
Charging		Charge Percentage
In Setup Mode		White Spinning
Updating software		White Flashing

14

Answering Your Door

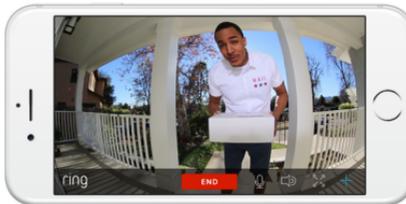

When someone is at your door, you can perform the following actions:

- Disable/enable your microphone
- Mute/unmute your speaker
- Zoom in/out
- Access the Ring Plus menu

Turning alerts on or off:

You can toggle alerts for Rings or Motions on or off in the Ring app.



15

For additional help, visit: ring.com/help

We're available 7 days a week at: [US 1.800.656.1918](tel:18006561918) • help@ring.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For best results, use type Li-Ion batteries. Install only new batteries of the same type in your product. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak. Do not mix old and new batteries. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries. Do not dispose of batteries in fire. Batteries should be recycled or disposed of as per state and local guidelines.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hereby, Bot Home Automation, declares that this consumer electronic is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at www.ring.com/DoC.pdf.

Protect the device from direct sunlight. Install the device at dry locations and protect it against rain and humidity. The device may not get contact to salt water or other conductive liquids. The device must be charged only within a building in a dry state.

© 2016 Bot Home Automation, Inc. RING, ALWAYS HOME, and CHIME are trademarks of Bot Home Automation, Inc.

1523 26th St.
Santa Monica, CA
90404

16